

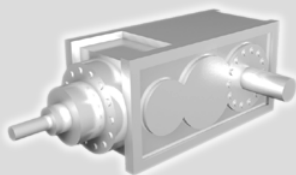
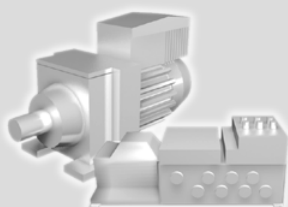


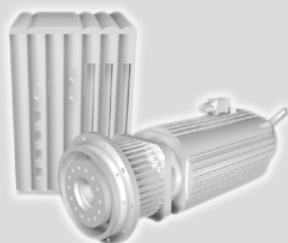

**SEW**  
**EURODRIVE**

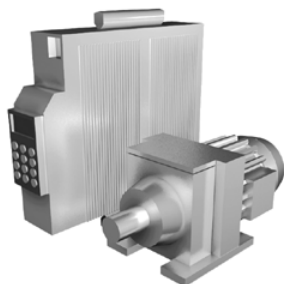


**MOVIDRIVE<sup>®</sup> compact**  
**MCF/MCV/MCS4\_A**

Edition 11/2006

11535016 / EN

**Operating Instructions**

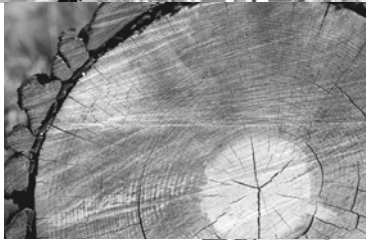



<b>1</b>	<b>Structure of the Safety Notes</b>	<b>5</b>
<b>2</b>	<b>Safety Notes</b>	<b>6</b>
2.1	General information	6
2.2	Target group	6
2.3	Designated use	6
2.4	Transportation, putting into storage	7
2.5	Installation	7
2.6	Electrical connection	7
2.7	Safe disconnection	7
2.8	Operation	8
<b>3</b>	<b>Unit Design</b>	<b>9</b>
3.1	Unit designation, nameplates and scope of delivery	9
3.2	Size 1 MCF/MCV/MCS4_A	11
3.3	Size 2 MCF/MCV/MCS4_A	12
3.4	Size 3 MCF/MCV/MCS4_A	13
3.5	Size 4 MCF/MCV/MCS4_A	14
3.6	Size 5 MCF/MCV/MCS4_A	15
<b>4</b>	<b>Installation</b>	<b>16</b>
4.1	Installation instructions for the basic unit	16
4.2	Installation notes for PROFIBUS-DP interface (MC_41A)	22
4.3	UL-compliant installation	25
4.4	Shield clamps	26
4.5	Touch guard	27
4.6	Wiring diagram for basic unit	28
4.7	Removing the connection unit	33
4.8	Assignment of braking resistors, chokes and filters	34
4.9	Installing the system bus (SBus)	37
4.10	Connecting option USS21A (RS232 and RS485)	39
4.11	Connecting the interface adapter USB11A / DKG11A	40
4.12	Connection of motor encoder and external encoder	42
<b>5</b>	<b>Startup</b>	<b>52</b>
5.1	General startup instructions	52
5.2	Preliminary work and resources	54
5.3	Startup with the DBG11B keypad	55
5.4	Startup with PC and MOVITOOLS®	62
5.5	Starting the motor	63
5.6	Complete parameter list	67
5.7	Starting the inverter with PROFIBUS-DP (MC_41A)	74
<b>6</b>	<b>Operation</b>	<b>89</b>
6.1	Operating displays for MC_40A (without fieldbus)	89
6.2	Operating displays for MC_41A (PROFIBUS-DP)	90
6.3	DBG11B keypad	91



---

<b>7 Service</b> .....	<b>95</b>
7.1 Fault information .....	95
7.2 Fault list.....	96
7.3 SEW Electronics Service .....	99
7.4 Extended storage.....	100
7.5 Waste disposal.....	100
<b>8 Technical Data</b> .....	<b>101</b>
8.1 CE marking, UL approval and C-Tick.....	101
8.2 General technical data .....	102
8.3 MOVIDRIVE® <i>compact</i> MCF/MCV/MCS4_A...-5_3 (AC 400/500 V units)	103
8.4 MOVIDRIVE® <i>compact</i> MCF/MCV/MCS4_A...-2_3 (AC 230 V units) .....	113
8.5 MOVIDRIVE® <i>compact</i> MCF/MCV/MCS electronics data .....	121
8.6 MOVIDRIVE® <i>compact</i> dimension drawings .....	123
<b>9 Index</b> .....	<b>128</b>



# 1 Structure of the Safety Notes

The safety notes in these operating instructions are designed as follows:

<b>Pictogram</b>  	<b>SIGNAL WORD!</b>
	Type and source of danger. Possible consequence(s) if the safety notes are disregarded. <ul style="list-style-type: none"> <li>• Measure(s) to prevent the danger.</li> </ul>

Pictogram	Signal word	Meaning	Consequences in case of disregard
Example:   General danger	<b>DANGER!</b>	Imminent danger	Severe or fatal injuries
	<b>WARNING!</b>	Possible dangerous situation	Severe or fatal injuries
 Specific danger, e.g. electric shock	<b>CAUTION!</b>	Possible dangerous situation	Minor injuries
	<b>STOP!</b>	Possible damage to property	Damage to the drive system or its environment
	<b>NOTE</b>	Useful information or a tip Simplifies the handling of the drive system	

	<b>CAUTION!</b>
	<p><b>A requirement of fault-free operation</b> and fulfillment of any rights to claim under limited warranty is that you adhere to the information in the <b>operating instructions</b>. Therefore, <b>read the operating instructions</b> before you start operating the unit!</p> <p>Make sure that the operating instructions are available to persons responsible for the plant and its operation, as well as to persons who work independently on the unit. You must also ensure that the documentation is legible.</p>

**Exclusion of liability:**

**You must comply with the information contained in these operating instructions to ensure safe operation of the MOVIDRIVE® compact drive inverters and to achieve the specified product characteristics and performance requirements. SEW-EURODRIVE assumes no liability for injury to persons or damage to equipment or property resulting from non-observance of these operating instructions. In such cases, any liability for defects is excluded.**



## 2 Safety Notes

The following basic safety notes must be read carefully to prevent injury to persons and damage to property. The operator must make sure that the basic safety notes are read and observed. Make sure that persons responsible for the plant and its operation, as well as persons who work independently on the unit, have read through the operating instructions carefully and understood them. If you are unclear about any of the information in this documentation, or if you require further information, please contact SEW-EURODRIVE.

### 2.1 General information

Never install damaged products or take them into operation. Submit a complaint to the shipping company immediately in the event of damage.

During operation, drive inverters can have live, bare and movable or rotating parts as well as hot surfaces, depending on their enclosure.

Removing covers without authorization, improper use or incorrect installation and operation may result in severe injuries to persons or damage to machinery.

Consult the documentation for additional information.

### 2.2 Target group

**Only qualified personnel** are authorized to install, start up, repair or service the units (observe IEC 60364 or CENELEC HD 384 or DIN VDE 0100 and IEC 60664 or DIN VDE 0110 as well as national accident prevention guidelines).

Qualified personnel in the context of these basic safety notes are: all persons familiar with installation, assembly, startup and operation of the product who possess the necessary qualifications.

All persons involved in any other work, such as transportation, storage, operation and disposal, must have suitable training.

### 2.3 Designated use

Drive inverters are components intended for installation in electrical systems or machines.

In case of installation in machines, startup of the drive inverters (i.e. start of designated operation) is prohibited until it is determined that the machine meets the requirements stipulated in the EC Directive 98/37/ EC (machine guideline); observe EN 60204.

Startup (i.e. start of designated operation) is only permitted with adherence to EMC (89/336/EEC) guideline.

The drive inverters meet the requirements stipulated in low voltage guideline 73/23/EEC. The harmonized standards of the EN 61800-5-1/DIN VDE T105 series in connection with EN 60439-1/VDE 0660 part 500 and EN 60146/VDE 0558 are applied to these drive inverters.

Technical data and information on the connection requirements are given on the nameplate and in the documentation; they have to be observed under all circumstances.

#### **Safety functions**

The MOVIDRIVE® *compact* drive inverters may not perform safety functions without higher-level safety systems. Use higher-level safety systems to ensure protection of personnel and equipment.



## **2.4 Transportation, putting into storage**

Observe the notes on transportation, storage and proper handling. Observe the climatic conditions as stated in the section "General technical data."

## **2.5 Installation**

Installation and cooling of the devices must take place according to the guidelines listed in the corresponding documentation.

Protect the drive inverters from excessive strain. Especially during transportation and handling, do not allow the components to be deformed or insulation spaces altered. Avoid contact with electronic components and contacts.

Drive inverters contain components that can be damaged by electrostatic energy and improper handling. Prevent mechanical damage or destruction of electric components (may pose health risk!)

The following applications are prohibited unless measures are expressly taken to make them possible:

- Use in potentially explosive atmospheres
- Use in areas exposed to harmful oils, acids, gases, vapors, dust, radiation, etc.
- Use in non-stationary applications that are subject to mechanical vibration and shock loads in excess of the requirements in EN 50178

## **2.6 Electrical connection**

Observe the applicable national accident prevention guidelines when working on live drive inverters (e.g. BGV A3).

Perform electrical installation according to the pertinent regulations (e.g. line cross sections, fusing, protective conductor connection). For any additional information, refer to the applicable documentation.

You will find notes on EMC-compliant installation, such as shielding, grounding, arrangement of filters and routing of lines, in the documentation of the drive inverters. Always observe these notes even with drive inverters bearing the CE marking. The manufacturer of the system or machine is responsible for maintaining the limits established by the EMC legislation.

Preventive measures and protection devices must correspond to the regulations in force (e.g. EN 60204 or EN 61800-5-1).

Required preventive measures: Ground the unit.

## **2.7 Safe disconnection**

The unit meets all requirements for safe disconnection of power and electronic connections in accordance with EN 61800-5-1. All connected circuits must also satisfy the requirements for safe disconnection.



## 2.8 Operation

Systems with integrated drive inverters must be equipped with additional monitoring and protection devices, if necessary, according to the applicable safety guidelines, such as the law governing technical equipment, accident prevention regulations, etc. Changes to the drive inverter using the operating software are permitted.

Do not touch live components or power connections immediately after disconnecting the drive inverters from the supply voltage because there may still be some charged capacitors. Note the respective reference plates on the drive inverter.

Keep all covers and doors closed during operation.

The fact that the status LED and other display elements are no longer illuminated does not indicate that the unit has been disconnected from the power supply and no longer carries any voltage.

Mechanical blocking or internal safety functions of the unit can cause a motor standstill. Removing the cause of the problem or performing a reset can result in the drive re-starting on its own. If, for safety reasons, this is not permitted for the driven machine, disconnect the unit from the mains before correcting the fault.






### 3 Unit Design

#### 3.1 Unit designation, nameplates and scope of delivery

*Sample unit designation*

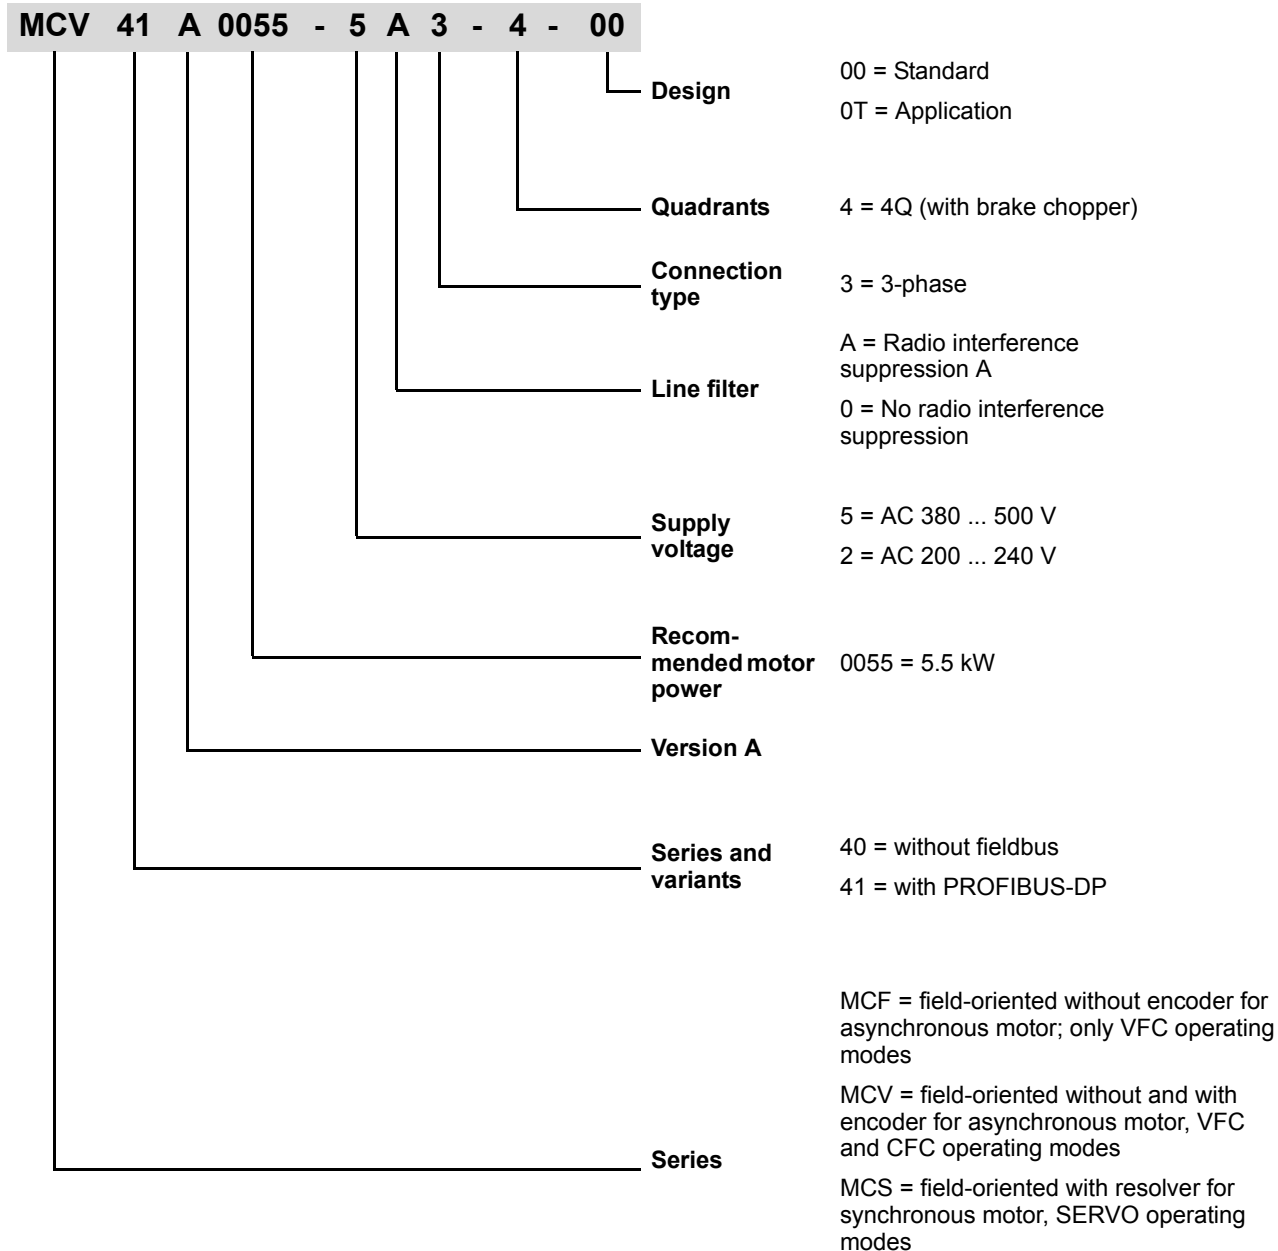



## Unit Design

### Unit designation, nameplates and scope of delivery

#### Sample nameplate

The complete nameplate is attached to the side of the unit.



01318AXX

Figure 1: Complete nameplate

A type label is attached to the front of the control unit (above the TERMINAL slot).

Typ: **MCF40A0370-503-4-00**  
 SACH.-NR.: **8267480**      SERIEN-NR.: **03352**

01322AXX

Figure 2: Type label

#### Scope of delivery


- Additionally for size 1: Connector housing for the power terminals (X1 ... X4), connected
- Additionally for sizes 1 and 2: Shield clamp for power section
- Additionally for sizes 4 and 5: Touch guard for power terminals.



### 3.2 Size 1 MCF/MCV/MCS4\_A

MCF/MCV/MCS4\_A...-5A3 (AC 400/500 V units): 0015 ... 0040

MCF/MCV/MCS4\_A...-2A3 (AC 230 V units): 0015 ... 0037

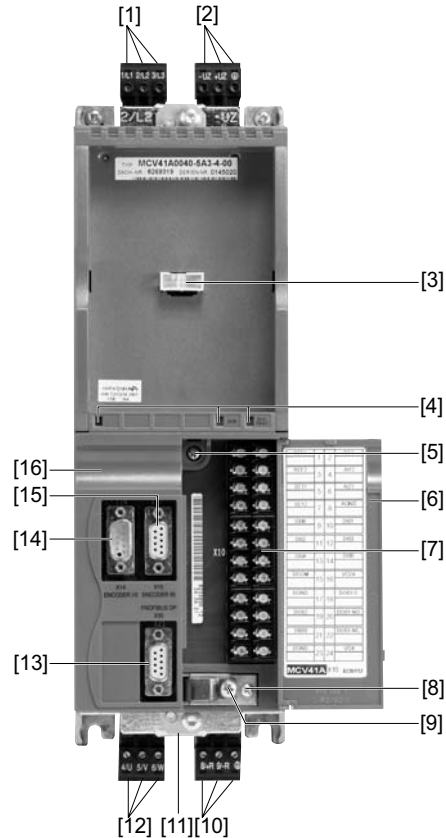

60117AXX


- [1] X1: Power supply connection 1/L1, 2/L2, 3/L3, separable
- [2] X4: Connection for DC link connection  $-U_z/+U_z$  and PE connection, separable
- [3] TERMINAL: Slot for DBG keypad or USS21A/USB11A option
- [4] V1: Operation LED and PROFIBUS diagnostic LEDs (only with MCF/MCV/MCS41A)
- [5] Retaining screw A for connection unit
- [6] Panel on connection unit with label
- [7] X10: Electronics terminal strip
- [8] Retaining screw B for connection unit
- [9] Screw of the shield clamp for the control unit
- [10] X3: Braking resistor connection 8/+R, 9/-R and PE connection, separable
- [11] Connection for shield clamp of the power section (not visible)
- [12] X2: Motor connection 4/U, 5/V, 6/W
- [13] Only for MCV/MCS41A X30: PROFIBUS-DP connection (9-pole Sub-D socket)
- [14] Only for MCV/MCS4\_A X14: Incremental encoder simulation output or external encoder input (9-pole Sub-D socket)
- [15] Only for MCV/MCS4\_A X15: Motor encoder input (9-pole Sub-D socket)
- [16] Connection unit, removable



### 3.3 Size 2 MCF/MCV/MCS4\_A

MCF/MCV/MCS4\_A...-5A3 (AC 400/500 V units): 0055 ... 0110

MCF/MCV/MCS4\_A...-2A3 (AC 230 V units): 0055 / 0075

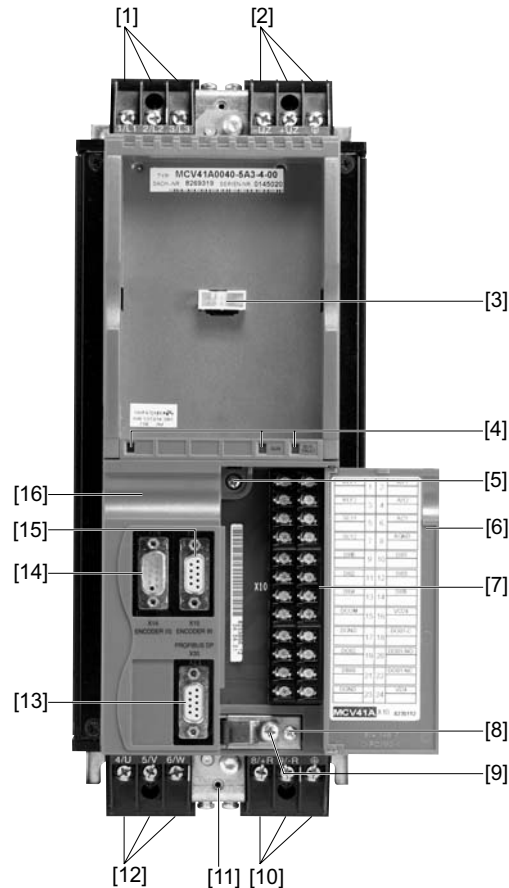

60118AXX


- [1] X1: Power supply connection 1/L1, 2/L2, 3/L3
- [2] X4: Connection for DC link connection  $-U_z/+U_z$  and PE connection, separable
- [3] TERMINAL: Slot for DBG keypad or USS21A/USB11A option
- [4] V1: Operation LED and PROFIBUS diagnostic LEDs (only with MCF/MCV/MCS41A)
- [5] Retaining screw A for connection unit
- [6] Panel on connection unit with label
- [7] X10: Electronics terminal strip
- [8] Retaining screw B for connection unit
- [9] Screw of the shield clamp for the control unit
- [10] X3: Braking resistor connection 8/+R, 9/-R and PE connection, separable
- [11] Connection for shield clamp of the power section (not visible)
- [12] X2: Motor connection 4/U, 5/V, 6/W
- [13] Only for MCV/MCS41A X30: PROFIBUS-DP connection (9-pole Sub-D socket)
- [14] Only for MCV/MCS4\_A X14: Incremental encoder simulation output or external encoder input (9-pole Sub-D socket)
- [15] Only for MCV/MCS4\_A X15: Motor encoder input (9-pole Sub-D socket)
- [16] Connection unit, removable



### 3.4 Size 3 MCF/MCV/MCS4\_A

MCF/MCV/MCS4\_A...-503 (AC 400/500 V units): 0150 ... 0300

MCF/MCV/MS4\_A...-203 (AC 230 V units): 0110 / 0150

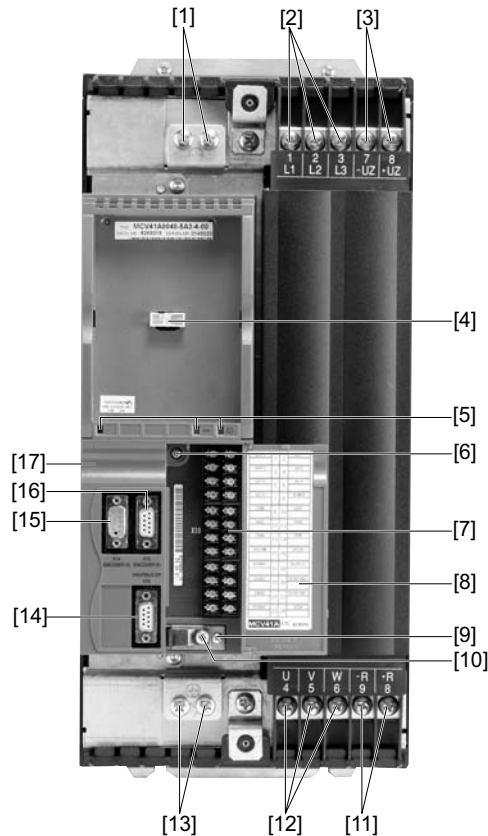

60119AXX


- [1] PE connections
- [2] X1: Power supply connection 1/L1, 2/L2, 3/L3
- [3] X4: Connection for DC link connection  $-U_z/ +U_z/$
- [4] TERMINAL: Slot for DBG keypad or USS21A/USB11A option
- [5] V1: Operation LED and PROFIBUS diagnostic LEDs (only with MCF/MCV/MCS41A)
- [6] Retaining screw A for connection unit
- [7] X10: Electronics terminal strip
- [8] Panel on connection unit with label
- [9] Retaining screw B for connection unit
- [10] Screw of the shield clamp for the control unit
- [11] X3: Braking resistor connection 8/+R, 9/-R and PE connection, separable
- [12] X2: Motor connection 4/U, 5/V, 6/W
- [13] PE connections
- [14] Only for MCV/MCS41A X30: PROFIBUS-DP connection (9-pole Sub-D socket)
- [15] Only for MCV/MCS4\_A X14: Incremental encoder simulation output or external encoder input (9-pole Sub-D socket)
- [16] Only for MCV/MCS4\_A X15: Motor encoder input (9-pole Sub-D socket)
- [17] Connection unit, removable



#### 3.5 Size 4 MCF/MCV/MCS4\_A

MCF/MCV/MCS4\_A...-503 (AC 400/500 V units): 0370 / 0450

MCF/MCV/MCS4\_A...-203 (AC 230 V units): 0220 / 0300

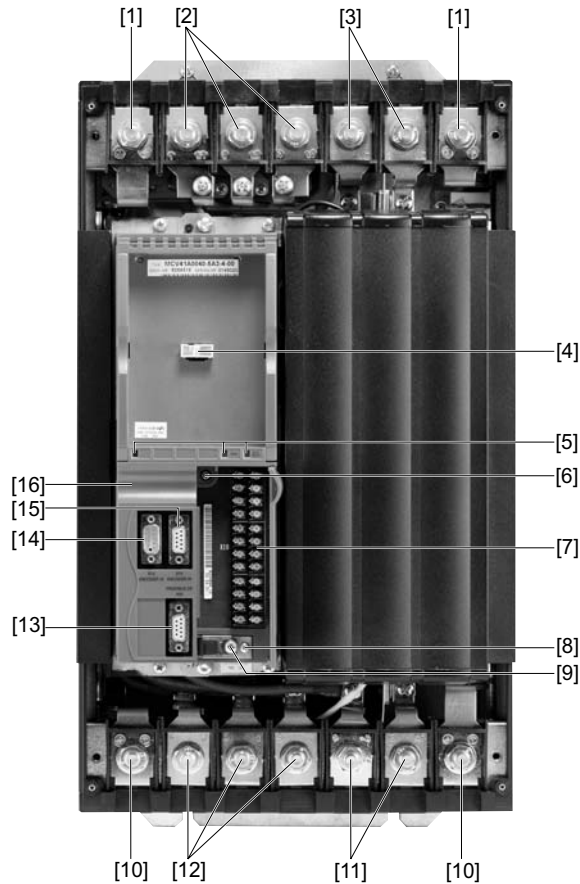


60120AXX

- [1] PE connections
- [2] X1: Power supply connection 1/L1, 2/L2, 3/L3
- [3] X4: Connection for DC link connection  $-U_z/ +U_z/$
- [4] TERMINAL: Slot for DBG keypad or USS21A/USB11A option
- [5] V1: Operation LED and PROFIBUS diagnostic LEDs (only with MCF/MCV/MCS41A)
- [6] Retaining screw A for connection unit
- [7] X10: Electronics terminal strip
- [8] Retaining screw B for connection unit
- [9] Screw of the shield clamp for the control unit
- [10] PE connections
- [11] X3: Braking resistor connection 8/+R, 9/-R and PE connection, separable
- [12] X2: Motor connection 4/U, 5/V, 6/W
- [13] Only for MCV/MCS41A X30: PROFIBUS-DP connection (9-pole Sub-D socket)
- [14] Only for MCV/MCS4\_A X14: Incremental encoder simulation output or external encoder input (9-pole Sub-D socket)
- [15] Only for MCV/MCS4\_A X15: Motor encoder input (9-pole Sub-D socket)
- [16] Connection unit, removable



### 3.6 Size 5 MCF/MCV/MCS4\_A

MCF/MCV/MCS4\_A...-503 (AC 400/500 V units): 0550 / 0750

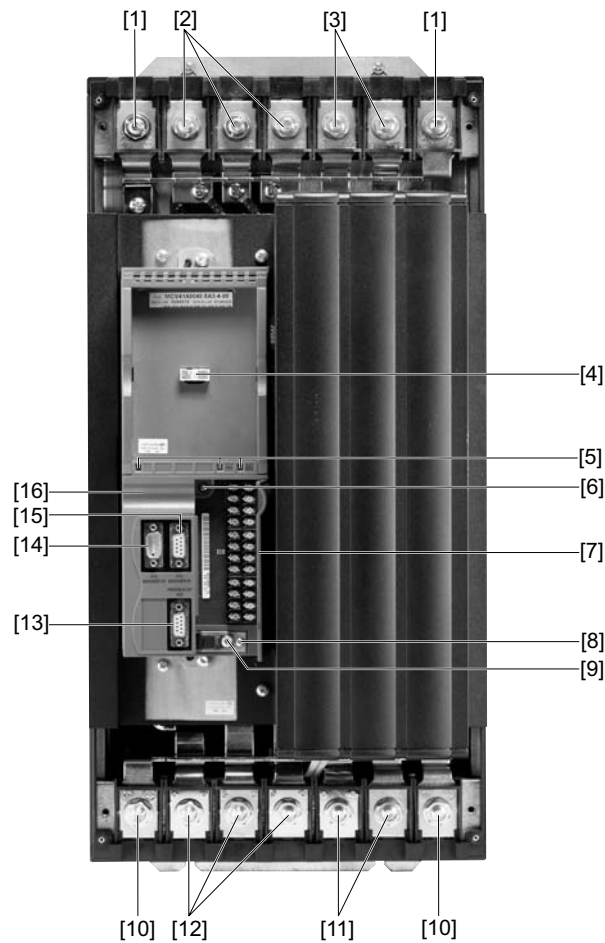

60121AXX

- [1] PE connections
- [2] X1: Power supply connection 1/L1, 2/L2, 3/L3
- [3] X4: Connection for DC link connection  $-U_z/ +U_z/$
- [4] TERMINAL: Slot for DBG keypad or USS21A/USB11A option
- [5] V1: Operation LED and PROFIBUS diagnostic LEDs (only with MCF/MCV/MCS41A)
- [6] Retaining screw A for connection unit
- [7] X10: Electronics terminal strip
- [8] Retaining screw B for connection unit
- [9] Screw of the shield clamp for the control unit
- [10] PE connections
- [11] X3: Braking resistor connection 8/+R, 9/-R and PE connection, separable
- [12] X2: Motor connection 4/U, 5/V, 6/W
- [13] Only for MCV/MCS41A X30: PROFIBUS-DP connection (9-pole Sub-D socket)
- [14] Only for MCV/MCS4\_A X14: Incremental encoder simulation output or external encoder input (9-pole Sub-D socket)
- [15] Only for MCV/MCS4\_A X15: Motor encoder input (9-pole Sub-D socket)
- [16] Connection unit, removable



## Installation

Installation instructions for the basic unit

### 4 Installation

#### 4.1 Installation instructions for the basic unit

##### Tightening torques

- Only use **genuine connection elements**. Note the **permitted tightening torques** for MOVIDRIVE® power terminals.
 

– Size 1	→	0.6 Nm
– Size 2	→	1.5 Nm
– Size 3	→	3.5 Nm
– Sizes 4 and 5	→	14 Nm

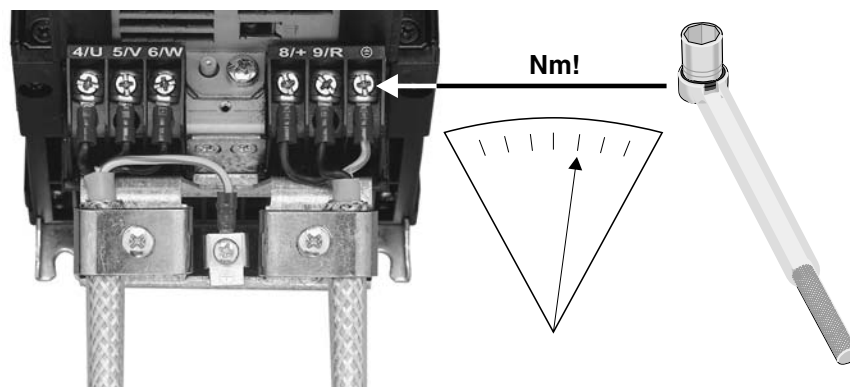


Figure 3: Observe the tightening torques

59847AXX

- The **permitted tightening torque** of the **signal terminals** is 0.6 Nm.

##### Minimum clearance and mounting position

- Leave **100 mm clearance at the top and bottom** for optimum cooling. There is no need for clearance at the sides. You can line up the units directly next to one another. With sizes 4 and 5 do not install any components that are sensitive to high temperatures within 300 mm of the top of the unit. Only install the units **vertically**. You must not install them horizontally, tilted or upside down.


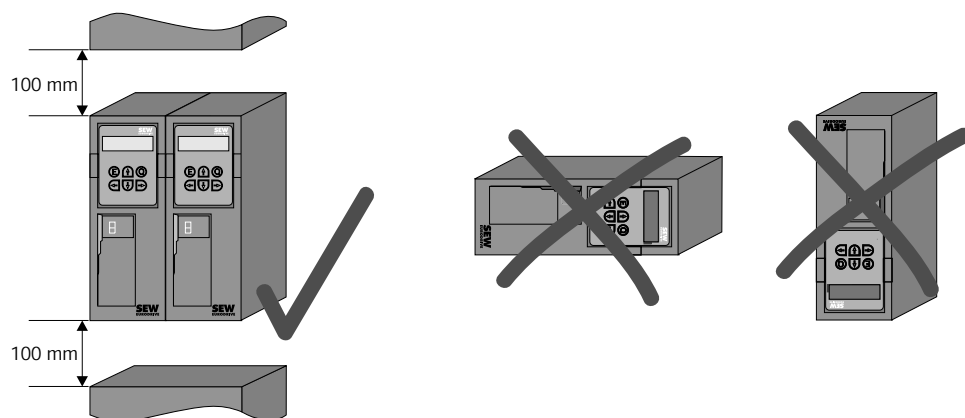


Figure 4: Minimum clearance and mounting position of the units

60136AXX



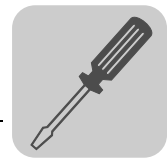

**Separate cable ducts**

- Route **power cables** and **electronics cables** in **separate cable ducts**.

**Fuses and earth-leakage circuit breakers**

- Install the **fuses at the beginning of the supply system lead** after the supply bus junction (→ Wiring diagram for basic unit, power section and brake).
- SEW-EURODRIVE recommends that you do not use earth-leakage circuit breakers. However, if an earth-leakage circuit breaker is stipulated for direct or indirect protection against contact, observe the **following information in accordance with EN 61800-5-1**:

	<p><b>! WARNING!</b></p>
	<p>Incorrect earth-leakage circuit breaker installed. Severe or fatal injuries.</p> <p>MOVIDRIVE® can cause direct current in the protective earth. In cases where an earth-leakage circuit breaker is used for protection against direct or indirect contact, only install a <b>type B earth-leakage circuit breaker on the power supply end of the MOVIDRIVE® unit</b>.</p>

**Mains and brake contactors**

- Only use **contactors in utilization category AC-3** (IEC 60947-4-1) as mains and brake contactors.

	<p><b>NOTES</b></p>
	<ul style="list-style-type: none"> <li>• Only use the <b>mains contactor K11</b> (→ Sec. "Wiring diagram for basic unit") to <b>switch the inverter on and off</b>. Do not use it for jog mode. Use the commands "Enable/Stop", "CW/Stop" or "CCW/Stop" for jog mode.</li> <li>• Observe a minimum switch-off time of 10 s for the input contactor K11.</li> </ul>

**More than four units**

- With **more than four units** on an **input contactor** configured for the total current: Insert a **3-phase line choke in the circuit** to limit the inrush current.

**PE power supply connection**  
(→ EN 61800-5-1)

- For a **supply system lead < 10 mm<sup>2</sup>**: Route a **second PE conductor with the cross section of the supply system lead** parallel to the protective earth via separate terminals or use a **copper protective earth conductor with a cross section of 10 mm<sup>2</sup>**.
- For a **supply system lead 10 mm<sup>2</sup> ... 16 mm<sup>2</sup>**: Route a **copper protective earth conductor with the cross section of the power supply line**.
- For a **supply system lead 16 mm<sup>2</sup> ... 35 mm<sup>2</sup>**: Route a **copper protective earth conductor with the cross section of 16 mm<sup>2</sup>**.
- For a **supply system lead > 35 mm<sup>2</sup>**: Route a **copper protective earth conductor with half the cross section of the power supply line**.

**IT systems**

- SEW-EURODRIVE recommends using **earth-leakage monitors with pulse-code measurement** for voltage supply systems with a non-grounded star point (**IT systems**). Using such devices prevents the earth-leakage monitor mis-tripping due to the ground capacitance of the inverter. **No EMC limits are specified for interference emission in voltage supply systems without grounded star point (IT systems)**.




## Installation

### Installation instructions for the basic unit

#### Cross sections

- Supply system lead: **Cross section according to rated input current**  $I_{\text{mains}}$  at rated load.
- Motor lead: **Cross section according to rated output current**  $I_{\text{rated}}$ .
- Electronics cables for MCF/MCV/MCS:
  - For single cores 0.20...2.5 mm<sup>2</sup> (AWG 24...12)
  - For double cores 0.20...1 mm<sup>2</sup> (AWG 24...17)

#### Unit output

	<b>STOP!</b>
	<p>MOVIDRIVE® can suffer irreparable damage if you connect capacitive loads.</p> <ul style="list-style-type: none"> <li>• <b>Only connect ohmic/inductive loads (motors).</b></li> <li>• Never connect capacitive loads.</li> </ul>

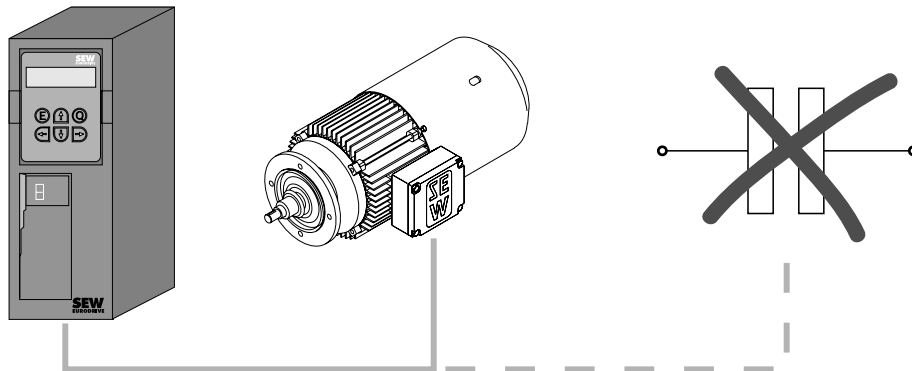


Figure 5: Only connect ohmic/inductive loads; do not connect capacitive loads


60135AXX

#### Connecting braking resistors

- Use **two tightly twisted leads or a 2-core shielded power cable**. Cross section according to the rated output current of the inverter.
- Protect the braking resistor with a **bimetallic relay / thermal overload relay** (→ Wiring diagram for basic unit, power section and brake). Set the **trip current** according to the **technical data of the braking resistor**. SEW-EURODRIVE recommends using an overcurrent relay of trip class 10 or 10A in accordance with EN 60947-4-1.
- For braking resistors of the **BW...-T / BW...-P** series, the **integrated temperature switch/overcurrent relay can be connected using a 2-core shielded cable as an alternative** to a bimetallic relay.
- Install the **flat-type braking resistors** together with the appropriate **touch guard**.


#### Installing braking resistors BW... / BW...-T / BW...-P

- Permitted mounting options:
  - on horizontal surfaces
  - on vertical surfaces with brackets at the bottom and perforated sheets at top and bottom
- Mounting not permitted:
  - on vertical surfaces with brackets at the top, right or left

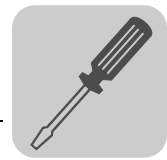

**Operating  
braking resistors**

- The connection leads to the braking resistors carry a **high pulsed DC voltage** during rated operation.


	<p><b>! WARNING!</b></p>
	<p>The surfaces of the braking resistors get very hot when the braking resistors are loaded with <math>P_{rated}</math>.</p> <p>Risk of burns and fire.</p> <ul style="list-style-type: none"> <li>• Choose a suitable installation location. Braking resistors are usually installed on top of the control cabinet.</li> <li>• Do not touch the braking resistors.</li> </ul>

**Binary inputs /  
binary outputs**

- The **binary inputs** are electrically **isolated** by optocouplers.
- The **binary outputs** are **short-circuit proof** and **protected against external voltage to DC 30 V**. External voltages > DC 30 V can cause irreparable damage to binary outputs.

**EMC compliant  
installation**

- Only use **shielded control cables**.
- All cables except for the supply system lead must be **shielded**. As an alternative to shielding, the HD.. output choke option can be used for the motor cable to achieve the emitted interference limit values.
- When using shielded motor cables, e.g. prefabricated motor cables from SEW-EURODRIVE, you must keep the **unshielded conductors between the shield and connection terminal of the inverter as short as possible**.
- Apply the **shield by the shortest possible route and make sure it is grounded over a wide area at both ends**. Ground one end of the shield via a suppression capacitor (220 nF / 50 V) to avoid ground loops. If using double-shielded cables, ground the outer shield on the controller end and the inner shield on the other end.

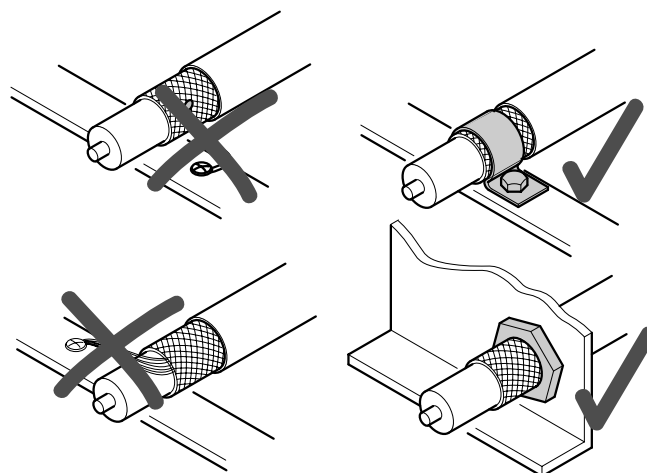

60028AXX

Figure 6: Correct shield connection using metal clamp (shield clamp) or cable gland

- You can also use **grounded sheet-metal ducts or metal pipes to shield the cables. Route the power and control cables separately.**
- Provide **high frequency compatible grounding** for the inverter and **all additional units** (wide area metal-on-metal contact between the unit housing and ground, e.g. unpainted control cabinet mounting panel).



## Installation

### Installation instructions for the basic unit



#### NOTE

- This is a product with restricted availability in accordance with IEC 61800-3. It may cause interference in residential environments. In this case, the operator may need to implement appropriate measures.
- For detailed information on EMC compliant installation, refer to the publication "Electromagnetic Compatibility in Drive Engineering" from SEW-EURODRIVE.


#### Line filter

- **Sizes 1 and 2** are fitted with a **line filter as standard**. This line filter ensures that **limit value class A is maintained on the supply side**. Use an NF... line filter as an option to maintain the class B limit.
- The **NF... input filter option** is required for **sizes 3 to 5** to maintain class A and B limits.
- Install the **line filter close to the inverter** but outside the minimum clearance for cooling.
- Do not switch between the line filter and MOVIDRIVE®.
- Keep the **length of the cable between the line filter and inverter to an absolute minimum**, and never more than 400 mm. Unshielded, twisted cables are sufficient. Use also unshielded lines for the supply system lead.
- This line filter must be mounted either **directly at the entry point into the switch cabinet or close to the inverter** if **several inverters are connected to the same line filter**. The line filter must be chosen on the basis of the total current of the connected inverters.
- **No EMC limits are specified for interference emission in voltage supply systems without earthed star point** (IT systems). The **effectiveness of input filters** in IT systems is **severely limited**.

#### Interference emission


SEW-EURODRIVE recommends the following **EMC measures on the output side to maintain the class A and B limits**:

- Shielded motor cable
- HD... output choke option

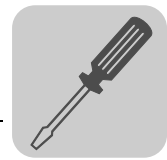

*HD... output choke*

- Install the **output choke close to the inverter** but outside the minimum clearance for cooling.
- Route **all three phases of the motor cable [1] through the output choke**. To achieve a higher filter effect, **do not route the PE conductor through the output choke**.

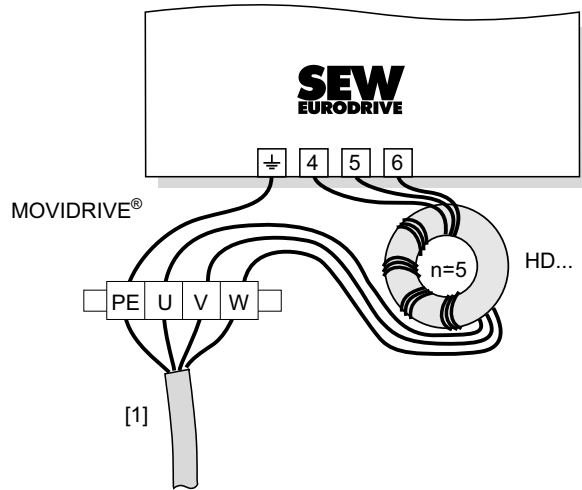

[1] Motor cable

60029AXX




## Installation

### Installation notes for PROFIBUS-DP interface (MC\_41A)

#### 4.2 Installation notes for PROFIBUS-DP interface (MC\_41A)

##### Pin assignment

For connection to the PROFIBUS network, use a 9-pin Sub-D connector in accordance with IEC 61158 (→ following figure). The T-bus connection must be made using a plug with the corresponding configuration.

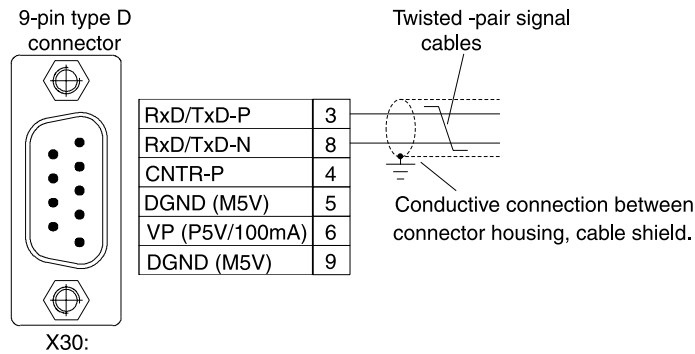

02893AEN

As a rule, the MOVIDRIVE<sup>®</sup> *compact* drive inverter is connected to the PROFIBUS system using a shielded twisted-pair cable. Observe the maximum supported transmission rate when selecting the bus connector.

The twisted-pair cable is connected to the PROFIBUS connector using pins 3 (RxD/TxD-P) and 8 (RxD/TxD-N). Communication takes place via these two contacts. The RS485 signals RxD/TxD-P and RxD/TxD-N must be connected to the same contacts in all PROFIBUS stations. Otherwise, no communication is possible via the bus medium. The PROFIBUS interface sends a TTL control signal for a repeater or fiber optic adapter (reference = pin 9) via pin 4 (CNTR-P).

##### Shielding and routing bus cables

The PROFIBUS interface supports RS485 transmission technology and requires the cable type A to IEC 61158 specified as the physical medium for PROFIBUS. This cable must be a shielded, twisted-pair cable.

Correct shielding of the bus cable attenuates electrical interference that may occur in industrial environments. The following measures ensure the best possible shielding:

- Manually tighten the mounting screws on the connectors, modules, and equipotential bonding conductors.
- Use only connectors with a metal housing or a metallized housing.
- Connect the shielding in the connector over a wide surface area.
- Apply the shielding of the bus line on both ends.
- Route signal and bus cables in separate cable ducts. Do not route them parallel to power cables (motor leads).
- Use metallic, grounded cable racks in industrial environments.
- Route the signal cable and the corresponding equipotential bonding close to each other using the shortest possible route.
- Avoid using plug connectors to extend bus cables.
- Route the bus cables closely along existing grounding surfaces.



##### NOTE


In case of fluctuations in the ground potential, a compensating current may flow via the bilaterally connected shield that is also connected to the protective earth (PE). Make sure you supply adequate equipotential bonding according in accordance with relevant VDE regulations in such a case.



**Bus connection  
for  
MCF/MCV/MCS41  
A**

If the MOVIDRIVE® compact drive inverter is at the start or end of a PROFIBUS segment, a T-bus connection with incoming and outgoing PROFIBUS cable is not normally used for connection to the PROFIBUS network. Instead, only one PROFIBUS cable is used. To prevent malfunctions in the bus system due to reflections, etc., the PROFIBUS segment must be terminated using bus terminating resistors at the first and last stations.

As the bus terminating resistors in the inverter (DIP switch under the connection unit → Sec. "Removing the connection unit" on page 33) can be activated, you can dispense with the Sub-D connector with integrated terminating resistors.

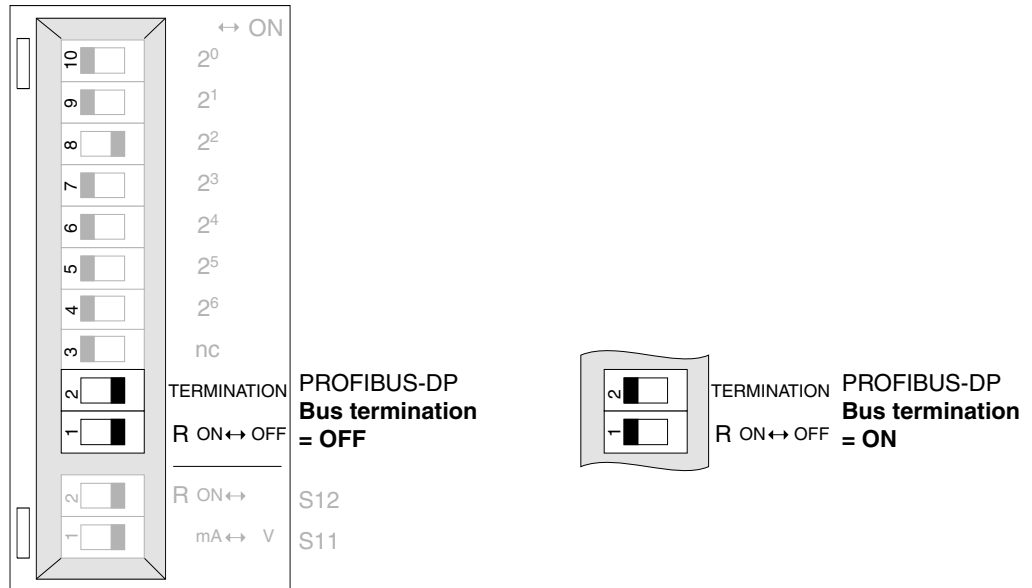

02894AEN

Figure 7: Activating the bus terminating resistor for MCF/MCV/MCS41A using the DIP switches



**NOTE**

- Both DIP switches (TERMINATION 1 and 2) must always be activated.
- Bus termination is implemented for cable type A to IEC 61158.
- If you use a Sub-D connector with integrated bus terminating resistors, do not activate the terminating resistors on the inverter!




## Installation

### Installation notes for PROFIBUS-DP interface (MC\_41A)

#### Setting the station address for MCF/MCV/MCS41 A

The PROFIBUS station address is set using DIP switches 4...10 (significance  $2^6 \dots 2^0$ ) under the connection unit (→ Sec. "Removing the connection unit" on page 33). MOVIDRIVE® compact supports the address range 0 to 125.

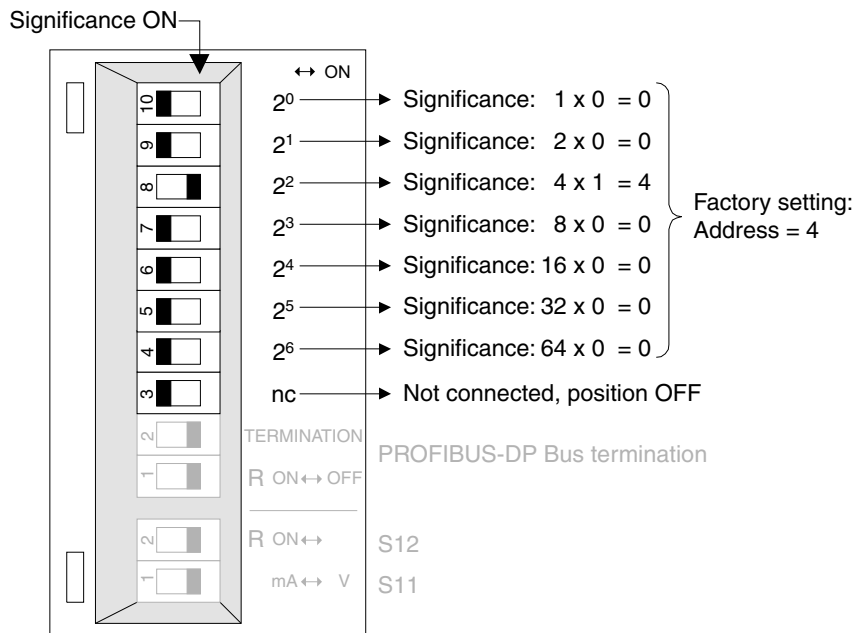


02895AEN

Figure 8: Setting the PROFIBUS station address for MCF/MCV/MCS41A

The PROFIBUS station address can only be set using the DIP switches when the connection is removed. Therefore, the address cannot be changed during operation. The change only comes into effect when the drive inverter is switched on again (power supply + DC 24 V OFF/ON). The drive inverter displays the current station address in fieldbus monitor parameter P092 "Fieldbus address" (display with DBG11B or MOVITOOLS/SHELL).


#### Example: Setting station address 17

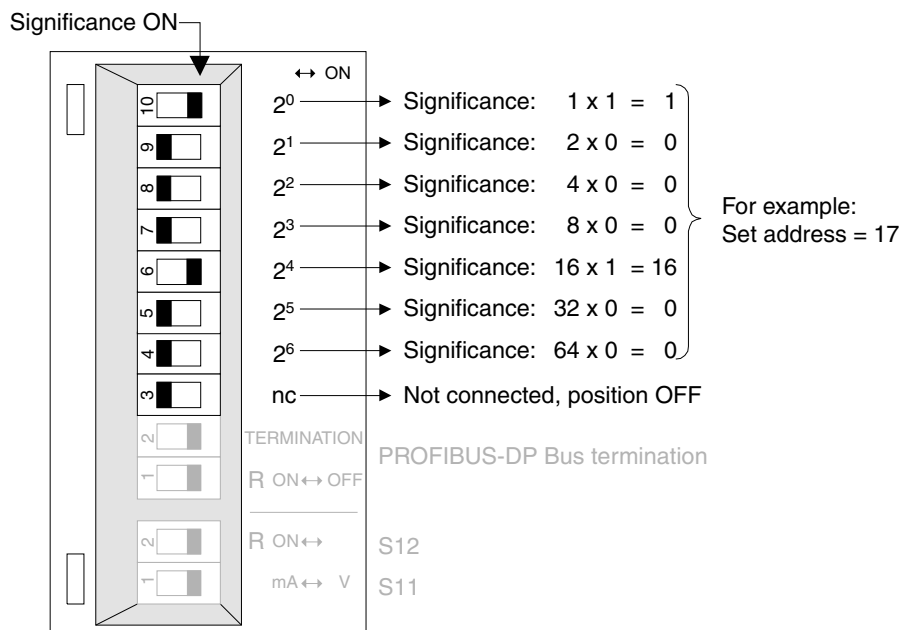

03003AEN

Figure 9: Setting station address 17



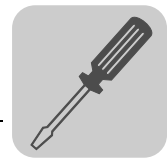

### 4.3 UL-compliant installation

Note the following points for UL-compliant installation:

- Only use copper cables with the **following rated thermal values** as connection cables:
  - MOVIDRIVE<sup>®</sup> compact MC\_4\_A0015 ... 0300: Rated thermal value 60 °C / 75 °C
  - MOVIDRIVE<sup>®</sup> compact MC\_4\_A0370 ... 0750: Rated thermal value 75 °C
- **Permitted tightening torques** for MOVIDRIVE<sup>®</sup> compact power terminals:
  - Size 1 → 0.6 Nm
  - Size 2 → 1.5 Nm
  - Size 3 → 3.5 Nm
  - Sizes 4 and 5 → 14 Nm
- MOVIDRIVE<sup>®</sup> compact drive inverters are **suited for operation on voltage supply systems with grounded star point** (TN and TT systems) that supply a maximum current according to the following tables and have a max. voltage of AC 240 V for MOVIDRIVE<sup>®</sup> compact MC\_4\_A...2\_3 (AC 230 V units) and AC 500 V for MOVIDRIVE<sup>®</sup> compact MC\_4\_A...5\_3 (AC 400/500 V units). The performance data of the fuses must not exceed the values listed in the tables.

#### 400/500 V units

MOVIDRIVE <sup>®</sup> compact MC_4_A...5_3	Max. supply current	Max. supply voltage	Fuses
0015/0022/0030/0040	AC 10000 A	AC 500 V	AC 35 A / 600 V
0055/0075/0110	AC 5000 A	AC 500 V	AC 30 A / 600 V
0150/0220	AC 5000 A	AC 500 V	AC 175 A / 600 V
0300	AC 5000 A	AC 500 V	AC 225 A / 600 V
0370/0450	AC 10000 A	AC 500 V	AC 350 A / 600 V
0550/0750	AC 10000 A	AC 500 V	AC 500 A / 600 V

#### 230 V units

MOVIDRIVE <sup>®</sup> compact MC_4_A...2_3	Max. supply current	Max. supply voltage	Fuses
0015/0022/0037	AC 5000 A	AC 240 V	AC 30 A / 250 V
0055/0075	AC 5000 A	AC 240 V	AC 110 A / 250 V
0110	AC 5000 A	AC 240 V	AC 175 A / 250 V
0150	AC 5000 A	AC 240 V	AC 225 A / 250 V
0220/0300	AC 10000 A	AC 240 V	AC 350 A / 250 V

	<b>NOTES</b>
	<ul style="list-style-type: none"> <li>• Use only tested units with a <b>limited output voltage</b> (<math>V_{\max} = \text{DC } 30 \text{ V}</math>) and <b>limited output current</b> (<math>I \leq 8 \text{ A}</math>) as an <b>external DC 24 V voltage source</b>.</li> <li>• <b>UL certification does not apply to operation in voltage supply systems with a non-grounded star point (IT systems).</b></li> </ul>



#### 4.4 Shield clamps

The shield clamps for the power sections provide you with a very easy way of installing the shield for the motor and brake cables. Apply the shield and PE conductor as shown in the figures.

##### **Shield clamp for power section, size 1**

A shield clamp is supplied as standard for the power section with MOVIDRIVE® compact size 1. Install this shield clamp together with the unit's retaining screws.

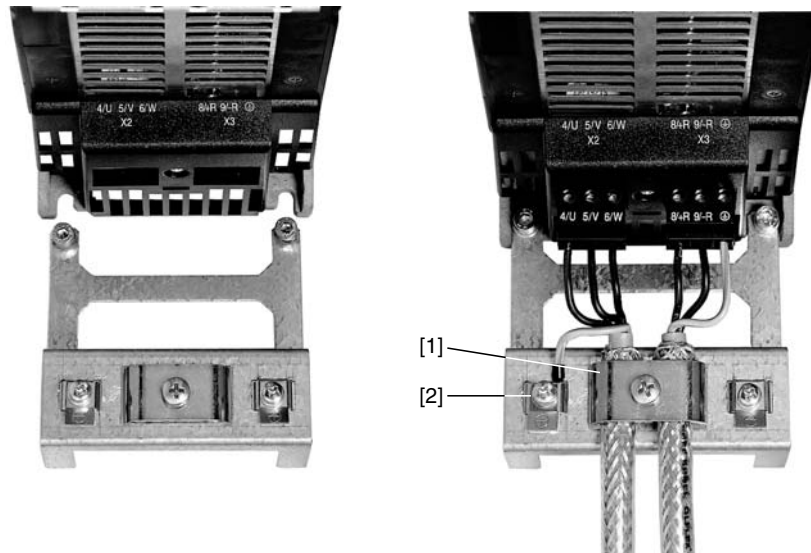


Figure 10: Attaching the shield clamp of the power section (MOVIDRIVE® compact size 1)

02012CXX

- [1] Shield clamp
- [2] PE connection (⊕)

##### **Shield clamp for power section, size 2**

A shield clamp for the power section is supplied as standard with two retaining screws for MOVIDRIVE® compact size 2. Install these shield clamp using the two retaining screws.


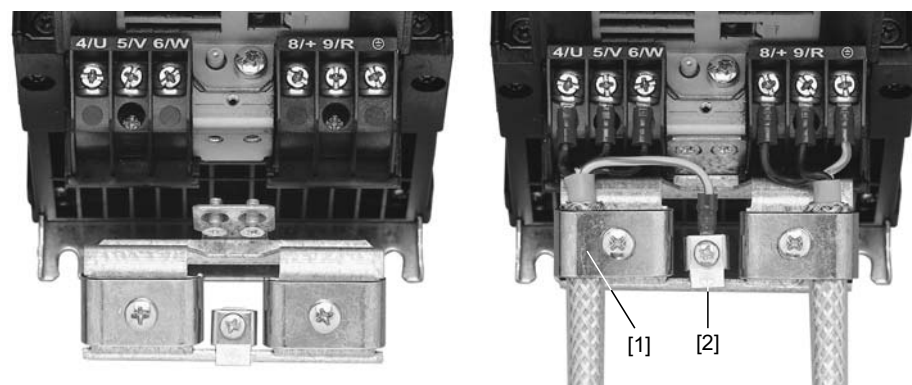



Figure 11: Attaching the shield clamp of the power section (MOVIDRIVE® compact size 2)

59874AXX

- [1] Shield clamp
- [2] PE connection (⊕)

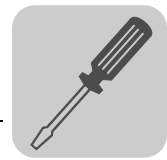

### 4.5 Touch guard

	<p><b>! DANGER!</b></p>
	<p>Uncovered power connections. Severe or fatal injuries from electric shock.</p> <ul style="list-style-type: none"> <li>• Install the touch guard according to the regulations.</li> <li>• Never start the unit if the touch guard is not installed.</li> </ul>

When the touch guard is installed, MOVIDRIVE® compact sizes 4 and 5 provide enclosure protection IP10; without touch guard IP00.

Two touch guards with 8 retaining screws are supplied as standard with MOVIDRIVE® compact sizes 4 and 5. Install the touch guard on both covers of the power section terminals.

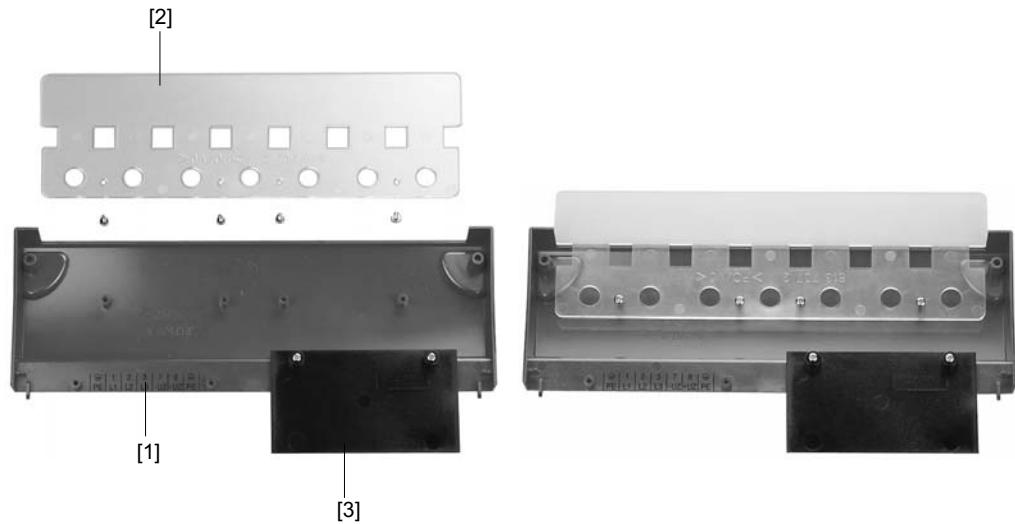


Figure 12: Touch guard for MOVIDRIVE® compact sizes 4 and 5

06624AXX

- [1] Cover
- [2] Connection plate
- [3] Aperture



**4.6 Wiring diagram for basic unit**

**Wiring the power section and brake**

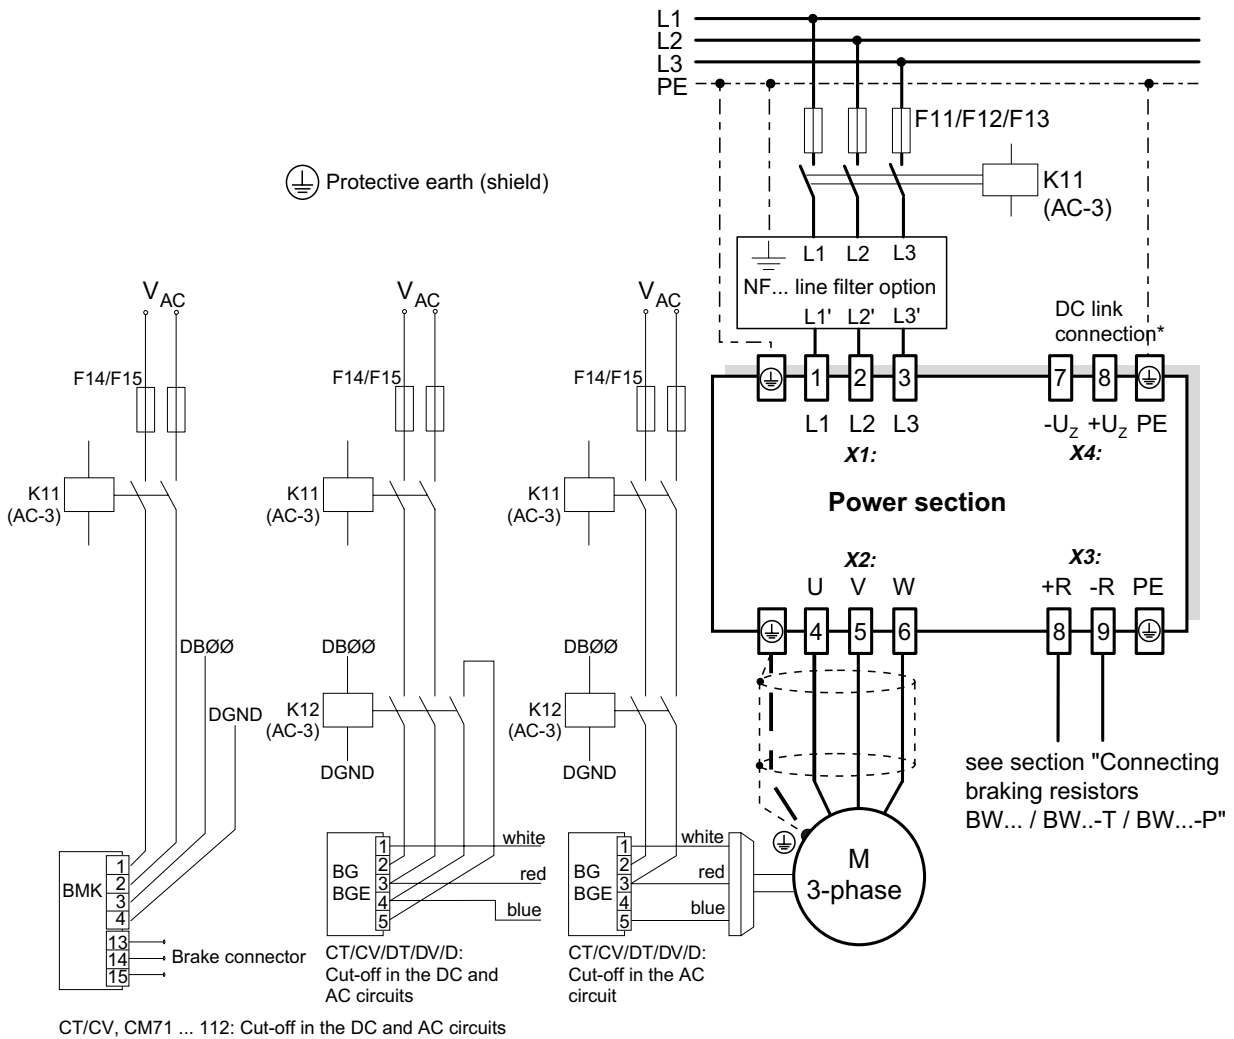


Figure 13: Wiring diagram, power section and brake

55310CEN


\* With sizes 1 and 2, there is no PE connection next to the supply system connection terminals and motor connection terminals (X1, X2). In this case, use the PE terminal next to the DC link connection (X4).

**Important:** Read the operating instructions for the motors when connecting the brake.

	<b>STOP!</b>
	<p>If the brake rectifier is connected via the supply system lead, the braking function is restricted.</p> <ul style="list-style-type: none"> <li>• Connect the brake rectifier using a separate supply system lead.</li> <li>• <b>Supply via the motor voltage is not permitted!</b></li> </ul>

Always switch off the brake on the DC and AC sides with:

- All hoist applications
- Drives that require a rapid brake response time
- CFC and SERVO operating modes

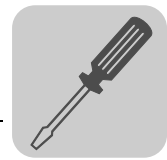


*Brake rectifier in control cabinet*

Install the connection cables between the brake rectifier and the brake separately from other power cables when installing the brake rectifier in the control cabinet. Joint installation is only permitted with shielded power cables.


**Connecting BW... / BW...-...-T / BW...-...-P braking resistors**

Power section

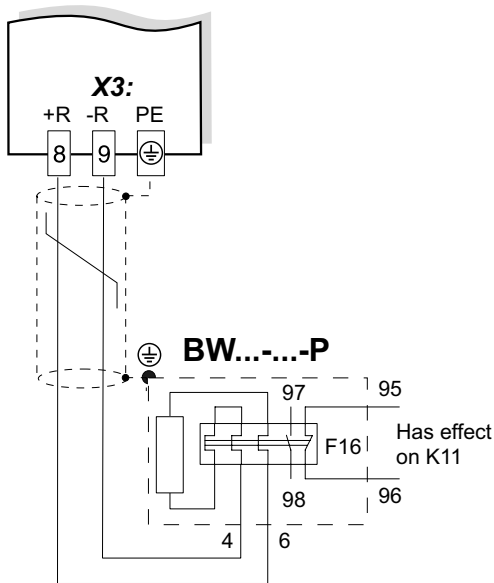


When the auxiliary contact trips, K11 must be opened and DIØØ"/Controller inhibit" assigned a "0" signal. Do not interrupt the resistor circuit!

Power section

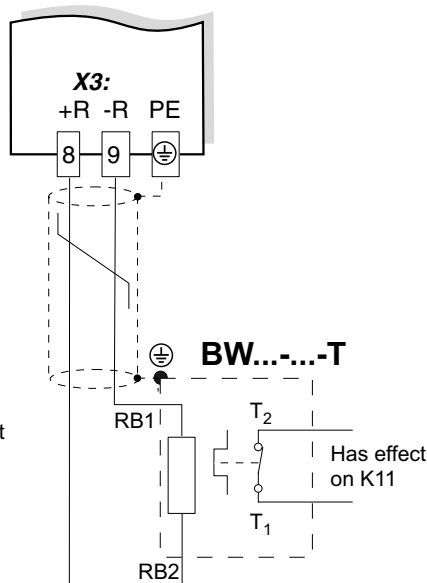

When the internal temperature switch triggers, K11 must be opened and DIØØ"/Controller inhibit" assigned a "0" signal. Do not interrupt the resistor circuit!

Power section

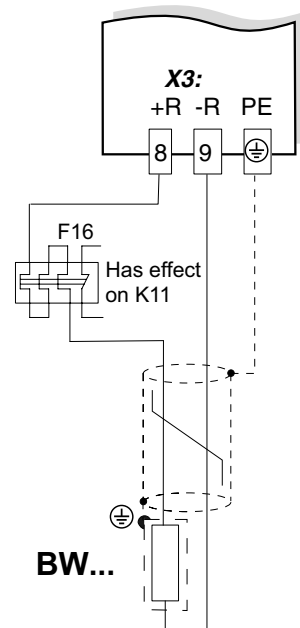

When the external bimetallic relay (F16) triggers, K11 must be opened and DIØØ"/Controller inhibit" assigned a "0" signal. Do not interrupt the resistor circuit!

59500AEN


Braking resistor type	Design specified	Overload protection	
		Internal temperature switch (..T)	External bimetallic relay (F16)
BW...	-	-	Required
BW...-...-T	-	One of the two options (internal temperature switch / external bimetallic relay) is required.	
BW...-003 / BW...-005	Adequate	-	Permitted



# Installation


## Wiring diagram for basic unit

### MCF/MCV/MCS4\_A control unit: Wiring diagram for the control unit

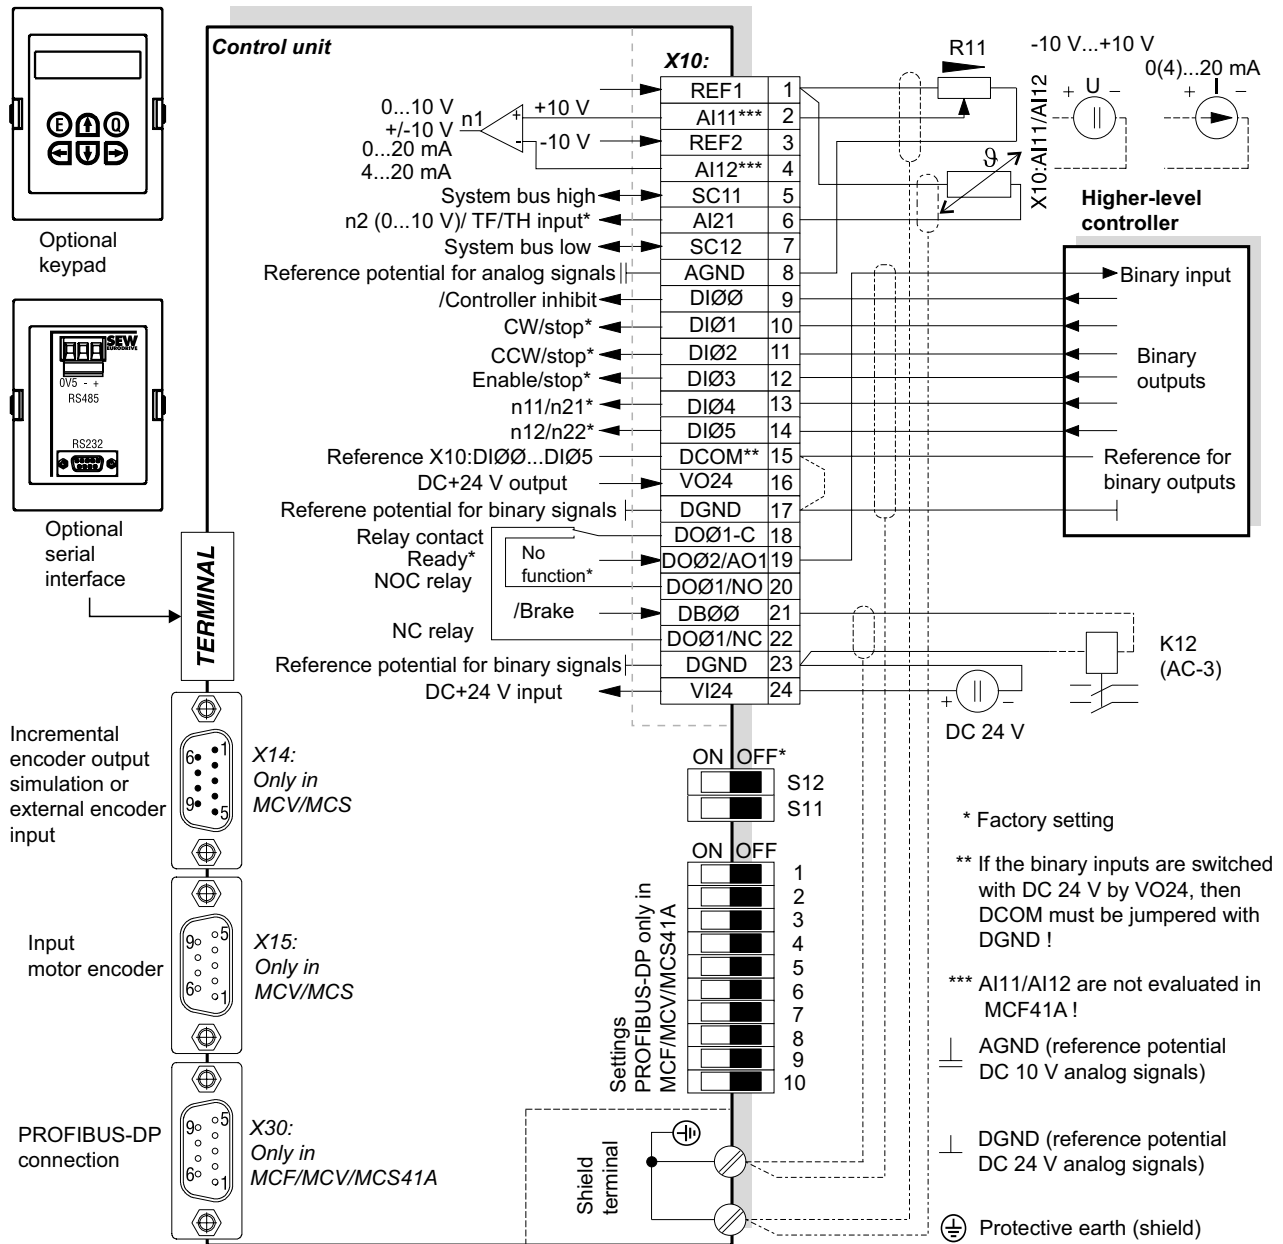

59873AEN

- **MCF/MCV/MCS41A (with PROFIBUS-DP):** SEW-EURODRIVE recommends that you always supply these units with DC 24 V at terminal X10:24 (VI24). This external DC 24 V voltage supply must be able to provide 50 W continuous power and 100 W peak power (1 s).
- Analog input AI21 (X10:6) can be used either as a 10 V voltage input or as a TF/TH input. It is switched over using parameter P120.
- You can only access DIP switches S11, S12 and 1 ... 10 when the connection unit is removed (→ Sec. "Removing the connection unit").
- The functions of the DIP switches 1 ... 10 are explained in the sections "Bus termination" and "Setting the station address".
- The TF/TH line must either be shielded or routed at a distance of at least 0.2 m from power cables (e.g. motor or brake cables). The TF/TH line must be shielded separately if hybrid cables are used for the motor and TF/TH connection.

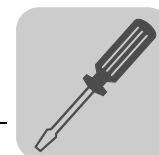

**MCF/MCV/MCS4\_A: Functional description of the terminals on the basic unit**

Terminal	Function	
X1:1/2/3 X2:4/5/6 X3:8/9 X4:	L1/L2/L3 (PE) U/V/W (PE) +R/-R (PE) +U <sub>Z</sub> /-U <sub>Z</sub> (PE)	Power supply connection Motor connection Braking resistor connection DC link connection
X10:1 X10:2/4 X10:3 X10:5/7 X10:6 X10:8	REF1 AI11/12 REF2 SC11/SC12 AI21 AGND	DC+10 V (max. DC 3 mA) for setpoint potentiometer Setpoint input n1 (differential input or input with AGND reference potential), signal form → P11_ / S11 DC-10 V (max. DC 3 mA) for setpoint potentiometer System bus (SBus) high/low Either setpoint input n2 (0...10 V) or TF/TH input, setting → P120 Reference potential for analog signals (REF1, REF2, AI..)
X10:9 X10:10 X10:11 X10:12 X10:13 X10:14	DIØØ DIØ1 DIØ2 DIØ3 DIØ4 DIØ5	Binary input 1, with fixed assignment"/Controller inhibit" Binary input 2, factory setting "CW/stop" Binary input 3, factory setting "CW/stop" Binary input 4, factory setting to "Enable/Stop" Binary input 5, factory setting "n11/n21" Binary input 6, factory setting "n11/n22"
X10:15	DCOM	Reference for binary inputs DIØØ to DIØ5 (X10:9 to X10:14) • Switching binary inputs with DC+24 V external voltage: DCOM (X10:15) must be connected to the reference potential of the external voltage. – Without jumper DCOM-DGND (X10:15-X10:17) → Isolated binary inputs – With jumper DCOM-DGND (X10:15-X10:17) → Non-isolated binary inputs • Switching binary inputs with DC+24 V from VO24 (X10:16) → DCOM-DGND jumper required.
X10:18 X10:19	DOØ1-C DOØ2/AO1	Shared contact binary output 1, factory setting "Ready" Binary output 2, factory setting "No function," load capacity max. DC 50 mA (short-circuit proof, protected against external voltage to DC 30 V), can also be used as analog output AO1 (not with MC_41A), switch using P621 and P642
X10:20 X10:21	DOØ1-NO DBØØ	Normally open contact binary output 1, max. load capacity of relay contacts DC 30 V and DC 0.8 A Binary output 0, with fixed assignment "/Brake", max. load capacity DC 150 mA (short-circuit proof and protected against external voltage to DC 30 V)
X10:22	DOØ1-NC	NC contact binary output 1 Selection options for binary outputs 1 and 2 (DOØ1 and DOØ2) → Parameter menu P62_
X10:23 X10:24	DGND VI24	Reference potential for binary signals Input DC+24 V voltage supply (backup voltage, unit diagnosis when supply system off)
X14:1 X14:2 X14:3 X14:4 X14:5 X14:6 X14:7 X14:8 X14:9	Input for external encoder or output for incremental encoder simulation Signal track A (K1) Signal track B (K2) Signal track C (K0) switchover Reference potential DGND Signal track A (K1) Signal track B (K2) Signal track C (K0) DC+24 V (max. DC 180 mA)	The following encoders can be connected as external encoders: • 5 V TTL sensor with DC 24 V voltage supply type ES1R, ES2R or EV1R • 5 V TTL sensor with DC 5 V voltage supply type ES1T, ES2T or EV1T via option DWI11A  If X14 is used as an incremental encoder simulation output, the switchover (X14:4) must be jumpered with DGND (X14:5).
X15:1 X15:2 X15:3 X15:4 X15:5 X15:6 X15:7 X15:8 X15:9	Motor encoder input Signal track A (K1) Signal track B (K2) Signal track C (K0) N.C. Reference potential DGND Signal track A (K1) Signal track B (K2) Signal track C (K0) DC+24 V (max. DC 180 mA)	MCS4_A: sin+ (S2) cos+ (S1) Ref.+ (R1) N.C. REF1 (+10 V for TF/TH) sin- (S4) cos- (S3) Ref.- (R2) AI21 (TF/TH connection)
		The following encoders can be connected: With MCV4_A: • sin/cos encoder type ES1S, ES2S or EV1S • 5 V TTL sensor with DC -24 V voltage supply type ES1R, ES2R or EV1R • 5 V TTL sensor with DC 5 V voltage supply type ES1T, ES2T or EV1T via option DWI11A • HTL encoder with DC 24 V voltage supply type ES1C, ES2C or EV1C (only single-ended signals, no push-pull signals)  With MCS4_A: • 2-pole resolvers, AC 7 V <sub>eff</sub> / 7 kHz
X30:		MCF/MCV/MCS41A: PROFIBUS-DP connection, 9-pole Sub-D socket, pin assignment → page 22
1 ... 10		DIP switch for PROFIBUS settings → page 23
S11 S12:		Change I-signal DC (0(4)...20 mA) ↔ U-signal DC (-10 V...0...10 V, 0...10 V), factory set to U signal. Switch system bus terminating resistor on/off; factory setting: OFF.
TERMINAL		Slot for option DBG11B or options USS21A / USB11A



## Installation

### Wiring diagram for basic unit



#### NOTE


**Note the following for MCS4\_A:** If a TH/TH is connected to X15:5 and X15:9, then no TF/TH connection is permitted at X10:1 and X10:6. Do not use terminal X10:6 in this case, not even as a DC 10 V voltage input. In MOVITOOLS®, set P120 to "TF" and set the corresponding error response with P835.

#### Analog output AO1

For MOVIDRIVE® MCF40A/MCV/MCS40A, the binary output DOØ2 (X10:19) can also be used as 0(4)...20 mA analog output AO1. Switch the settings with parameters P621 "Binary output DOØ2" and P642 "Operating mode AO1."

Function of X10:19	P621 "Binary output DOØ2"	P642 "Operating mode AO1"
Binary output DOØ2	≠ set NO FUNCTION	= set OFF
Analog output AO1	= set NO FUNCTION	≠ set OFF
	≠ set NO FUNCTION	≠ set OFF
No function	= set NO FUNCTION	= set OFF

#### MCV41A: Assigning electronics terminals and the label

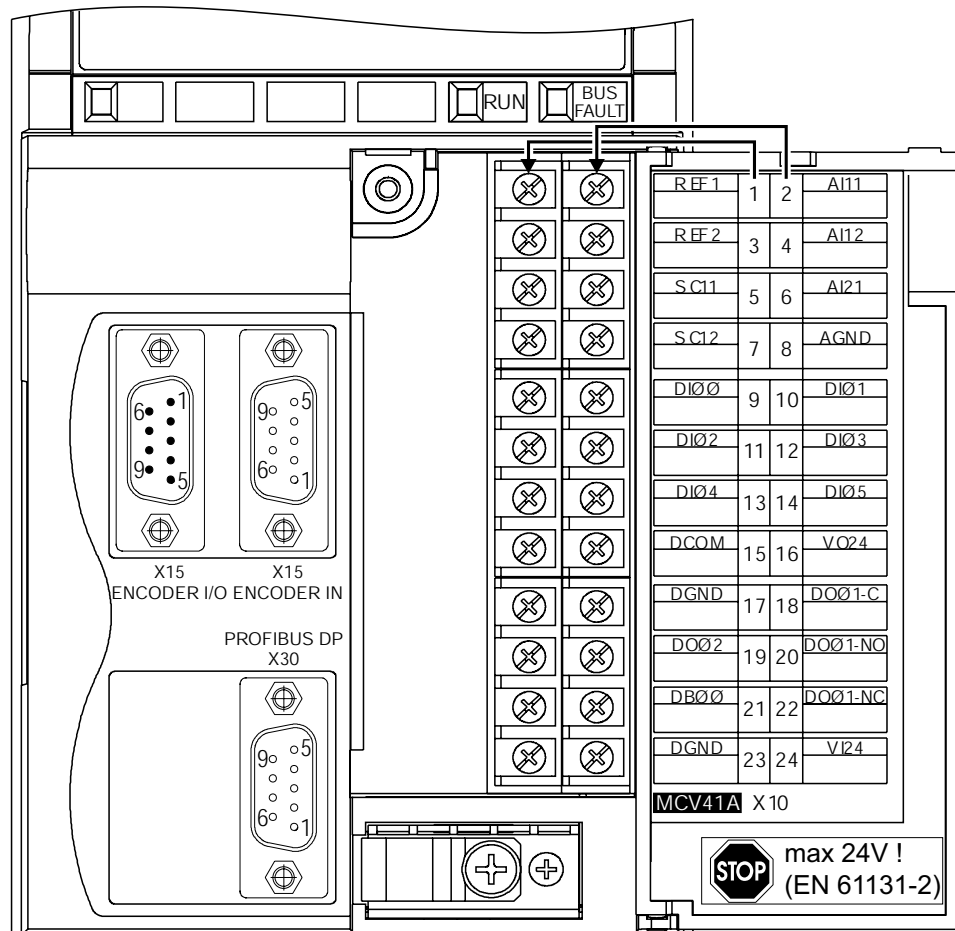

59896AXX

Figure 14: Electronics terminals and label on MCV41A





#### 4.7 Removing the connection unit




**NOTE**

Turn off the supply voltage and DC 24 V auxiliary voltage before removing the connection unit.

For simple installation of the control leads, remove the entire connection unit from the control unit. You have to remove the connection unit to set the DIP switches for PROFIBUS (1 ... 10), INTERBUS (S1...S6), signal switchover n1 (S11) and SBus terminating resistor (S12). Proceed as follows:

1. Open the panel of the connection unit.
2. Loosen retaining screws A and B; they are captive screws and cannot fall out.
3. Remove the connection unit from the control module.

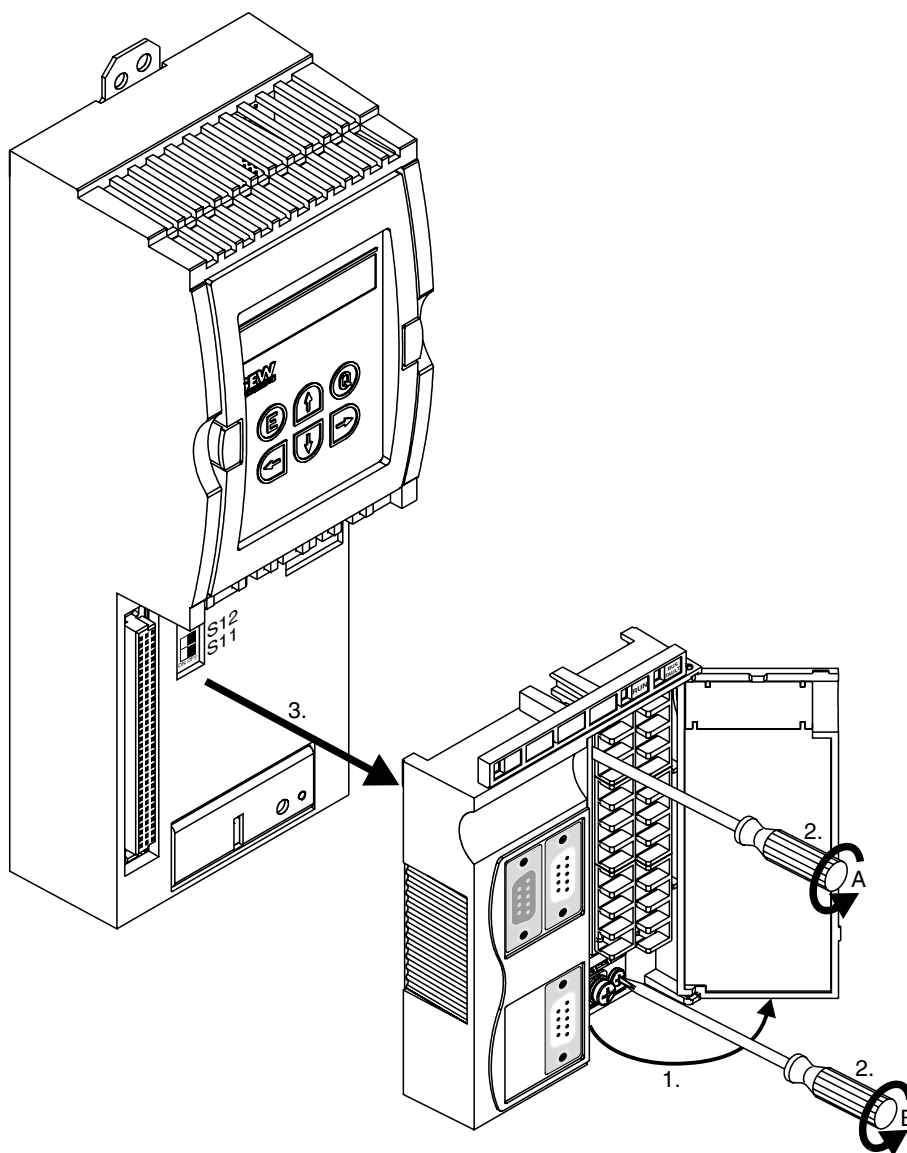

60111AXX

Follow the instructions in reverse order when installing the connection unit.




### 4.8 Assignment of braking resistors, chokes and filters

#### AC 400/500 V units, sizes 1 and 2

MOVIDRIVE® compact MC_4A...-5A3				0015	0022	0030	0040	0055	0075	0110
Size				1				2		
Braking resistors BW... / BW...-T	Trip current	Part number BW...	Part number BW...-T							
BW100-005	$I_F = 0.8 A_{RMS}$	826 269 1								
BW100-006/ BW100-006-T	$I_F = 2.4 A_{RMS}$	821 701 7	1820 419 8							
BW168/BW168-T	$I_F = 3.4 A_{RMS}$	820 604 X	1820 133 4							
BW268/BW268-T	$I_F = 4.2 A_{RMS}$	820 715 1	1820 417 1							
BW147/BW147-T	$I_F = 5 A_{RMS}$	820 713 5	1820 134 2							
BW247/BW247-T	$I_F = 6.5 A_{RMS}$	820 714 3	1820 084 2							
BW347/BW347-T	$I_F = 9.2 A_{RMS}$	820 798 4	1820 135 0							
BW039-012/ BW039-012-T	$I_F = 5.5 A_{RMS}$	821 689 4	1820 136 9							
BW039-026-T	$I_F = 8.1 A_{RMS}$		1820 415 5							
BW039-050-T	$I_F = 11.3 A_{RMS}$		1820 137 7							
<b>Line chokes</b>				<b>Part number</b>						
ND020-013	$\Sigma I_{mains} = AC 20 A$	826 012 5								
ND045-013	$\Sigma I_{mains} = AC 45 A$	826 013 3								
<b>Line filter</b>				<b>Part number</b>						
NF009-503	$V_{max} = AC 550 V$	827 412 6					A			
NF014-503		827 116 X					B		A	
NF018-503		827 413 4							B	
NF035-503		827 128 3								
<b>Output chokes</b>				<b>Internal diameter</b>						
HD001	$d = 50 mm$	813 325 5		for cable cross sections 1.5 ... 16 mm <sup>2</sup> (AWG 16 ... 6)						
HD002	$d = 23 mm$	813 557 6		for cable cross sections $\leq 1.5 mm^2$ (AWG 16)						
HD003	$d = 88 mm$	813 558 4		for cable cross sections $> 16 mm^2$ (AWG 6)						
<b>Output filter (only in VFC operating mode)</b>				<b>Part number</b>						
HF015-503		826 030 3		A						
HF022-503		826 031 1		B	A					
HF030-503		826 032 X			B	A				
HF040-503		826 311 6				B	A			
HF055-503		826 312 4					B	A		
HF075-503		826 313 2						B	A	
HF023-403		825 784 1							B	A
HF033-403		825 785 X								B

A In rated operation (100 %)

B With variable torque load (125 %)

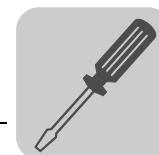

### AC 400/500 V units, sizes 3 to 5

MOVIDRIVE® compact MC_4_A...-503					0150	0220	0300	0370	0450	0550	0750
Size					3			4		5	
Braking resistors BW... / BW...-T BW...-P	Trip current	Part number BW...	Part number BW...-T	Part number BW...-P							
BW018-015/ BW018-015-P	$I_F = 9.1 A_{RMS}$	821 684 3		1820 416 3				C	C		
BW018-035-T	$I_F = 13.9 A_{RMS}$		1820 138 5					C	C		
BW018-075-T	$I_F = 20.4 A_{RMS}$		1820 139 3					C	C		
BW915-T	$I_F = 32.6 A_{RMS}$		1820 413 9								
BW012-025/ BW012-025-P	$I_F = 14.4 A_{RMS}$	821 680 0		1820 414 7							
BW012-050-T	$I_F = 20.4 A_{RMS}$		1820 140 7								
BW012-100-T	$I_F = 28.8 A_{RMS}$		1820 141 5								
BW106-T	$I_F = 47.4 A_{RMS}$		1820 083 4								
BW206-T	$I_F = 54.7 A_{RMS}$		1820 412 0								
<b>Line chokes</b>											
		Part number									
ND045-013	$\Sigma I_{mains} = AC 45 A$	826 013 3				A					
ND085-013	$\Sigma I_{mains} = AC 85 A$	826 014 1				B			A		
ND150-013	$\Sigma I_{mains} = AC 150 A$	825 548 2							B		
<b>Line filter</b>											
		Part number									
NF035-503	$V_{max} = AC 550 V$	827 128 3			A						
NF048-503		827 117 8			B	A					
NF063-503		827 414 2				B	A				
NF085-503		827 415 0					B		A		
NF115-503		827 416 9							B	A	
NF150-503		827 417 7								B	
NF210-503		827 418 5									
<b>Output chokes</b>											
	Inside diameter	Part number									
HD001	d = 50 mm	813 325 5									for cable cross sections 1.5...16 mm <sup>2</sup> (AWG 16...6)
HD003	d = 88 mm	813 558 4									for cable cross sections > 16 mm <sup>2</sup> (AWG 6)
<b>Output filter (only in VFC operating mode)</b>											
		Part number									
HF033-403		825 785 X			A	B / D	A / D				
HF047-403		825 786 8			B	A					
HF450-503		826 948 3					B		E	D	D

- A In rated operation (100 %)
- B With variable torque load (125 %)
- C Connect two braking resistors in parallel and set twice the trip current at F16 (2 x I<sub>F</sub>)
- D Connect two output filters in parallel
- E In rated operation (100 %): One output filter  
With variable torque load (125 %): Connect two output filters in parallel



## Installation

### Assignment of braking resistors, chokes and filters

#### AC 230 V units, sizes 1 to 4

MOVIDRIVE® compact MC_4_A...-2_3				0015	0022	0037	0055	0075	0110	0150	0220	0300
Size				1			2		3		4	
Braking resistors BW...-.../ BW...-...-T	Trip current	Part number BW...	Part number BW...-...-T									
BW039-003	$I_F = 2.7 A_{RMS}$	821 687 8										
BW039-006	$I_F = 3.9 A_{RMS}$	821 688 6										
BW039-012 BW039-012-T	$I_F = 5.5 A_{RMS}$	821 689 4	1 820 136 9									
BW039-026-T	$I_F = 8.1 A_{RMS}$		1 820 415 5									
BW027-006	$I_F = 4.7 A_{RMS}$	822 422 6										
BW027-012	$I_F = 6.6 A_{RMS}$	822 423 4										
BW018-015-T	$I_F = 9.1 A_{RMS}$		1 820 416 3						C	C	C	C
BW018-035-T	$I_F = 13.9 A_{RMS}$		1 820 138 5						C	C	C	C
BW018-075-T	$I_F = 20.4 A_{RMS}$		1 820 139 3						C	C	C	C
BW915-T	$I_F = 32.6 A_{RMS}$		1 820 413 9						C	C	C	C
BW012-025-T	$I_F = 14.4 A_{RMS}$		1 820 414 7									
BW012-050-T	$I_F = 20.4 A_{RMS}$		1 820 140 7									
BW012-100-T	$I_F = 28.8 A_{RMS}$		1 820 141 5									
BW106-T	$I_F = 47.4 A_{RMS}$		1 820 083 4								C	C
BW206-T	$I_F = 54.7 A_{RMS}$		1 820 412 0								C	C
<b>Line chokes</b>				<b>Part number</b>								
ND020-013	$\Sigma I_{mains} = AC 20 A$	826 012 5					A					
ND045-013	$\Sigma I_{mains} = AC 45 A$	826 013 3					B		A			
ND085-013	$\Sigma I_{mains} = AC 85 A$	826 014 1							B		A	
ND150-013	$\Sigma I_{mains} = AC 150 A$	825 548 2									B	
<b>Line filter</b>				<b>Part number</b>								
NF009-503	$V_{max} = AC 550 V$	827 412 6			A							
NF014-503		827 116 X			B	A						
NF018-503		827 413 4				B						
NF035-503		827 128 3										
NF048-503		827 117 8							A			
NF063-503		827 414 2							B			
NF085-503		827 415 0									A	
NF115-503		827 416 9									B	
<b>Output chokes</b>				<b>Part number</b>								
HD001	d = 50 mm	813 325 5		for cable cross sections 1.5 ... 16 mm <sup>2</sup> (AWG 16 ... 6)								
HD002	d = 23 mm	813 557 6		for cable cross sections ≤ 1.5 mm <sup>2</sup> (AWG 16)								
HD003	d = 88 mm	813 558 4		for cable cross sections > 16 mm <sup>2</sup> (AWG 6)								


A In rated operation (100 %)

B With variable torque load (125 %)


C Connect two braking resistors in parallel and set twice the trip current on F16 ( $2 \times I_F$ )



### 4.9 Installing the system bus (SBus)

	<b>NOTE</b>
	<b>Only if P884 "SBus baud rate" = 1000 kBaud:</b>
	Do not combine MOVIDRIVE® compact MCH4_A units with other MOVIDRIVE® units in the same system bus system. The units may be combined at baud rates ≠ 1000 kBaud.

#### Wiring diagram for SBus MOVIDRIVE® compact MCF/MCV/MCS4\_A

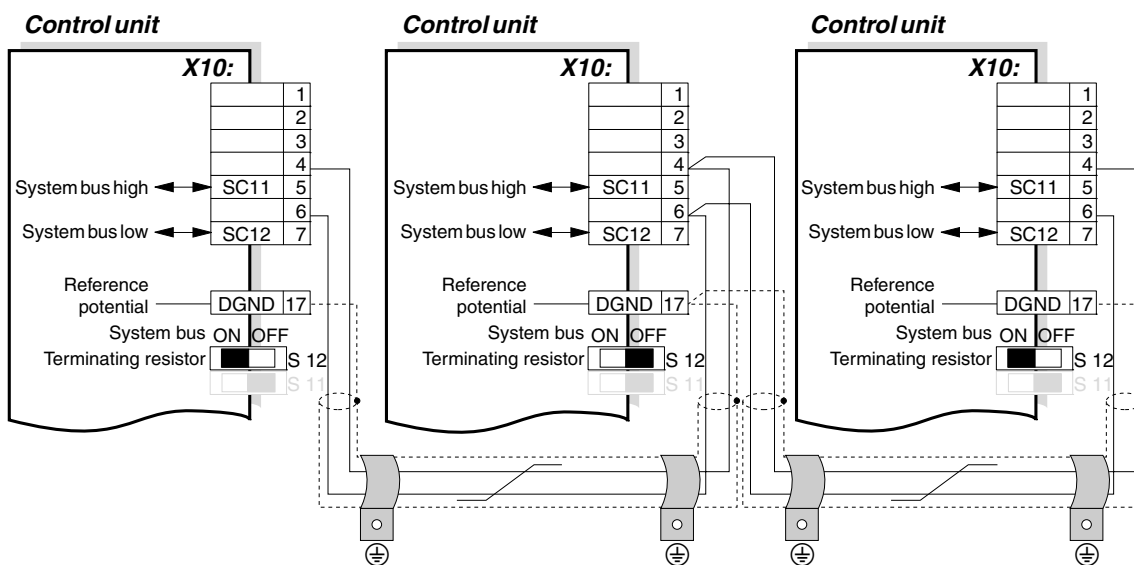

02411AEN

#### Cable specification

- Use a 2-core twisted and shielded copper cable (data transmission cable with braided copper shield). The cable must meet the following specifications:
  - Core cross section 0.75 mm<sup>2</sup> (AWG 18)
  - Line resistance 120 Ω at 1 MHz
  - Capacitance per unit length ≤ 40 pF/m at 1 kHz
 Suitable cables include CAN bus or DeviceNet cables.

#### Shielding

- Connect the shield at both ends to the electronics shield clamp of the inverter or the master controller and ensure the shield is connected over a large area. Also connect the ends of the shield to DGND.

#### Cable length

- The permitted total cable length depends on the baud rate setting of the SBus (P816):
  - 125 kbaud → 320 m
  - 250 kbaud → 160 m
  - **500 kBaud** → **80 m**
  - 1000 kbaud → 40 m

#### Terminating resistor

- Switch on the system bus terminating resistor (S12 = ON) at the start and end of the system bus connection. Switch off the terminating resistor at the other devices (S12 = OFF).


**Installation**Installing the system bus (SBus)

---

**STOP!**

There must not be any potential displacement between the units connected with the SBus. This can restrict the functionality of the units.

Take suitable measures to avoid a potential displacement, e.g. by connecting the unit ground connectors using a separate lead.

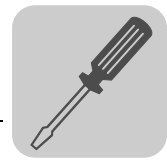

### 4.10 Connecting option USS21A (RS232 and RS485)

**Part number** Interface adapter option USS21A: 822 914 7

**RS232 connection**

- Use a standard shielded interface cable with a 1:1 connection for connecting the RS232 interface.

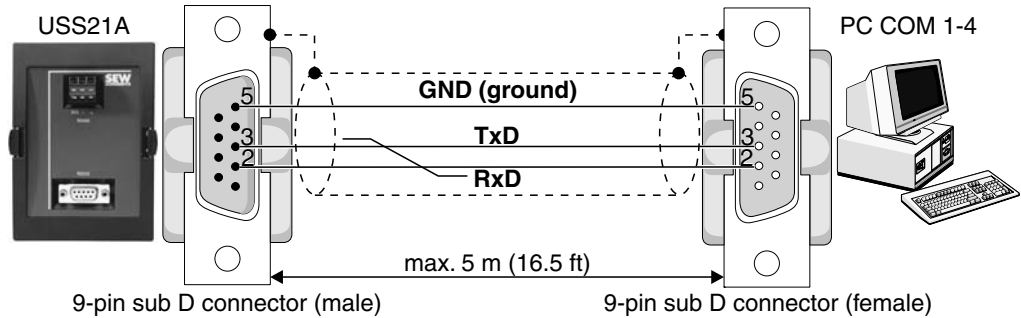


Figure 15: USS21A - PC connection cable (1:1 connection assignment)

02399AEN

**RS485 connection**

Read the following connection instructions carefully:

- Use a 2-core twisted and shielded copper cable (data transmission cable with braided copper shield). The cable must meet the following specifications:
  - Core cross section 0.5 ... 0.75 mm<sup>2</sup> (AWG 20 ... 18)
  - Cable resistance 100 ... 150 Ω at 1 MHz
  - Capacitance per unit length ≤ 40 pF/m at 1 kHz
- Connect the shield at both ends to the electronics shield clamp of the inverter and ensure the shield is connected over a large area. Also connect the ends of the shield to DGND.

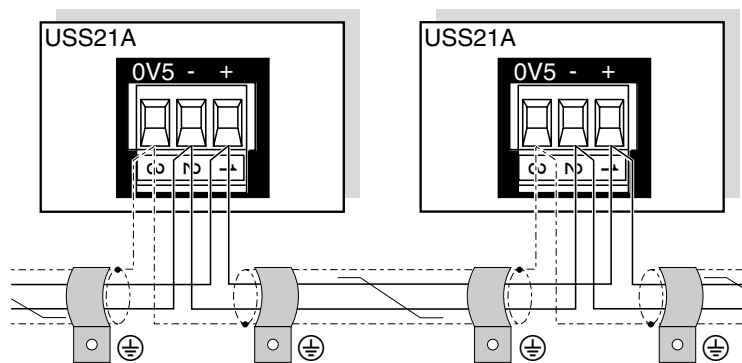


Figure 16: RS485 interface of USS21A

00997CXX

**EIA standard**

The RS485 interface of the USS21A complies with the EIA standard:

- Max. transmission rate 9600 Baud
- Max. 32 stations (each unit with USS21A counts as 2 stations)
- Max. total cable length 200 m
- Dynamic terminating resistor with fixed installation



## Installation

### Connecting the interface adapter USB11A / DKG11A

#### 4.11 Connecting the interface adapter USB11A / DKG11A

- Part number**
- 824 831 1 Interface adapter USB11A
  - 819 558 7 Serial interface cable DKG11A (length 3 m)


**Description** Option USB11A enables a PC or laptop with a USB interface to be connected to the **TERMINAL** slot of **MOVIDRIVE® compact**. The USB11A interface adapter supports USB1.1 and USB2.0.

- Scope of delivery**
- The scope of delivery for the USB11A includes:
    - USB11A interface adapter
    - USB connection cable PC - USB11A (type USB A-B)
    - CD-ROM with drivers and MOVITOOLS®
  - The USB11A interface adapter supports USB 1.1 and USB 2.0.
  - The scope of delivery for the USB11A **does not** include:
    - DKG11A connection cable (length 3 m, part number 819 558 7) for connecting **MOVIDRIVE® compact** - USB11A.

#### Connecting **MOVIDRIVE®** - **USB11A** - **PC**

- **MOVIDRIVE® compact** is connected to USB11A (cable RJ10-TERMINAL) using the serial interface cable type DKG11A (length 3 m, part number 819 558 7).
- USB11A is connected to the PC using a commercially available, shielded USB connection cable type USB A-B.


MOVIDRIVE® compact

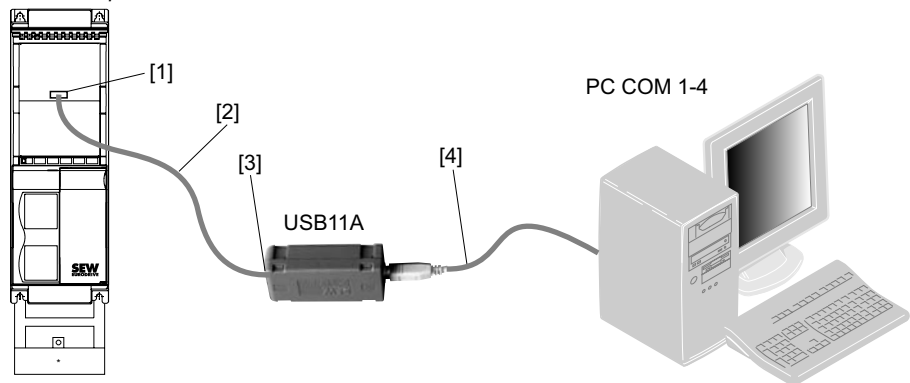


59901AXX

- [1] **TERMINAL** connection on **MOVIDRIVE® compact**
- [2] DKG11A interface cable, length 3 m
- [3] USB11A interface adapter
- [4] USB connection cable type USB A-B



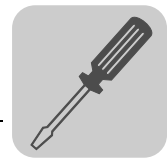

**Dimension drawing**

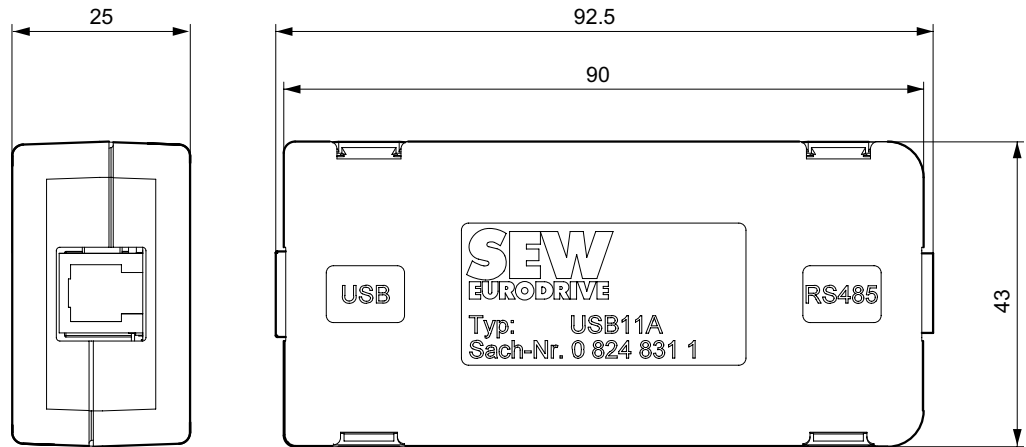

55732BXX

Figure 17: USB11A dimension drawing, dimensions in mm

**Technical data**

USB11A	
Part number	824 831 1
Ambient temperature	0 ... 40 °C
Storage temperature	-25 °C ... +70 °C (according to EN 60721-3-3, class 3K3)
Enclosure	IP20
Weight	300 g
Dimensions	92.5 x 43 x 25 mm



## Installation

### Connection of motor encoder and external encoder

#### 4.12 Connection of motor encoder and external encoder

	<b>NOTE</b>
	<p>The wiring diagrams do not show the view onto the cable end. They show the connection to the motor or MOVIDRIVE®.</p> <p>The core colors specified in the wiring diagrams are in accordance with the IEC 757 color code and correspond to the core colors used in the prefabricated cables from SEW.</p> <p>For more details, refer to the "SEW Encoder Systems" manual, which can be obtained from SEW-EURODRIVE.</p>

#### General installation instructions


- Max. line length inverter - encoder: 100 m with a capacitance per unit length  $\leq 120$  nF/km.
- Core cross section  $0.20 \dots 0.5 \text{ mm}^2$  (AWG 24 ... 20)
- If you cut a core of the encoder cable, isolate the cut-off end of the core.
- Use shielded cables with twisted pair conductors and make sure they are grounded on both ends over a large surface area:
  - At the encoder in the cable gland or in the encoder plug
  - At the inverter in the housing of the Sub-D connector and at the electronics shield clamp of the inverter
- Use an encoder connector and Sub-D connector with metal housing.
- Route the encoder cable separately from the power cables.
- Encoder with cable gland: Observe the permitted diameter of the encoder cable to ensure that the cable gland functions correctly.

#### Shielding


##### On the inverter

Connect the shield of the encoder/resolver cable over a large area.

Connect the shield on the inverter end in the housing of the sub D connector (→ following illustration).

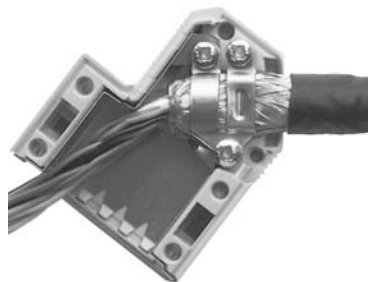


01939BXX

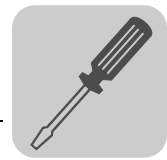

**On the encoder/resolver**

Connect the shield on the encoder/resolver side at the respective earthing clamps (→ following illustration). When using an EMC screw fitting, apply the shield over a wide area in the cable gland. For drives with a plug connector, connect the shield on the encoder plug.

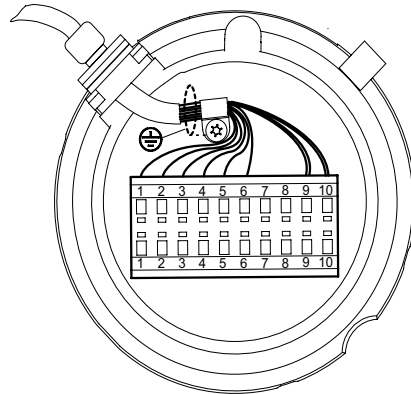

55513AXX

**Prefabricated cables**

SEW-EURODRIVE offers prefabricated cables for connecting encoders/resolvers. We recommend using these prefabricated cables.

**Motor encoder**

You can connect the following motor encoders at X15 on the MOVIDRIVE® compact units:

- MCV4\_A
  - High-resolution sin/cos encoders with signal voltage AC 1 V<sub>SS</sub>
  - TTL sensors with signal level to RS422
  - HTL sensors
  
- MCS4\_A
  - 2-pole resolvers, AC 7 V<sub>eff</sub> / 7 kHz



05232AXX

Figure 18: SEW encoder with plug connector or connecting terminal

**Voltage supply**

Connect encoders with DC 12 ... 24 V voltage supply (max. DC 180 mA) directly at X15. These encoders are then powered by the inverter.

Connect encoders with a DC 5 V voltage supply via the "DC 5 V encoder power supply type DWI11A" option (part number 822 759 4).




## Installation

### Connection of motor encoder and external encoder

**sin/cos encoders** High-resolution sin/cos encoders ES1S, ES2S or EV1S are recommended for operation with MOVIDRIVE® compact MCV4\_A. Connect the sin/cos encoder as follows:

Connection to MCV4\_A

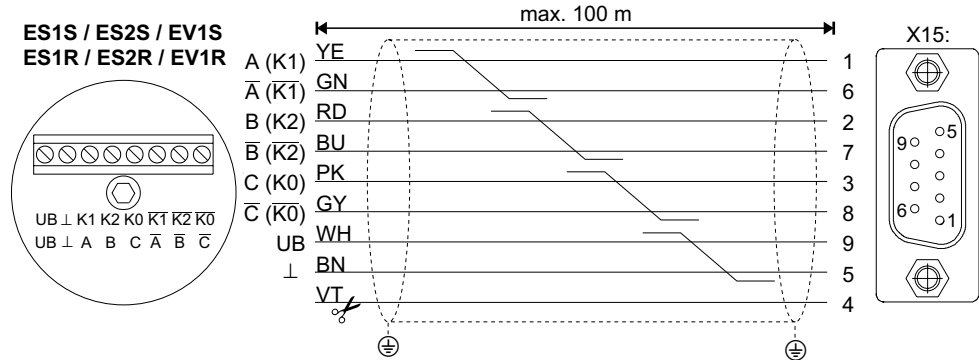


59849AXX

Figure 19: Connecting the sin/cos encoder to MCV4\_A as a motor encoder

Cut off the violet conductor (VT) of the cable at the encoder end.

Part numbers of the prefabricated cables:

- For fixed routing: 198 829 8
- For cable carrier routing: 198 828 X

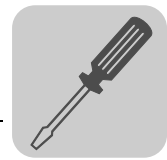

### TTL sensor

TTL sensors from SEW-EURODRIVE are available with DC 12...24 V and DC 5 V voltage supply.


### DC 12...24 V voltage supply

Connect TTL sensors with DC 12 ... 24 V voltage supply ES1R, ES2R or EV1S in the same way as the high-resolution sin/cos encoders.

### DC 5 V voltage supply

TTL sensors with a DC 5 V voltage supply ES1T, ES2T or EV1T must be connected via the "DC 5 V encoder power supply type DWI11A" option (part number 822 759 4). You must also connect the sensor cable to be able to correct the supply voltage of the encoder. Connect this encoder as follows:

### Connection to MCV4\_A

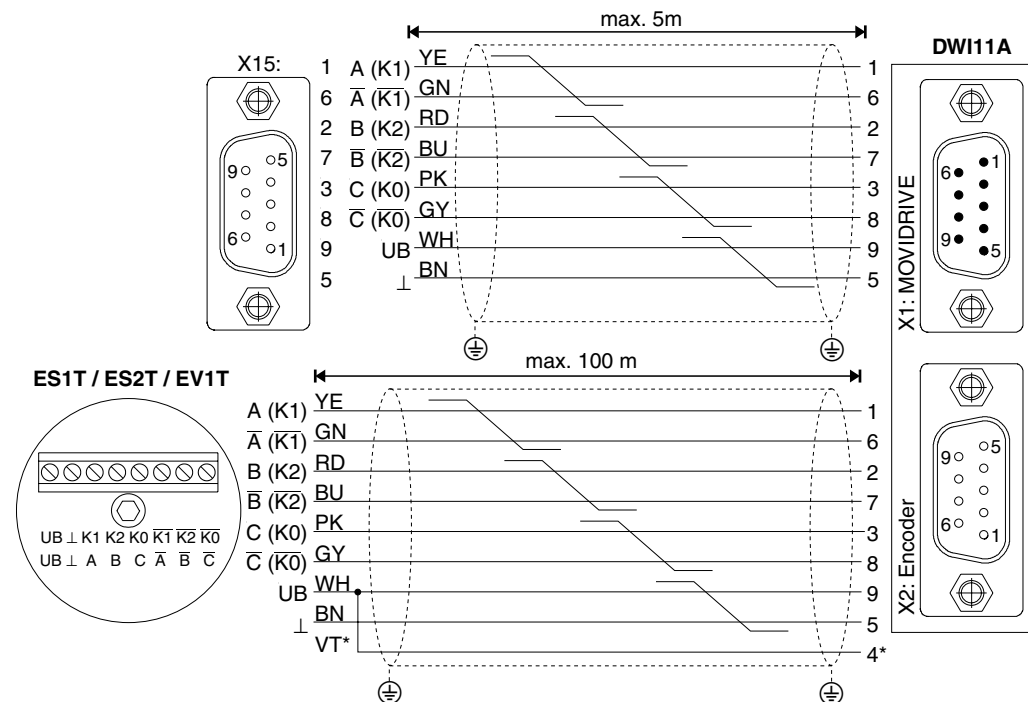

59851AXX

Figure 20: Connecting the TTL sensor via DWI11A to MCV4\_A as a motor encoder

\* Connect the sensor cable (VT) on the encoder to UB, do not jumper with DWI11A!

Part numbers of the prefabricated cables:

- MOVIDRIVE® compact MCV4\_A, X15: → DWI11A X1:MOVIDRIVE
  - Fixed routing only: 814 344 7
- Encoders ES1T / ES2T / EV1T → DWI11A X2:Encoder
  - For fixed routing: 198 829 8
  - For cable carrier routing: 198 828 X




## Installation

### Connection of motor encoder and external encoder

**HTL encoder  
(only for  
MCV4\_A)**

If you are using an **ES1C, ES2C or EV1C HTL sensor**, do not connect the negated channels  $\bar{A}$  (K1),  $\bar{B}$  (K2) and  $\bar{C}$  (K0).

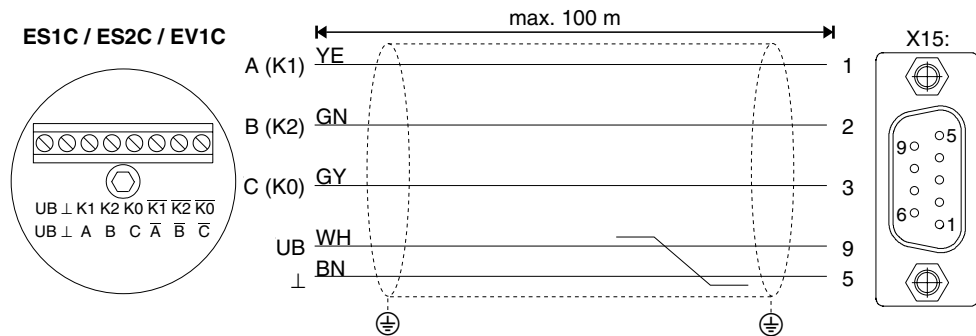

59853AXX

Figure 21: Connecting the HTL encoder to MCV4\_A as a motor encoder

Part numbers of the prefabricated cables:

- For fixed routing: 198 932 4
- For cable carrier routing: 198 931 6



**Resolver (only for MCS4\_A)**

Depending on the motor type and motor configuration, you can connect the resolver using either a plug connector or via the terminal box.

**DS56, CM71...112 with plug connector**

The resolver connections are accommodated in a plug connector.  
 Plug connector DS56, CM: Intercontec, type ASTA021NN00 10 000 5 000

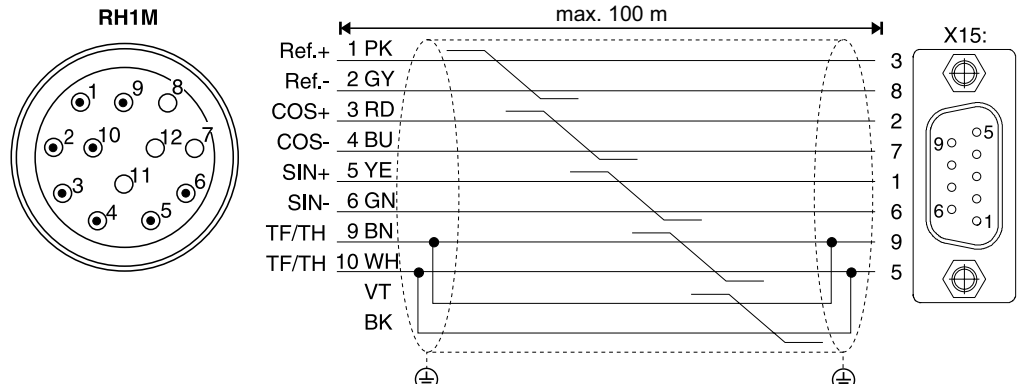


Figure 22: Resolver connection for DS56 and CM motors with plug connector

Part numbers of the prefabricated cables:

- For fixed routing: 199 487 5
- For cable carrier routing: 199 319 4

Part numbers of the prefabricated extension cables:

- For fixed routing: 199 542 1
- For cable carrier routing: 199 541 3

**DS56, CM71...112 with terminal box**

The resolver connections are accommodated in the terminal box on a 10-pole Phoenix terminal strip.

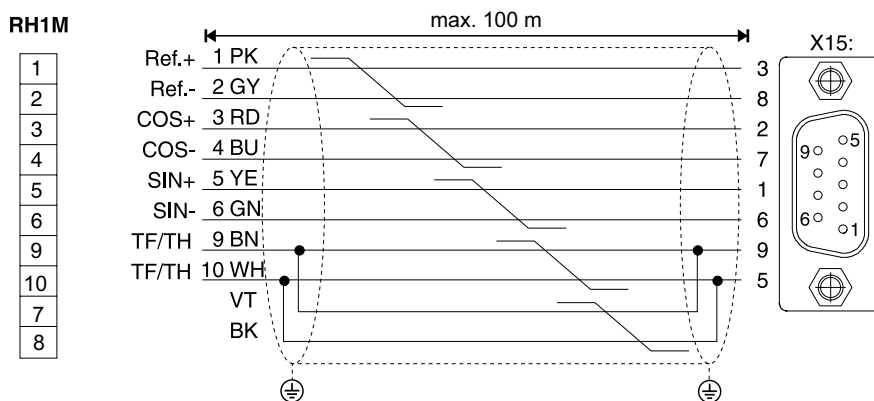


Figure 23: Resolver connection for DS and CM motors with terminal box

Cut off the violet conductor (VT) of the cable at the encoder end.

Part numbers of the prefabricated cables:

- For fixed routing: 199 589 8
- For cable carrier routing: 199 590 1



## Installation

### Connection of motor encoder and external encoder

#### External encoders

You can connect the following motor encoders at X14 on the MOVIDRIVE<sup>®</sup> compact MCV/MCS4\_A units:

- DC 5 V TTL sensors with signal level to RS422

#### Voltage supply

Connect encoders with DC 12/24 V voltage supply (max. 180 mA) directly at X14. These encoders are then powered by the inverter.


Connect encoders with a DC 5 V voltage supply via the "DC 5 V encoder power supply type DWI11A" option (part number 822 759 4).

#### DC 5 V TTL sensor

DC 5 V TTL sensors from SEW-EURODRIVE are available with D 24 V and DC 5 V voltage supply.

#### DC 24 V voltage supply

Connection to MCV/MCS4\_A:

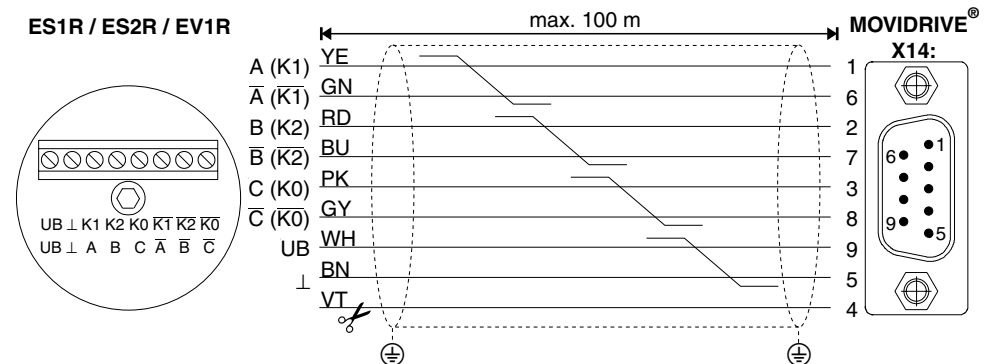

59859AXX

Figure 24: Connect the TTL sensor to MCV/MCS4\_A as an external encoder

Cut off the violet conductor (VT) of the cable at the encoder end.

Part number of the prefabricated cable:

- Fixed routing only: 815 354 X






**DC 5 V voltage supply**

Connect DC 5 V TTL sensors with a DC 5 V voltage supply ES1T, ES2T or EV1T using the "DC 5 V encoder power supply type DWI11A" option (part number 822 759 4). You must also connect the sensor cable to be able to correct the supply voltage of the encoder.

Connection to MCV/MCS4\_A:

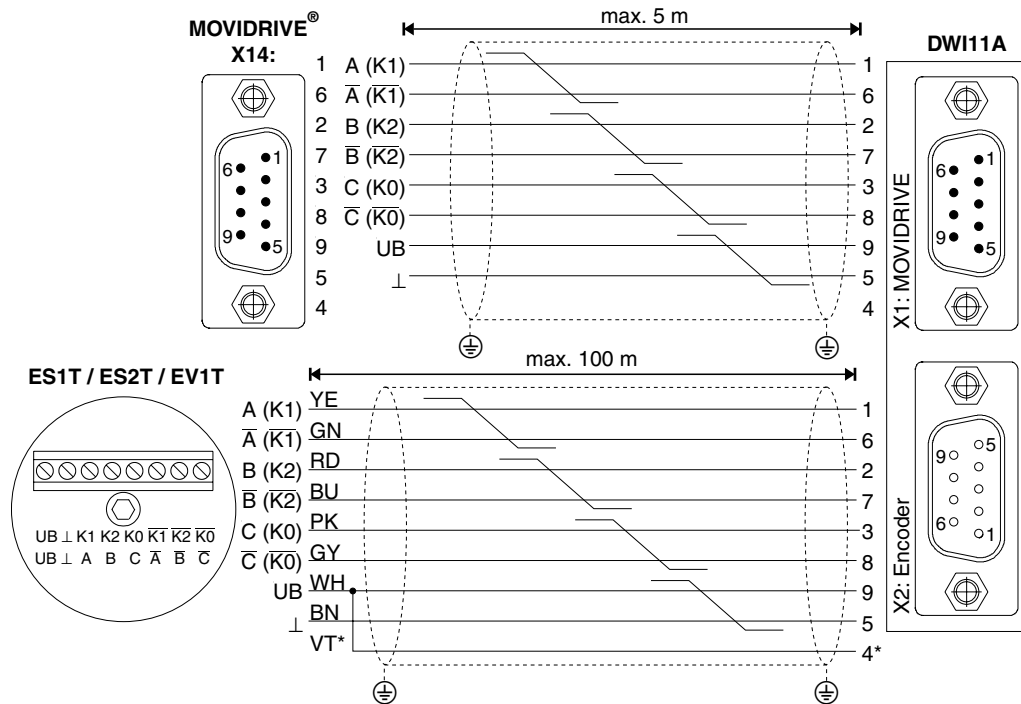

59861AXX

Figure 25: Connecting the TTL sensor to MCV/MCS4\_A via DWI11A as an external encoder

\* Connect the sensor cable (VT) on the encoder to UB, do not jumper with DWI11A!

Part numbers of the prefabricated cables:

- Encoders ES1T / ES2T / EV1T → DWI11A X2:Encoder
  - For fixed routing: 198 829 8
  - For cable carrier routing: 198 828 X



## Installation


### Connection of motor encoder and external encoder

#### Incremental encoder simulation

You can also use X14 as the output for incremental encoder simulation. For this purpose, you must jumper "switchover" (X14:4) with DGND (X14:5). X14 then supplies incremental encoder signals with a signal level in accordance with RS422. The number of pulses is:

- For MCV4\_A as at X15 motor encoder input
- For MCS4\_A 1024 pulses/revolution

#### Connection to MCV/MCS4\_A

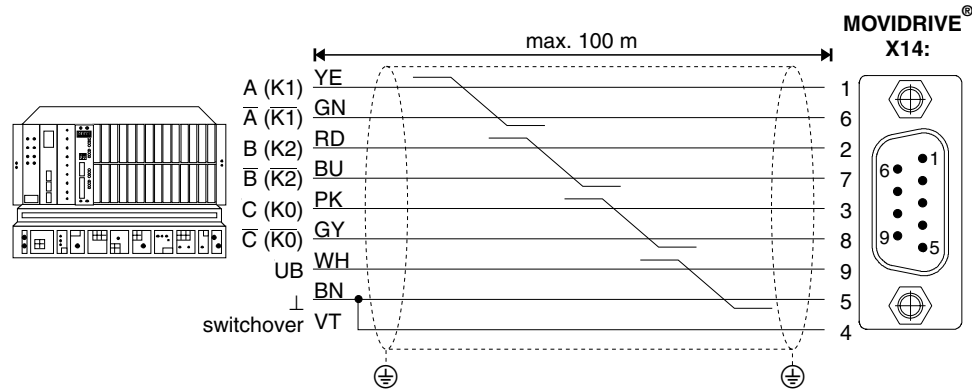

59865AEN

Figure 26: Connecting the incremental encoder simulation to MCV/MCS4\_A

Part number of the prefabricated cable:

- Fixed routing only: 815 354 X



**Master/slave connection**

X14-X14 connection (= master/slave connection) of two MOVIDRIVE<sup>®</sup> compact units.

MCV/MCS4\_A

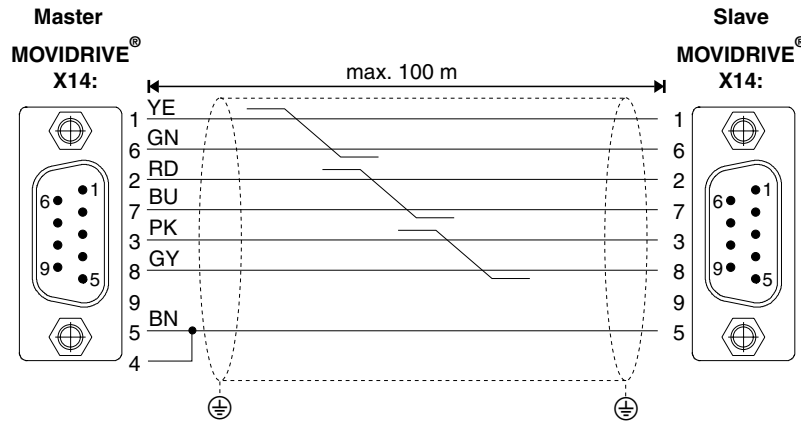


Figure 27: X14-X14 connection for MCV/MCS4\_A

59866AXX

Part number of the prefabricated cable:

- Fixed routing only: 815 355 8



**NOTE**

The Sub-D sockets on the cable ends are labeled "MASTER" and "SLAVE." Make sure that you plug the socket labeled "MASTER" into X14 of the master unit and the socket labeled "SLAVE" into X14 of the slave unit.



## 5 Startup

### 5.1 General startup instructions

	<b>! DANGER!</b>
	<p>Uncovered power connections. Severe or fatal injuries from electric shock.</p> <ul style="list-style-type: none"> <li>• Install the touch guard according to the regulations.</li> <li>• Never start the unit if the touch guard is not installed.</li> </ul>

	<b>NOTE</b>
	<p>Startup in accordance with this section is necessary for the VFC operating modes with speed control, all CFC operating modes and SERVO operating modes. The startup functions described in this section are used to set the inverter so it is optimally adapted to the connected motor and to the given boundary conditions.</p>

#### Prerequisites

The drive must be configured correctly to ensure that startup is successful. Refer to the *MOVIDRIVE<sup>®</sup> compact* system manual (→ sections 4 and 5) for detailed project planning instructions and an explanation of the parameters.

#### VFC operating modes without speed control


The factory settings of *MOVIDRIVE<sup>®</sup> compact* drive inverters are set to be taken into operation with the SEW motor adapted to the correct power level (MC\_4\_A...-5\_3: 4-pole and rated voltage 3 × AC 400 V / 50 Hz or MC\_4\_A...-2\_3: 4-pole and rated voltage 3 × AC 230 V / 60 Hz). The motor can be connected and the drive started immediately in accordance with the section "Starting the motor" (→ page 63) .

#### Inverter/motor combinations

AC 400/500 V units

The following tables indicate which inverter/motor combinations this applies to.

MOVIDRIVE <sup>®</sup> compact MCF4_A or MCV4_A in VFC operating mode	SEW motor
0015-5A3-4	DT90L4
0022-5A3-4	DV100M4
0030-5A3-4	DV100L4
0040-5A3-4	DV112M4
0055-5A3-4	DV132S4
0075-5A3-4	DV132M4
0110-5A3-4	DV160M4
0150-503-4	DV160L4
0220-503-4	DV180L4
0300-503-4	DV200L4
0370-503-4	DV225S4
0450-503-4	DV225M4
0550-503-4	DV250M4
0750-503-4	DV280S4

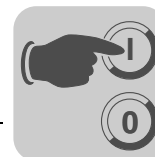

AC 230 V units

MOVIDRIVE <sup>®</sup> compact MCF4_A or MCV4_A in VFC operating mode	SEW motor
0015-2A3-4	DT90L4
0022-2A3-4	DV100M4
0037-2A3-4	DV100L4
0055-2A3-4	DV132S4
0075-2A3-4	DV132M4
0110-203-4	DV160M4
0150-203-4	DV180M4
0220-203-4	DV180L4
0300-203-4	DV225S4

Hoist  
applications

	<p><b>! DANGER!</b></p>
	<p>Risk of fatal injury if the hoist falls. Severe or fatal injuries. Do not use MOVIDRIVE<sup>®</sup> compact drive inverters for any safety functions in conjunction with hoist applications. Use monitoring systems or mechanical protection devices to ensure safety.</p>



#### 5.2 Preliminary work and resources

- Check the installation.

	<b>! DANGER!</b>
	<p>Risk of crushing if the motor starts up unintentionally. Severe or fatal injuries.</p> <ul style="list-style-type: none"> <li>• Prevent unintentional start up of the motor by implementing the following measure:             <ul style="list-style-type: none"> <li>– Connect terminal X10:9 "/CONTROLLER INHIBIT" with X10:15 "DCOM".</li> </ul> </li> <li>• Furthermore, additional safety precautions must be taken depending on the application to avoid injury to people and damage to machinery.</li> </ul>

- Performing **startup with the DBG11B keypad**:  
Plug the DBG11B keypad into the TERMINAL slot.
- For **startup with a PC and MOVITOOLS®**:  
Plug the USS21A or USB11A option into the TERMINAL slot. Connect the USS21A/USB11A option to the PC with an interface cable (RS232). If not already available, install MOVITOOLS® on the PC. Start MOVITOOLS®.
- Switch on the mains voltage and, if applicable, the DC 24 V supply voltage.  
If you are using the DBG11B keypad, the following message is displayed for approximately 13 s.

---

SELFTEST

MOVIDRIVE

---

- Check that the default parameter settings are correct (e.g. factory setting).
- Check the terminal assignment that has been set (→ P60\_).

	<b>NOTE</b>
	<p>A group of parameter values is <b>changed automatically</b> at startup. The description of parameter P700 "Operating modes" explains which parameters are affected by this step. Refer to the MOVIDRIVE® <i>compact</i> system manual, section 4 "Parameters", for a <b>description of the parameters</b>.</p>



### 5.3 Startup with the DBG11B keypad

**General information**

Startup with the **DBG11B keypad** is only possible with **MCF and MCV/MCH** in the **VFC operating modes**. Startup in CFC and SERVO operating modes is only possible using the MOVITOOLS® operating software.

**Required data**

The following data is required to ensure startup is successful:

- Motor type (SEW or non-SEW motor)
- Motor data
  - Rated voltage and rated frequency
  - Additionally for non-SEW motors: rated current, rated power, power factor  $\cos\phi$  and rated speed
- Rated power supply voltage

The encoder type and encoder resolution are required for starting up the speed controller.

SEW encoder type	Startup parameter	
	Encoder type	Encoder resolution
AS1H, ES1H, AV1H	HIPERFACE®	1024
ES1S, ES2S, EV1	SINE ENCODER	1024
ES1R, ES2R, EV1R ES1T <sup>1)</sup> , ES2T <sup>1)</sup> , EV1T <sup>1)</sup>	INCREM. ENCOD. TTL	1024
ES1C, ES2C, EV1C	INCREM. ENCOD. HTL	1024

1) The DC 5 V TTL sensors ES1T, ES2T and EV1T must be connected via the DWI11A option (→ section Installation).

- Motor data
  - SEW motor: Brake yes or no and flywheel fan yes or no.
  - Non-SEW motor: Mass moment of inertia of motor, brake and fan
- Stiffness of the control system (factory setting = 1; suitable as the initial value for most applications)
  - If the drive tends to oscillate → setting < 1
  - Transient recovery time is too long → Setting > 1
  - Setting range for most applications: 0.70 ... 1 ... 1.40
- Converted mass moment of inertia of the load (gear unit + driven machine) on the motor shaft If the mass moment of inertia of the load cannot be determined → use 1...20 times the value of the mass moment of inertia of the motor.
- Time required for the shortest ramp

	<b>NOTE</b>
	<p>If you are using a TTL sensor (encoder type INCREM.ENCODER TTL), sin/cos encoder (encoder type SINE ENCODER):</p> <ul style="list-style-type: none"> <li>• Activate encoder monitoring (P504 = "ON") after completing startup. The function and voltage supply of the encoder will then be monitored.</li> <li>• If a Hiperface® encoder is connected, it is always monitored regardless of the setting of parameter P504. Encoder monitoring is not a safety function!</li> </ul>




## Startup

### Startup with the DBG11B keypad

#### Startup functions of DBG11B

Detailed description of the keypad → Sec. "Operating displays":

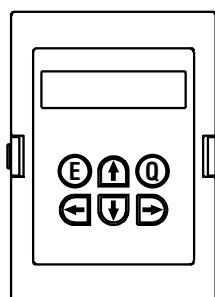

01406AXX

← and → at the same time

Commence startup.

↑ key

Next menu item or next highest value in edit mode.

↓ key

Previous menu item or next lowest value in edit mode.

→ key

Go one menu level lower or enter edit mode of the menu item.

← key

Go one menu level higher or leave edit mode of the menu item.

Q key

Terminate startup and go back to basic display.

E key

Terminate startup and go back to basic display.

#### Switching the language on the DBG11B keypad

- The keypad is in the basic display.
- Press the ↓ key twice. Parameter group 8 is displayed.
- Press the → key twice and the ↑ key once. Parameter P801 "Language" is displayed. Go to the edit mode by pressing the → key. Use the ↓ or ↑ keys to select the language and leave edit mode by pressing the ← key.
- Press the Q button. The basic display appears.

```
CONTROLLER INHIBIT
CURRENT:          0 A
```


```
8..  UNIT
      FUNCTIONS
```

```
801  GERMAN
      LANGUAGE
```





**Structure of the startup menu**

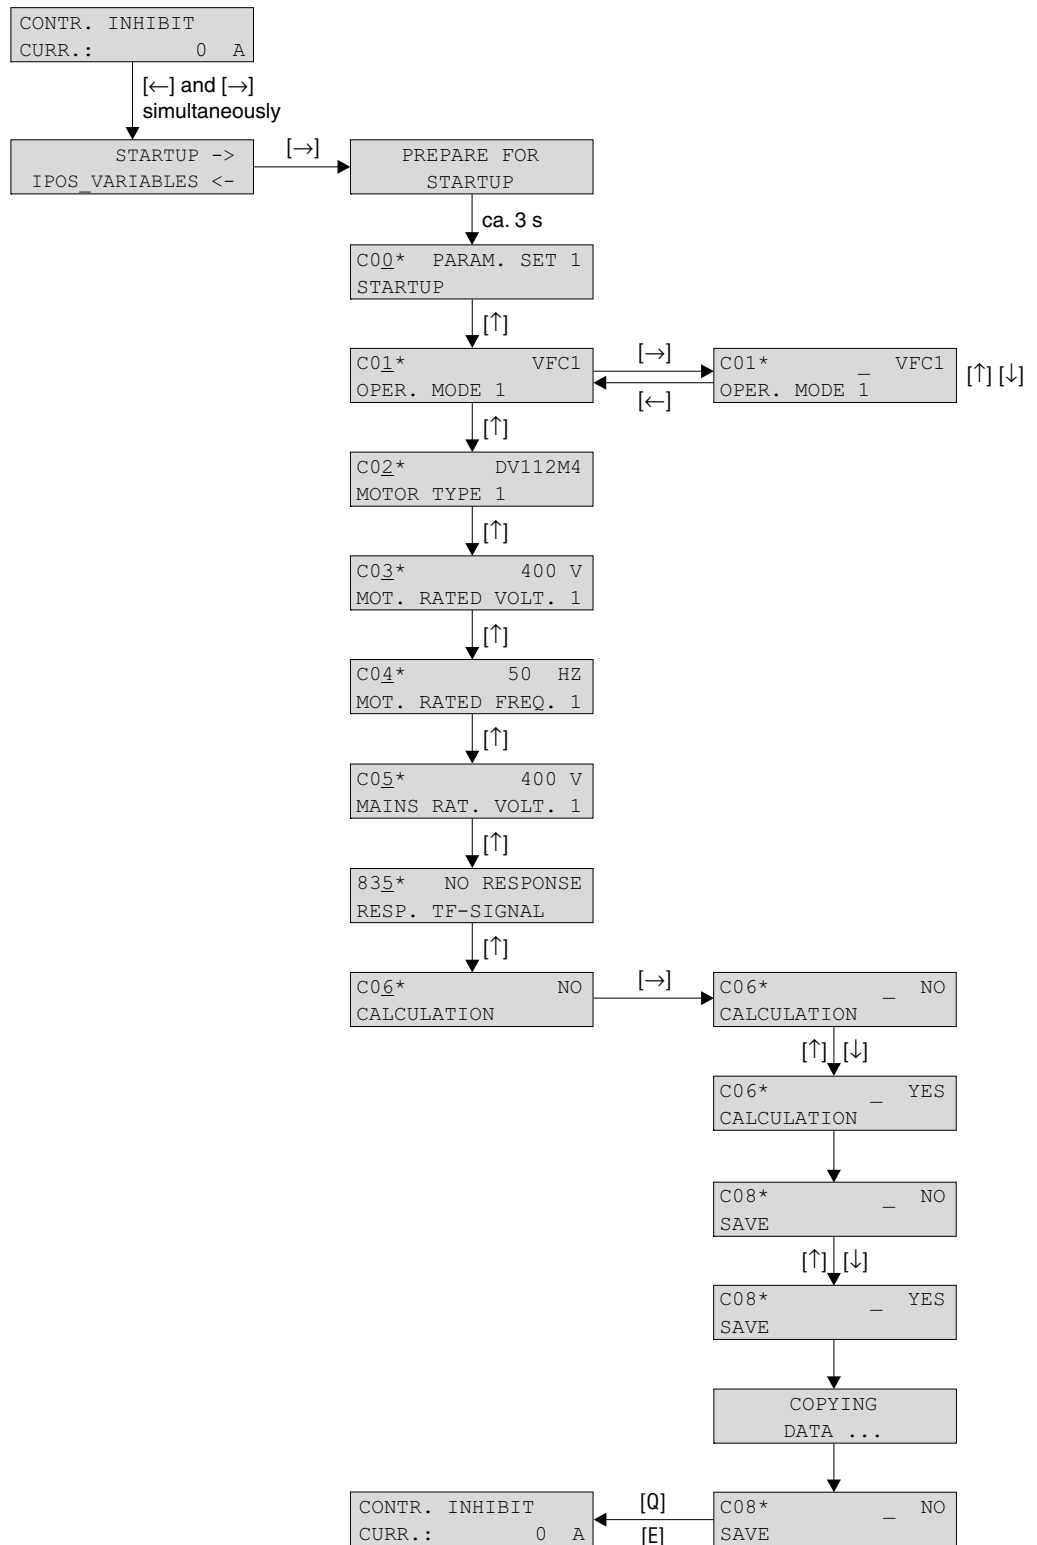

02400AEN

Figure 28: Structure of the startup menu



## Startup

### Startup with the DBG11B keypad

#### Startup procedure

1. Enter a "0" signal at terminal DIØØ "/CONTROLLER INHIBIT".

```
CONTROLLER INHIBIT
CURRENT:          0 A
```

2. Activate the startup menu by pressing the ← and → keys on the DBG11B at the same time.

```
STARTUP PARAMET. →
IPOS_VARIABLES ←
```

3. Press the → key to commence startup. The first window of the startup menu appears. The menu items are indicated with a \* as the fourth character. Menu items that only appear in the startup menu start with a \*. The other menu items have the number of the parameter list (page 67). Once you have finished with a menu item, use the ↑ key to go to the next menu item.

```
STARTUP PARAMET.
PREPARE FOR STARTUP
```

4. Select a parameter set, e.g. parameter set 1.

```
C00* PARAM. SET 1
STARTUP PARAMET.
```

5. Set the operating mode, e.g. VFC1.

```
C01*          VFC1
OPERATING MODE 1
```

6. Select the connected motor. If a 2 or 4-pole SEW motor is connected, select the correct motor from the list. If a non-SEW motor or an SEW motor with more than four poles is connected, select "NON-SEW MOTOR" from the list.

```
C02*          DV112M4
MOTOR TYPE 1
```

```
C02*          NON-SEW
MOTOR
MOTOR TYPE 1
```

7. Enter the rated motor voltage for the selected connection type according to the value specified on the nameplate.

```
C03*          400 V
RATED MOTOR VLTG 1
```

Example: Nameplate 230Δ/400∟ 50 Hz

∟ connection → Enter "400 V".

Δ connection, transition point at 50 Hz → enter "230 V".

Δ connection, transition point at 87 Hz → Also enter "230 V".

However, after startup first set parameter P302 "MAXIMUM SPEED 1" to the value for 87 Hz and then start the drive.

Example: Nameplate 400Δ/690∟ 50 Hz

Only Δ connection possible → Enter "400 V".

∟ connection is not possible.

8. Enter the rated frequency specified on the motor nameplate.

Example: 230Δ/400∟ 50 Hz

Enter 50 Hz in ∟ and Δ connection.

```
C04*          50 Hz
RATED MOTOR FREQ. 1
```

#### FOR SEW MOTORS

9. The motor values are stored for SEW 2 and 4-pole motors and need not be entered.

#### FOR NON-SEW MOTORS

9. Enter the following motor nameplate data:
- Rated motor current, note the connection type (∟ or Δ).
  - Rated power of the motor
  - Power factor  $\cos\phi$
  - Rated speed of the motor

10. Enter the rated mains voltage.

```
C05*          400 V
RATED MAINS VLTG 1
```

11. If a TF/TH is not connected → set "NO RESPONSE." If a TF/TH is connected, set the required fault response.

```
835* NO RESPONSE
RESP. TF SIGNAL
```



12. Start the calculation for startup by choosing "YES."

C06*	NO
CALCULATION	

**FOR SEW MOTORS**

13. The calculation is performed.

**FOR NON-SEW MOTORS**

13. For non-SEW motors, a calibration process is required to perform the calculation:

- When prompted, set a "1" signal at terminal DIØØ "/CONTROL.INHIBIT."
- Enter a "0" signal at terminal DIØØ "/CONTROLLER INHIBIT" after the calibration process is complete.
- If the motor cannot be calibrated (energized), estimate the motor parameters.

14. The "SAVE" menu command appears automatically. The keypad is already in edit mode.

C08*	_NO
SAVE	

15. Set "SAVE" to "YES". The data (motor parameters) is copied to the non-volatile memory of MOVIDRIVE®.

DATA IS BEING COPIED...
----------------------------

16. The startup procedure is now complete. Leave the startup menu by pressing the E or the Q key. The basic display appears.

CONTROLLER INHIBIT CURRENT: 0 A
------------------------------------

- After startup is complete, copy the parameter set from MOVIDRIVE® to the DBG11B keypad (P807 "MDX → DBG"). This way, the DBG11B can be used to transfer the parameter set to other MOVIDRIVE® units (P 806 "DBG → MDX").
- Enter parameter settings that differ from the factory setting in the parameter list (→ page 67).
- In the case of non-SEW motors, set the correct brake application time (P732 / P735).
- For starting the motor, refer to the "Starting the motor" section" (→ page 63).
- With Δ connection and transition point at 87 Hz → set parameter P302/312 "Maximum speed 1/2" to the value for 87 Hz.



## Startup Startup with the DBG11B keypad

### Starting up the speed controller


First startup is performed without the speed controller.

**Important:** Select the VFC-n-CONTROL operating mode.

C01\* VFC n-CTRL  
OPERATING MODE 1


### Structure

Structure of the startup menu for the speed controller:

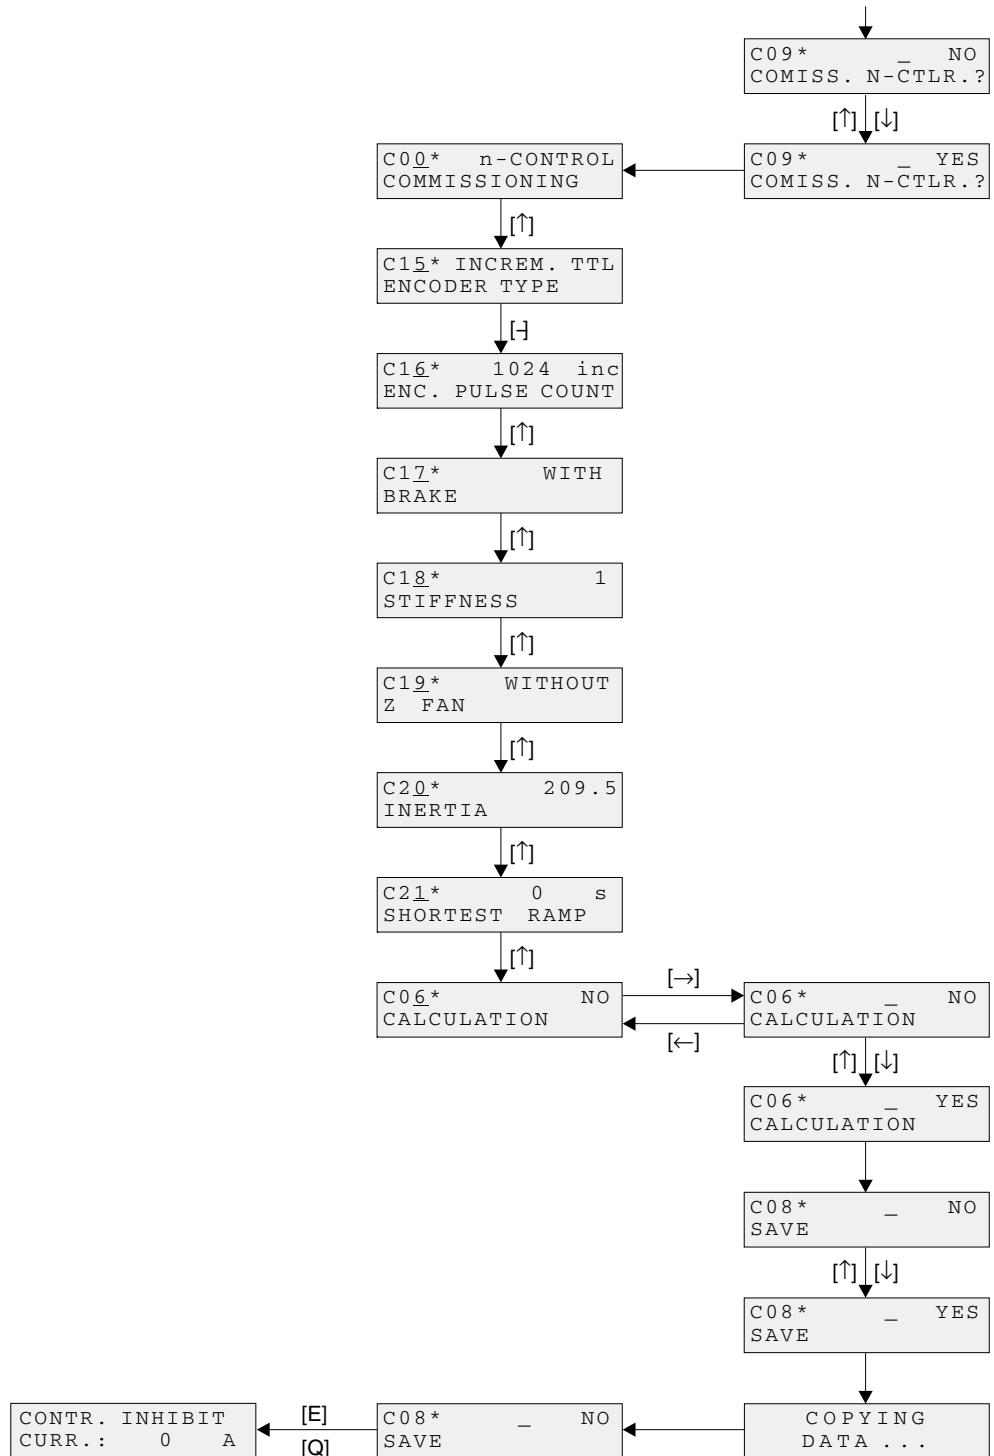

03025AEN

Figure 29: Structure of startup with speed controller

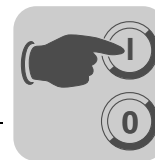

**Startup  
procedure**

1. Press "YES" to commence the speed controller startup. All mass moments of inertia must be entered in the unit [ $10^{-4}$  kgm<sup>2</sup>].
2. Press the ↑ key to move on to the next menu item.
3. Enter the correct encoder type.
4. Enter the correct encoder resolution.

**FOR SEW MOTORS**

5. Enter whether the motor has a brake.
6. Set the stiffness of the control system.
7. Enter whether the motor has a flywheel fan (Z fan).

**FOR NON-SEW MOTORS**

5. Enter the moment of inertia of the motor.
6. Set the stiffness of the control system.
7. Set the moment of inertia of the brake and fan.


8. Enter the mass moment of inertia of the load (gear unit + driven machine) extrapolated for the motor shaft.
  9. Enter the time for the shortest ramp you want.
  10. Start the calculation for speed controller startup by choosing "YES."
  11. The "SAVE" menu command appears automatically. Set "SAVE" to "YES". The data is copied to the non-volatile memory of MOVIDRIVE®.
  12. The "SAVE" menu command appears again. Leave startup by pressing the E or Q button; the basic display appears.
- After startup is complete, copy the parameter set from MOVIDRIVE® to the DBG11B keypad (P807 "MDX → DBG"). This way, the DBG11B can be used to transfer the parameter set to other MOVIDRIVE® units (P 806 "DBG → MDX").
  - Enter parameter settings that differ from the factory setting in the parameter list (→ page 67).
  - In the case of non-SEW motors, set the correct brake application time (P732 / P735).
  - For starting the motor, refer to the "Starting the motor" section" (→ page 63).
  - With Δ connection and transition point at 87 Hz → set parameter P302/312 "Maximum speed 1/2" to the value for 87 Hz.
  - Activate encoder monitoring for TTL and sin/cos encoders (P504="ON"). **Encoder monitoring is not a safety function.**
  - If a Hiperface encoder is connected, it is always monitored regardless of the setting of parameter P504.



#### 5.4 Startup with PC and MOVITOOLS®

##### General information

- Terminal DIØØ "/CONTROLLER INHIBIT" must receive a "0" signal!
- Start MOVITOOLS®.
- Select the language you want in the "Language" selection field.
- From the "PC-COM" drop down menu, select the PC port (e.g. COM 1) to which the inverter is connected.
- In the "Device Type" field, select the option "Movidrive."
- Press the <Update> button to display the connected inverter.

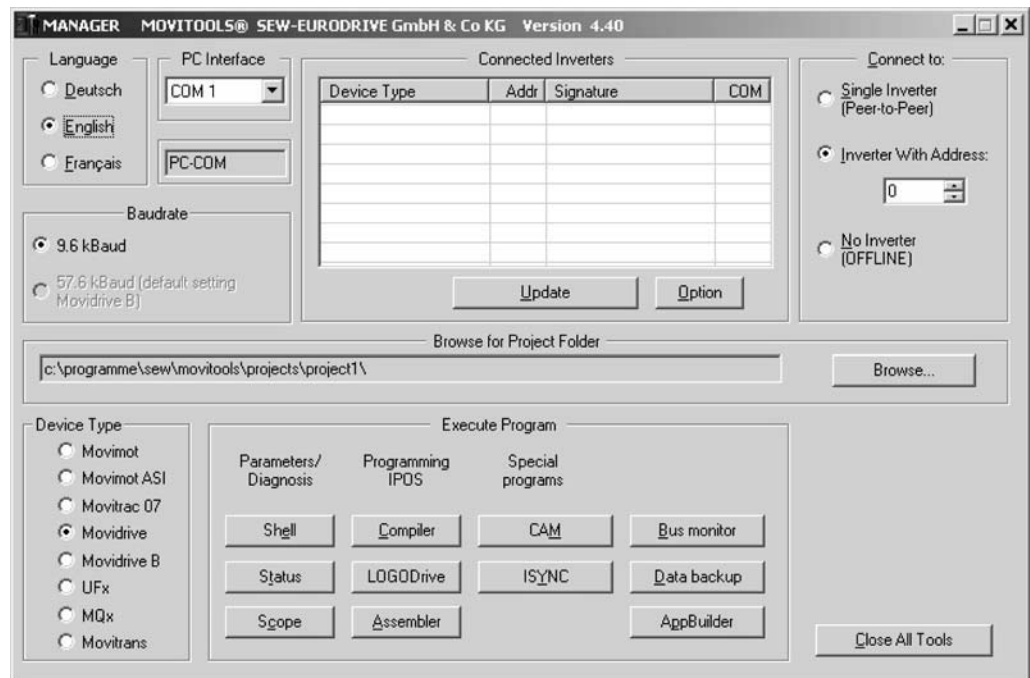

11472AEN

Figure 30: MOVITOOLS® initial screen

##### Commencing startup

- In the "Execute Program" group box, press the <Shell> button under "Parameters/Diagnosis". The Shell program is started.
- In the Shell program, select the [Startup] / [Startup...] menu command. MOVITOOLS® opens the startup menu. Follow the instructions of the startup assistant. For questions on startup, refer to the MOVITOOLS® online help.




### 5.5 Starting the motor

**Analog setpoint selection** The following table shows which signals must be present on terminals AI1 and DI00...DI03 when the "UNIPOL/FIX.SETPT" setpoint (P100) is selected, in order to operate the drive with analog setpoint specification.

Function	AI1 Analog input n1	DI00 /Controller inhibit	DI01 CW/Stop	DI02 CCW/Stop	DI03 Enable/Stop
Controller inhibit	X	"0"	X	X	X
Stop	X	"1"	X	X	"0"
Enable and stop	X	"1"	"0"	"0"	"1"
Clockwise at 50% $n_{max}$	5 V	"1"	"1"	"0"	"1"
Clockwise with $n_{max}$	10 V	"1"	"1"	"0"	"1"
Counterclockwise with 50% $n_{max}$	5 V	"1"	"0"	"1"	"1"
Counterclockwise with $n_{max}$	10 V	"1"	"0"	"1"	"1"

**Travel diagram** The following travel diagram is an example of how the motor is started with the wiring of terminals DI00 ... DI03 and analog setpoints. Binary input DB00 "/Brake" is used for switching brake contactor K12.

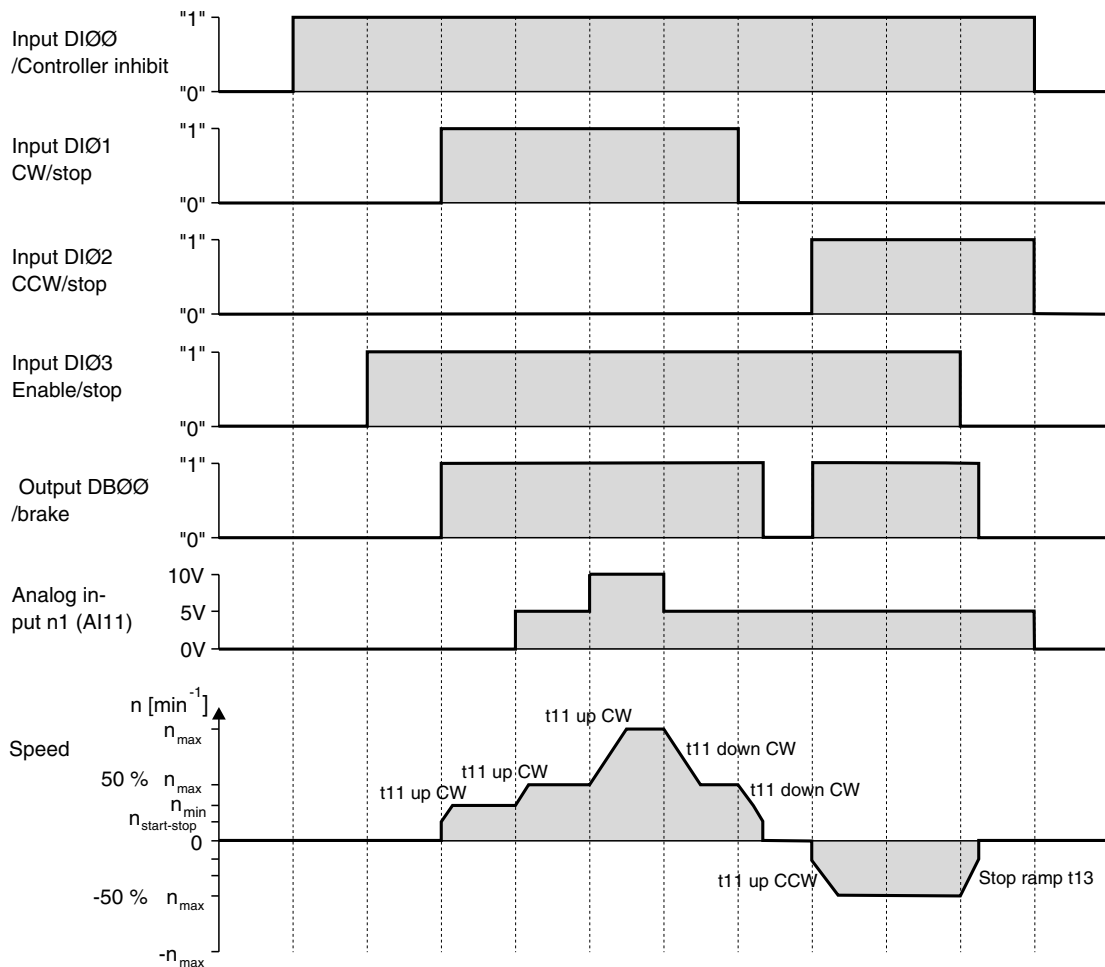

05033BEN

	<b>NOTE</b>
	The motor is not energized in the event of controller inhibit (DI00 = "0"). A motor without brake will coast to standstill.



## Startup Starting the motor


### Fixed setpoints

The following table shows which signals must be present on terminals DI00 ... DI05 when the "UNIPOL/FIX.SETPT" setpoint is selected (P100), to operate the drive with the fixed setpoints.

Function	DI00 /Controller inhibit	DI01 CW/Stop	DI02 CCW/Stop	DI03 Enable/Stop	DI04 n11/n21	DI05 n12/n22
Controller inhibit	"0"	X	X	X	X	X
Stop	"1"	X	X	"0"	X	X
Enable and stop	"1"	"0"	"0"	"1"	X	X
CW operation with n11	"1"	"1"	"0"	"1"	"1"	"0"
CW operation with n12	"1"	"1"	"0"	"1"	"0"	"1"
CW operation with n13	"1"	"1"	"0"	"1"	"1"	"1"
CCW operation with n11	"1"	"0"	"1"	"1"	"1"	"0"

### Travel diagram

The following travel diagram is an example of how the drive is started with the wiring of terminals DI00 ... DI05 and the internal fixed setpoints. Binary output DB00 "/Brake" is used for switching brake contactor K12.

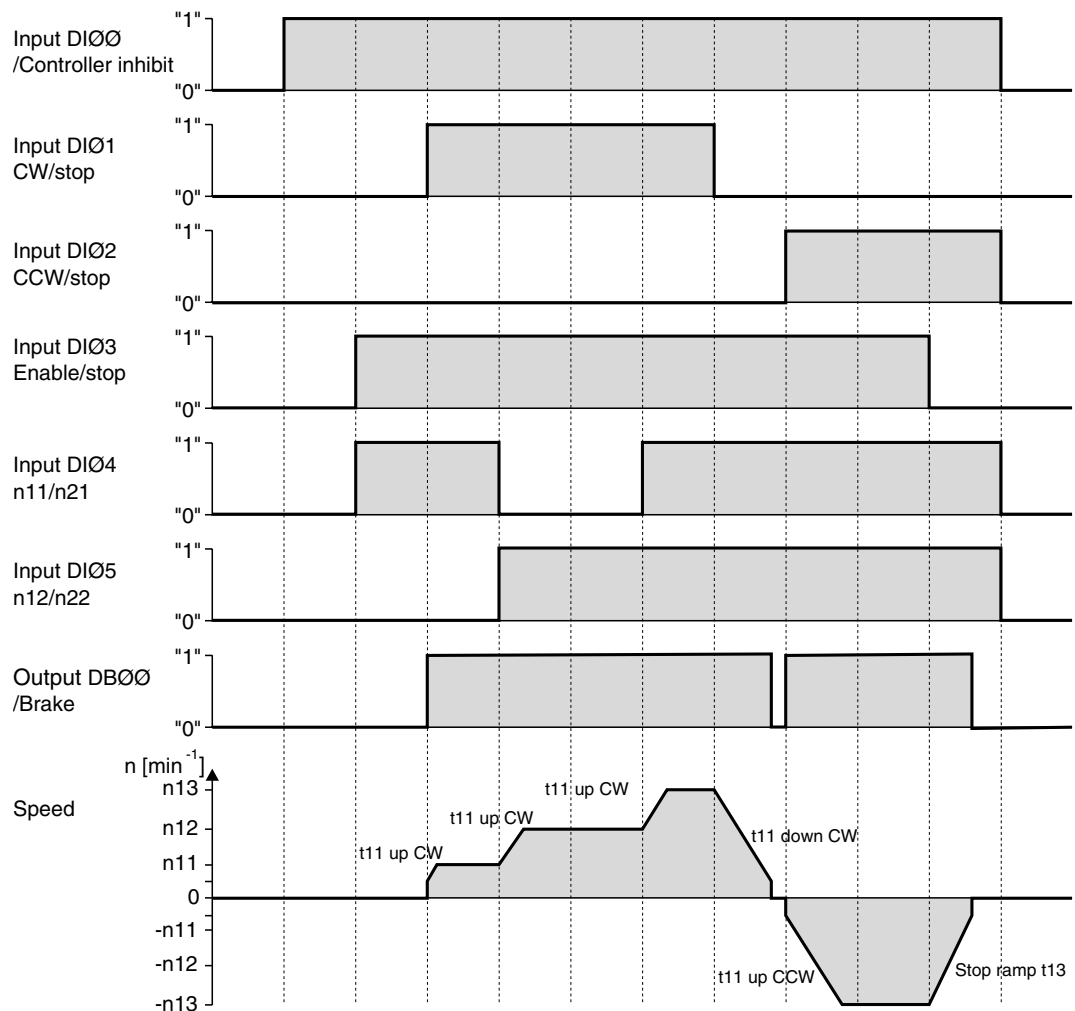

05034BEN



### NOTE

The motor is not energized in the event of controller inhibit (DI00 = "0"). A motor without brake will coast to standstill.





**Manual operation with DBG11B**

The inverter is controlled using the DBG11B keypad with the manual operation function. To start manual operation the inverter must be assigned the status "No enable." The state "No enable" means DI00/Controller inhibit = "1" and the binary inputs CW/stop, DI02 CCW/stop and DI03 Enable/stop with programmed factory settings = "0".

The binary input DI00/Controller inhibit is also in effect in manual operation. The other binary inputs are not in effect during manual operation. Binary input DI00 /Controller inhibit must be assigned a "1" signal to enable the drive to be started in manual operation. The drive can also be stopped in manual operation by setting DI00 to "0". The direction of rotation is not determined by the "CW/stop" or "CCW/stop" binary inputs. Instead, you select the direction of rotation using the keypad (→ Figure 35).

Manual operation remains active when the power supply is switched off and on; however, the inverter is then inhibited. Setting the direction of rotation with the → key or ← key enables and starts the drive with  $n_{min}$  in the selected direction. You can increase and decrease the speed using the ↑ and ↓ keys. The rate of change is 150 1/min per second.

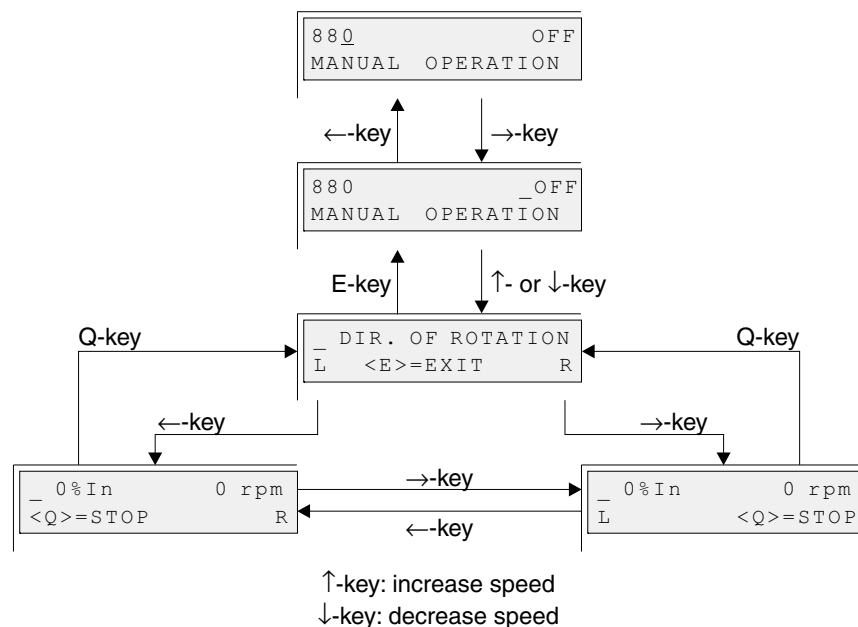


Figure 31: Manual operation with DBG11B

02406AEN

	<b>NOTE</b>
	<p>The signals at the binary inputs take effect as soon as manual operation is finished. Binary input DI00"/Controller inhibit" does not have to be switched from "1" to "0" and back to "1". The drive can start according to the signals at the binary inputs and the setpoint sources.</p> <p>Check that the programmed binary inputs DI01 CW/stop, DI02 CCW/stop and DI03 Enable/rapid stop are assigned a "0" signal when you end manual operation.</p>



## Startup

### Starting the motor




#### **! DANGER!**

Risk of crushing if the motor starts up unintentionally.

Severe or fatal injuries.

- Prevent unintentional start up of the motor by implementing the following measure:
  - Connect terminal X10:9 "/CONTROLLER INHIBIT" with X10:15 "DCOM".
- Furthermore, additional safety precautions must be taken depending on the application to avoid injury to people and damage to machinery.

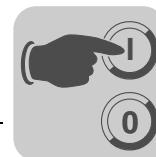

## 5.6 Complete parameter list

### General information

- The parameters of the short menu are marked by a "/" (= display on the DBG11B keypad).
- The factory setting for the parameter is highlighted in bold.

Par.	Name	Value range
<b>DISPLAY VALUES</b>		
<b>00_</b>	<b>Process values</b>	
000	Speed	-5000...0...5000 1/min
001/	User display	[Text]
002	Frequency	0... 1100 Hz
003	Actual position	-2 <sup>31</sup> -1...0...2 <sup>31</sup> -1 inc
004	Output current	0...200 % I <sub>N</sub>
005	Active current	-200...0...200 % I <sub>N</sub>
006/	Motor utilization 1	0...200 %
007	Motor utilization 2	0...200 %
008	DC link voltage	0...1000 V
009	Output current	A
<b>01_</b>	<b>Status displays</b>	
010	Inverter status	
011	Operating state	
012	Error status	
013	Current parameter set	1/2
014	Heat sink temperature	-20...0...100 °C
015	Hours of operation	0...25000 h
016	Enable hours	0...25000 h
017	Work	kWh
<b>02_</b>	<b>Analog setpoints</b>	
020	Analog input AI1	-10...0...10 V
021	Analog input AI2	-10...0...10 V
022	External current limit	0...100 %
<b>03_</b>	<b>Binary inputs basic unit</b>	
030	Binary input DIØØ	/CONTROL.INHIBIT
031	Binary input DIØ1	
032	Binary input DIØ2	
033	Binary input DIØ3	
034	Binary input DIØ4	
035	Binary input DIØ5	
036/	Status of binary inputs on basic unit	
<b>05_</b>	<b>Binary outputs basic unit</b>	
050	Binary output DBØØ	/BRAKE
051	Binary output DOØ1	
052	Binary output DOØ2	
053/	Status of binary outputs on basic unit	


Par.	Name	Value range
<b>07_</b>	<b>Unit data</b>	
070	Unit type	
071	Rated unit current	
076	Firmware basic unit	
077	Technology function	
<b>08_</b>	<b>Error memory</b>	
080/	Error t-0	
081	Error t-1	
082	Error t-2	
083	Error t-3	
<b>09_</b>	<b>Bus diagnostics</b>	
090	PD configuration	
091	Fieldbus type	
092	Fieldbus baud rate	
093	Fieldbus address	
094	PO1 Setpoint	
095	PO2 Setpoint	
096	PO3 Setpoint	
097	PI1 Actual value	
098	PI2 Actual value	
099	PI3 Actual value	



## Startup

### Complete parameter list

Par.	Name	Setting range Factory setting	after start-up	Par.	Name	Setting range Factory setting	after start-up
	Selectable par. Parameter set 1				Parameter set 2		
<b>1_</b>	<b>SETPOINTS / RAMP GENERATORS</b>						
<b>10_</b>	<b>Setpoint selection</b>						
100/	Setpoint source	UNIPOL/FIX.SETPT					
101	Control signal source	TERMINALS					
<b>11_</b>	<b>Analog input AI1</b>						
110	AI1 scaling	-10...-0.1 / 0.1...1...10					
111	AI1 Offset	-500...0...500 mV					
112	AI1 operating mode	Ref. N-MAX					
113	AI1 voltage offset	-10...0...10 V					
114	AI1 speed offset	-5000...0...5000 1/min					
115	Filter speed setpoint	0...5...100 ms 0 = Filter off					
<b>12_</b>	<b>Analog input AI2</b>						
120	AI2 operating mode	NO FUNCTION					
<b>13_</b>	<b>Speed ramps 1</b>			<b>14_</b>	<b>Speed ramps 2</b>		
130/	Ramp t11 up CW	0...2...2000 s		140	Ramp t21 up CW	0...2...2000 s	
131/	Ramp t11 down CW	0...2...2000 s		141	Ramp t21 down CW	0...2...2000 s	
132/	Ramp t11 up CCW	0...2...2000 s		142	Ramp t21 up CCW	0...2...2000 s	
133/	Ramp t11 down CCW	0...2...2000 s		143	Ramp t21 up CCW	0...2...2000 s	
134/	Ramp t12 UP=DOWN	0...2...2000 s		144	Ramp t22 UP=DOWN	0...2...2000 s	
135	S pattern t12	0...3		145	S pattern t22	0...3	
136/	Stop ramp t13	0...2...20 s		146	Stop ramp t23	0...2...20 s	
137/	Emergency stop ramp t14	0...2...20 s		147	Emergency stop ramp t24	0...2...20 s	
<b>15_</b>	<b>Motor potentiometer (parameter sets 1 and 2)</b>						
150	Ramp t3 up	0.2...20 50 s					
151	Ramp t3 down	0.2...20 50 s					
152	Save last setpoint	ON / OFF					
<b>16_</b>	<b>Fixed setpoints 1</b>			<b>17_</b>	<b>Fixed setpoints 2</b>		
160/	Internal setpoint n11	-5000...0...150 ...5000 1/min		170	Internal setpoint n21	-5000...0...150 ...5000 1/min	
161/	Internal setpoint n12	-5000...0...750 ...5000 1/min		171	Internal setpoint n22	-5000...0...750 ...5000 1/min	
162/	Internal setpoint n13	-5000...0...1500 ...5000 1/min		172	Internal setpoint n23	-5000...0...1500 ...5000 1/min	
<b>2_</b>	<b>CONTROLLER PARAMETERS</b>						
<b>20_</b>	<b>Speed control (only parameter set 1)</b>						
200	P-gain n-controller	0.1...2...32					
201	Time constant n-control- ler	0...10...300 ms					
202	Gain Accel. feedforw.	0...32					
203	Filter accel. feedforw.	0...100 ms					
204	Filter speed actual value	0...32 ms					
205	Load feedforward	0...150 %					
206	Sampling time n-control- ler	1 ms / 0.5 ms					
207	Load feedforw. VFC	0...150 %					
<b>21_</b>	<b>Hold controller</b>						
210	P gain hold controller	0.1...2...32					
<b>22_</b>	<b>Internal synchronous operation (only parameter set 1)</b>						
228	Feedforward filter (DRS)	0...100 ms		Only with MOVITOLS®. Not visible on the DBG11B keypad.			
<b>3_</b>	<b>MOTOR PARAMETERS</b>						
<b>30_</b>	<b>Limits 1</b>			<b>31_</b>	<b>Limits 2</b>		

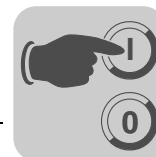


Par.	Name	Setting range Factory setting	after start-up	Par.	Name	Setting range Factory setting	after start-up
	<b>Selectable par. Parameter set 1</b>				<b>Parameter set 2</b>		
300/	Start/stop speed 1	0... <b>60</b> ...150 1/min		310	Start/stop speed 2	0... <b>60</b> ...150 1/min	
301/	Minimum speed 1	0... <b>60</b> ... 5500 rpm		311	Minimum speed 2	0... <b>60</b> ... 5500 rpm	
302/	Maximum speed 1	0... <b>1500</b> ... 5500 rpm		312	Maximum speed 2	0... <b>1500</b> ... 5500 rpm	
303/	Current limit 1	0... <b>150</b> % I <sub>N</sub>		313	Current limit 2	0... <b>150</b> % I <sub>N</sub>	
304/	Torque limit	<b>0</b> ...150 %					
<b>32_</b>	<b>Motor compensation 1 (asynchr.)</b>			<b>33_</b>	<b>Motor compensation 2 (asynchr.)</b>		
320/	Automatic adjustment 1	<b>ON</b> / OFF		330	Automatic adjustment 2	<b>ON</b> / OFF	
321	Boost 1	<b>0</b> ...100 %		331	Boost 2	<b>0</b> ...100 %	
322	IxR compensation 1	<b>0</b> ...100 %		332	IxR compensation 2	<b>0</b> ...100 %	
323	Premagnetizing time 1	0... <b>0.1</b> ...2 s		333	Premagnetizing time 2	0... <b>0.1</b> ...2 s	
324	Slip compensation 1	<b>0</b> ...500 1/min		334	Slip compensation 2	<b>0</b> ...500 1/min	
<b>34_</b>	<b>Motor protection</b>						
340	Motor protection 1	<b>OFF/ ON ASYNCHRO- NOUS / ON SERVO</b>		342	Motor protection 2	<b>OFF/ ON ASYNCHRO- NOUS / ON SERVO</b>	
341	Cooling type 1	<b>FAN COOLED / FORCED COOLING</b>		343	Cooling type 2	<b>FAN COOLED / FORCED COOLING</b>	
<b>35_</b>	<b>Direction of rotation of the motor</b>						
350	Reversal direction of rotation 1	<b>ON</b> / <b>OFF</b>		351	Reversal direction of rotation 2	<b>ON</b> / <b>OFF</b>	
360	Startup	<b>YES</b> / <b>NO</b>		Only available in DBG11B, not in MOVITOOLS®.			
<b>4_</b>	<b>REFERENCE SIGNALS</b>						
<b>40_</b>	<b>Speed reference signal</b>						
400	Speed reference value	0... <b>1500</b> ...5000 1/min					
401	Hysteresis	0... <b>100</b> ...500 1/min					
402	Deceleration time	0... <b>1</b> ...9 s					
403	Signal = "1" if:	<b>n &lt; n<sub>ref</sub> / n &gt; n<sub>ref</sub></b>					
<b>41_</b>	<b>Speed window signal</b>						
410	Window center	0... <b>1500</b> ...5000 1/min					
411	Range width	<b>0</b> ...5000 1/min					
412	Deceleration time	0... <b>1</b> ...9 s					
413	Signal = "1" if:	<b>INSIDE</b> / <b>OUTSIDE</b>					
<b>42_</b>	<b>Speed setpoint/actual value comparison</b>						
420	Hysteresis	1... <b>100</b> ...300 1/min					
421	Deceleration time	0... <b>1</b> ...9 s					
422	Signal = "1" if:	<b>n &lt;&gt; n<sub>setpt</sub> / n = n<sub>setpt</sub></b>					
<b>43_</b>	<b>Current reference signal</b>						
430	Current reference value	0... <b>100</b> ...150 % I <sub>N</sub>					
431	Hysteresis	0... <b>5</b> ...30 % I <sub>N</sub>					
432	Deceleration time	0... <b>1</b> ...9 s					
433	Signal = "1" if:	<b>I &lt; I<sub>ref</sub> / I &gt; I<sub>ref</sub></b>					
<b>44_</b>	<b>I<sub>max</sub> signal</b>						
440	Hysteresis	0... <b>5</b> ...50 % I <sub>N</sub>					
441	Deceleration time	0... <b>1</b> ...9 s					
442	Signal = "1" if:	<b>I = I<sub>max</sub> / I &lt; I<sub>max</sub></b>					



## Startup Complete parameter list

Par.	Name	Setting range Factory setting	after start-up	Par.	Name	Setting range Factory setting	after start-up	
	Selectable par. Parameter set 1				Parameter set 2			
<b>5_</b>	<b>MONITORING FUNCTIONS</b>							
<b>50_</b>	<b>Speed monitoring</b>							
500	Speed monitoring 1	OFF / MOTOR /REGENERATIVE /MOT&REGEN.MODE		502	Speed monitoring 2	OFF / MOTOR /REGENERATIVE /MOT&REGEN.MODE		
501	Deceleration time 1	0...1...10 s		503	Deceleration time 2	0...1...10 s		
504	Encoder monitoring	ON / OFF						
<b>52_</b>	<b>Mains OFF monitoring</b>							
520	Mains OFF response time	0...5 s						
521	Mains OFF response	CONTROL.INHIBIT EMERGENCY STOP						
<b>53_</b>	<b>Motor temperature protection</b>							
530	Sensor type 1	No sensor / TF-TH						
531	Sensor type 2	No sensor / TF-TH						
<b>6_</b>	<b>TERMINAL ASSIGNMENT</b>							
<b>60_</b>	<b>Binary inputs basic unit</b>							
-	Binary input DIØØ	With fixed assignment with: /CONTROLLER INHIBIT						
600	Binary input DIØ1	CW/STOP		The following functions can be programmed: NO FUNCTION • ENABLE/RAP.STOP • CW/STOP • CCW/STOP • n11(n13) • n21(n23) • n12(n13) • n22(n23) • FIX SETPT SW.OV. • PAR. SWITCHOVER • RAMP SWITCHOVER • MOTOR POT UP • MOTOR POT DOWN • /EXT. FAULT • FAULT RESET • /HOLD CONTROL • /LIM. SWITCH CW • /LIM. SWITCH CCW • IPOS INPUT • REFERENCE CAM • REF.TRAVEL START • SLAVE FREE RUNN. • SETPOINT HOLD • MAINS ON • DRS SET ZERO.				
601	Binary input DIØ2	CCW/STOP						
602	Binary input DIØ3	ENABLE/STOP						
603	Binary input DIØ4	n11/n21						
604	Binary input DIØ5	n12/n22						
<b>62_</b>	<b>Binary outputs basic unit</b>							
-	Binary output DBØØ	With fixed assignment with: /BRAKE						
620	Binary output DOØ1	READY FOR OPERATION		The following signals can be programmed: NO FUNCTION • /FAULT • READY • OUTP. STAGE ON • ROT. FIELD ON • BRAKE RELEASED • BRAKE APPLIED • MOTOR STANDSTILL • PARAMETER SET • SPEED REFERENCE • SPEED WINDOW • SP/ACT.VAL.COMP. • CURR. REFERENCE • Imax-SIGNAL • /MOTOR UTILIZ. 1 • /MOTOR UTILIZ. 2 • IPOS IN POSITION • IPOS REFERENCE • IPOS OUTPUT • /IPOS FAULT				
621	Binary output DOØ2	NO FUNCTION						
<b>64_</b>	<b>Analog output</b>							
640	Analog output AO1	ACTUAL SPEED		The following functions can be programmed: NO FUNCTION • RAMP INPUT • SPEED SETPOINT • ACTUAL SPEED • ACTUAL FREQUENCY • OUTPUT CURRENT • ACTIVE CURRENT • UNIT UTILIZATION • IPOS OUTPUT • RELATIVE TORQUE				
641	Scaling AO1	-10...0...1...10						
642	Operating mode AO1	OFF / 0...20 mA / 4...20 mA						
<b>7_</b>	<b>CONTROL FUNCTIONS</b>							
<b>70_</b>	<b>Operating modes</b>							
700	Operating mode 1	VFC 1 VFC 1 & GROUP VFC 1 & HOIST VFC 1 & DC BRAK. VFC 1 & FLYSTART VFC n-CONTROL VFC-n-CTRL&GRP. VFC-n-CTRL&HOIST VFC-n-CTRL& IPOS CFC CFC & M-CONTROL CFC&IPOS SERVO SERVO&M-CONTROL SERVO&IPOS		701	Operating mode 2	VFC 2 VFC 2 & GROUP VFC 2 & HOIST VFC 2 & DC BRAK. VFC 2 & FLYSTART		
<b>71_</b>	<b>Standstill current</b>							
710	Standstill current 1	0...50 % I <sub>mot</sub>		711	Standstill current 2	0...50 % I <sub>mot</sub>		

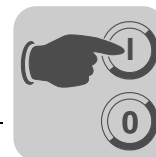

Par.	Name	Setting range Factory setting	after start-up	Par.	Name	Setting range Factory setting	after start-up
	Selectable par. Parameter set 1				Parameter set 2		
<b>72_</b>	<b>Setpoint stop function</b>						
720	Setpoint stop function 1	ON / OFF		723	Setpoint stop function 2	ON / OFF	
721	Stop setpoint 1	0...30...500 1/min		724	Stop setpoint 2	0...30...500 1/min	
722	Start offset 1	0...30...500 1/min		725	Start offset 2	0...30...500 1/min	
<b>73_</b>	<b>Brake function</b>						
730	Brake function 1	ON / OFF		733	Brake function 2	ON / OFF	
731	Brake release time 1	0...2 s		734	Brake release time 2	0...2 s	
732	Brake application time 1	0...0.2...2 s		735	Brake application time 2	0...0.2...2 s	
<b>74_</b>	<b>Speed skip function</b>						
740	Skip window center 1	0...1500...5000 1/min		742	Skip window center 2	0...1500...5000 1/min	
741	Skip width 1	0...300 1/min		743	Skip width 2	0...300 1/min	
<b>75_</b>	<b>Master/slave function</b>						
750	Slave setpoint	MASTER-SLAVE OFF SPEED (SBus) TORQUE (SBus) LOAD SHARE (SBus)					
751	Scaling slave setpoint	-10...0...1...10					
<b>8_</b>	<b>UNIT FUNCTIONS</b>						
<b>80_</b>	<b>Setup</b>						
802/	Factory setting	YES / NO					
803/	Parameter lock	ON / OFF					
804	Reset statistics data	NO ERROR MEMORY kWh COUNTER OPERATING HOURS					
800/	Short menu	ON / OFF					
801/	Language	DE / EN / FR / ES / PT					The languages available depend on the DBG version. These parameters are only available in the DBG11B keypad, not in MOVITOOLS®.
806	Copy DBG→MDX	YES / NO					
807	Copy MDX→DBG	YES / NO					
<b>81_</b>	<b>Serial communication</b>						
810	RS485 Address	0...99					
811	RS485 group address	100...199					
812	RS485 Timeout delay	0...650 s					
813	SBus address	0...63					
814	SBus group address	0...63					
815	SBus timeout delay	0...0.1...650 s					
816	SBus baud rate	125/250/500/1000 kBaud					
817	SBus synchronization ID	0...1023					
818	CAN synchronization ID	0...1...2047					
819	Fieldbus timeout delay	0...0.5...650 s					
<b>82_</b>	<b>Brake operation</b>						
820/	4-quadrant operation 1	ON / OFF		821	4-quadrant operation 2	ON / OFF	




## Startup

### Complete parameter list

Par.	Name	Setting range Factory setting	after start-up	Par.	Name	Setting range Factory setting	after start-up
	Selectable par. Parameter set 1				Parameter set 2		
<b>83_</b>	<b>Fault responses</b>						
830	Response EXT. FAULT	<b>EMERG. STOP/FAULT</b>		The following error responses can be programmed: NO RESPONSE • DISPLAY FAULT • IMM. STOP/FAULT • EMERG. STOP/FAULT • RAPID STOP/FAULT • IMM. STOP/WARN. • EMERG. STOP/WARN. • IMM. STOP/WARN.			
831	Response FIELD BUS TIMEOUT	<b>RAPID STOP/WARN</b>					
832	Response MOTOR OVERLOAD	<b>EMERG. STOP/FAULT</b>					
833	Response RS485 TIMEOUT	<b>RAPID STOP/WARN</b>					
834	Response LAG ERROR	<b>EMERG. STOP/FAULT</b>					
835/	Response TF SIGNAL	<b>NO RESPONSE</b>					
836	Response SBus TIMEOUT	<b>EMERG. STOP/FAULT</b>					
<b>84_</b>	<b>Reset behavior</b>						
840/	Manual reset	<b>YES / NO</b>					
841	Auto reset	<b>ON / OFF</b>					
842	Restart time	<b>1...3...30 s</b>					
<b>85_</b>	<b>Scaling actual speed value</b>						
850	Scaling factor numerator	<b>1...65535</b>					
851	Scaling factor denominator	<b>1...65535</b>					
852	User-defined unit	<b>1/min</b>		Can only be set using MOVITools®.			
<b>86_</b>	<b>Modulation</b>						
860	PWM frequency 1	<b>4/8/12/16 kHz</b>		861	PWM frequency 2	<b>4/8/12/16 kHz</b>	
862	PWM fix 1	<b>ON / OFF</b>		863	PWM fix 2	<b>ON / OFF</b>	
864	PWM frequency CFC	<b>4/8/16 kHz</b>					
<b>87_</b>	<b>Process data description</b>						
870	Setpoint description PO1	<b>CONTROL WORD 1</b>					
871	Setpoint description PO2	<b>SPEED</b>					
872	Setpoint description PO3	<b>NO FUNCTION</b>					
873	Actual value description PI1	<b>STATUS WORD 1</b>					
874	Actual value description PI2	<b>SPEED</b>					
875	Actual value description PI3	<b>OUTPUT CURRENT</b>					
876	PO data enable	<b>ON / OFF</b>					
877	DeviceNet PD configuration	<b>0...3...5</b>					
<b>88_</b>	<b>Manual operation</b>						
880	Manual operation	<b>ON / OFF</b>					



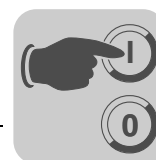

Par.	Name	Setting range Factory setting	after start-up	Par.	Name	Setting range Factory setting	after start-up
	Selectable par. Parameter set 1				Parameter set 2		
<b>9_</b>	<b>IPOS PARAMETERS</b>						
<b>90_</b>	<b>IPOS Reference travel</b>						
900	Reference offset	-2 <sup>31</sup> ...0...2 <sup>31</sup> -1 Inc					
901	Reference speed 1	0...200...5000 1/min					
902	Reference speed 2	0...50...5000 1/min					
903	Reference travel type	0...7					
904	Reference travel to zero pulse	Yes / No					
<b>91_</b>	<b>IPOS Travel parameters</b>						
910	Gain X controller	0.1...0.5...32					
911	Positioning ramp 1	0...1...20 s					
912	Positioning ramp 2	0...1...20 s					
913	Positioning speed CW	0...1500...5000 1/min					
914	Positioning speed CCW	0...1500...5000 1/min					
915	Speed feedforward	-199.99...0...100 ...199.99 %					
916	Ramp type	LINEAR / SINE / SQUARED / BUSRAMP					
<b>92_</b>	<b>IPOS Monitoring</b>						
920	CW SW limit switch	-2 <sup>31</sup> ...0...2 <sup>31</sup> -1 Inc					
921	CCW SW limit switch	-2 <sup>31</sup> ...0...2 <sup>31</sup> -1 Inc					
922	Position window	0...50...32767 inc					
923	Lag error window	0...2 <sup>31</sup> -1 inc					
<b>93_</b>	<b>IPOS Special functions</b>						
930	Override	ON / OFF					
931	IPOS CTRL word Task 1	START / STOP/ HOLD			Only available in DBG11B, not in MOVITOOLS®.		
932	IPOS CTRL word Task 2	START / STOP			Only available in DBG11B, not in MOVITOOLS®. Display parameter cannot be edited using DBG11B.		
<b>94_</b>	<b>IPOS Variables/encoder</b>						
940	IPOS variables edit	ON / OFF			Only available in DBG11B, not in MOVITOOLS®.		
941	Source actual position	Motor encoder (X15) Ext. encoder (X14) Absolute encoder (DIP)					
942	Encoder factor numerator	1...32767					
943	Encoder factor denominator	1...32767					
944	Encoder scaling ext. Encoder	x1/x2/x4/x8/x16/x32/x64			Only with MOVITOOLS®. Not visible on the DBG11B keypad.		
945	Synchronous encoder type X14	TTL / SIN/COS / HIPERFACE					
946	Counting direction X14	NORMAL/INVERTED					
<b>95_</b>	<b>DIP</b>						
950	Encoder type	NO ENCODER					
951	Counting direction	NORMAL/INVERTED					
952	Cycle frequency	1...200%					
953	Position offset	-(2 <sup>31</sup> -1)...0...2 <sup>31</sup> -1					
954	Zero point offset	-(2 <sup>31</sup> -1)...0...2 <sup>31</sup> -1					
955	Encoder scaling	x1/x2/x4/x8/x16/x32/x64					
<b>96_</b>	<b>IPOS Modulo function</b>						
960	Modulo function	OFF / SHORT / CW / CCW					
961	Modulo numerator	0...2 <sup>31</sup>					
962	Modulo denominator	0...2 <sup>31</sup>					
963	Mod. encoder resolution	0...4096...20000					




### 5.7 Starting the inverter with PROFIBUS-DP (MC\_41A)

#### Configuring the PROFIBUS-DP interface

The drive inverter must be given a specific DP configuration by the DP master to define the type and number of input and output data used for transmission. You have the option of

- Controlling the drive using process data
- Reading and writing all drive parameters using the parameter channel

The following figure shows a schematic view of the data exchange between the programmable controller (DP master) and the MOVIDRIVE<sup>®</sup> drive inverter (DP slave) with the process data and parameter channel.

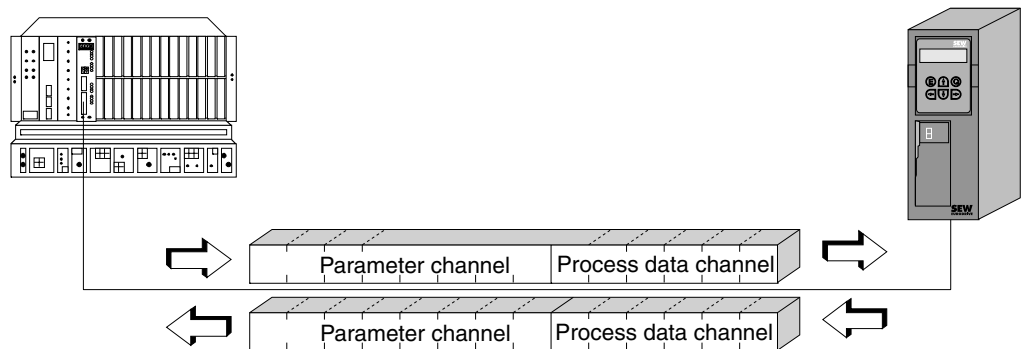

01065BEN

Figure 32: Communication via PROFIBUS-DP

#### Process data configuration

MOVIDRIVE<sup>®</sup> compact drive inverters make it possible to have different DP configurations for exchanging data between the DP master and the inverter. The following table provides additional information on all possible DP configurations for the MOVIDRIVE<sup>®</sup> compact range. The “Process data configuration” column shows the name of the configuration. The texts will also be displayed as selection list within the project planning software for the DP master. The DP configurations column shows which configuration data is sent to the inverter when the PROFIBUS DP connection is being established.

Process Data Configuration	Meaning / notes	DP Configuration	
		0	1
1 PD	Control via one process data word	240 <sub>dec</sub>	-
2 PD	Control via 2 process data words	241 <sub>dec</sub>	-
3 PD	Control via 3 process data words	242 <sub>dec</sub>	-
6 PD	Control via 6 process data words	0 <sub>dec</sub>	245 <sub>dec</sub>
10 PD	Control via 10 process data words	0 <sub>dec</sub>	249 <sub>dec</sub>
Param + 1 PD	Control via one process data word Parameter setting via 8 byte parameter channel	243 <sub>dec</sub>	240 <sub>dec</sub>
Param + 2 PD	Control via 2 process data words Parameter setting via 8 byte parameter channel	243 <sub>dec</sub>	241 <sub>dec</sub>
Param + 3 PD	Control via 3 process data words Parameter setting via 8 byte parameter channel	243 <sub>dec</sub>	242 <sub>dec</sub>
Param + 6 PD	Control via 6 process data words Parameter setting via 8 byte parameter channel	243 <sub>dec</sub>	245 <sub>dec</sub>
Param + 10 PD	Control via 10 process data words Parameter setting via 8 byte parameter channel	243 <sub>dec</sub>	249 <sub>dec</sub>



*DP Configuration  
"Universal-  
Configuration"*

Selecting the "Universal configuration" DP configuration gives you two DP identifiers defined as 'blank spaces' (often also referred to as DP modules) with the entry 0<sub>dec</sub>. You can then configure these identifiers individually observing the following peripheral conditions:

**Module 0 (DP identifier 0) defines the parameter channel of the inverter:**

Length	Function
0	Parameter channel deactivated
8 bytes or 4 words	Parameter channel is used

**Module 1 (DP identifier 1) defines the process data channel of the inverter:**

Length	Function
2 bytes or 1 word	1 process data word
4 bytes or 2 words	2 process data words
6 bytes or 3 words	3 process data words
12 bytes or 6 words	6 process data words
20 bytes or 10 words	10 process data words

The following figure shows the structure of the configuration data defined in IEC 61158. These configuration data are transmitted to the inverter during the initial start of the DP master.

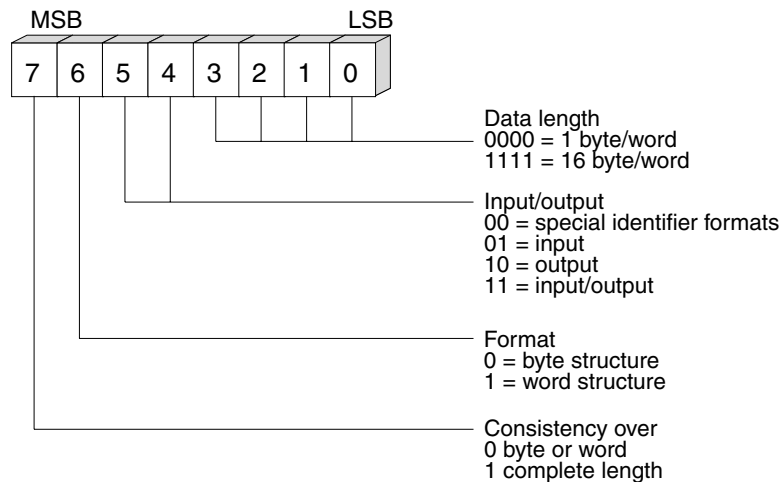


Figure 33: Format of the identifier byte Cfg\_Data to IEC 61158

00087BEN

	<b>NOTE</b>
	<p><b>Observe for MCF/MCV/MCS41A (does not apply to MCH41A):</b> The "special identifier formats" coding is not supported. Only use the setting "Integrity over entire length" for data transmission!</p>

*Data consistency*

Consistent data is data that has to be transmitted between the programmable controller and the drive inverter as one block at all times and must never be transmitted separately. Data consistency is especially important for transmitting position values or complete positioning tasks. This is because data that is not transmitted consistently could be from different program cycles of the programmable controller, which would lead to undefined values being transmitted to the drive inverter.



For PROFIBUS DP, data communication between the programmable controller and drive engineering devices is usually carried out with the setting “Data integrity over entire length.”

#### **External diagnostics**

For MOVIDRIVE<sup>®</sup> *compact*, it is possible to activate automatic generation of external diagnostic alarms via PROFIBUS-DP during the project planning in the DP master. If this function has been activated, MOVIDRIVE<sup>®</sup> *compact* sends an external diagnostic signal to the DP master every time a malfunction occurs. You then have to program corresponding algorithms in the program of the DP master system to evaluate the diagnostic information. These algorithms can be quite complex.

#### **Recommendation**

In principle, it is not necessary to activate the external diagnostic function because MOVIDRIVE<sup>®</sup> *compact* transmits the current drive status in status word 1 during every PROFIBUS-DP cycle.

#### **Information on Simatic S7 Master systems**

Diagnostic alarms may also be triggered by the PROFIBUS DP system in the DP master even if external diagnostic generation is deactivated. As a result, the corresponding operating blocks (e.g. OB84 for S7-400 or OB82 for S7-300) should always be created in the controller.

See the Read-me file in the GSD file for additional information.

#### **Ident number**

Each DP master and DP slave must have its individual ident number which is assigned by the PROFIBUS users' organization. This ident number is used for uniquely identifying the connected unit. When the PROFIBUS DP master is started up, it compares the ident numbers of the connected DP slaves with the ident numbers configured by the user. The user data transfer will only be activated after the DP master has ensured that the connected station addresses and device types (ident numbers) correspond to the project planning data. This procedure achieves a high degree of safety with respect to project planning errors.


The ident. number is defined as an unsigned 16-bit number (Unsigned16). The PROFIBUS users' organization has defined the following identity numbers for the MOVIDRIVE<sup>®</sup> *compact* driver inverter series:

- MOVIDRIVE<sup>®</sup> *compact* MCF/MCV/MCS41A → 6002<sub>hex</sub> (24578<sub>dec</sub>)
- MOVIDRIVE<sup>®</sup> *compact* MCH41A → 6003<sub>hex</sub> (24579<sub>dec</sub>)



**Control via PROFIBUS-DP**

The inverter is controlled via the process data channel which is one, two or three I/O words in length. These process data words may be mapped in the I/O or peripheral area of the controller if a programmable controller is used as DP master and can be addressed as usual (see following figure).

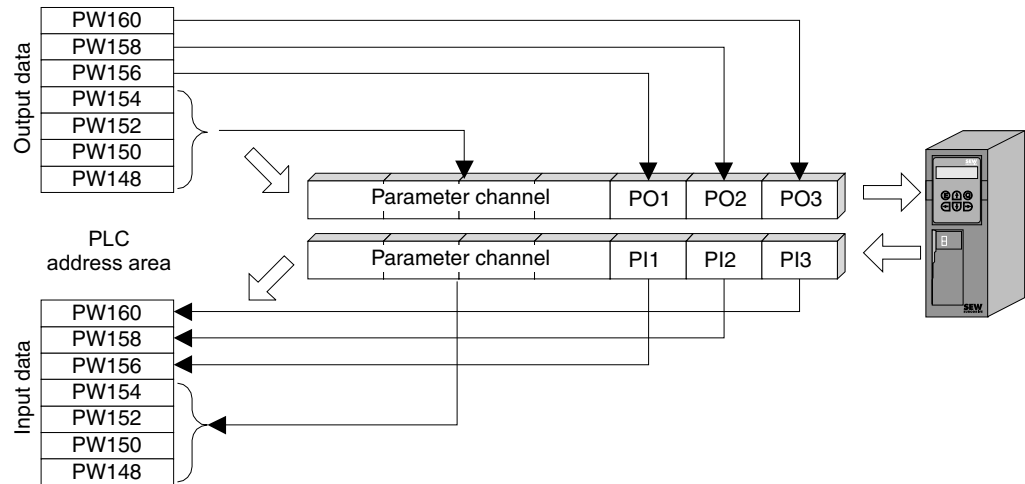

02906AEN

Figure 34: Assignment of the I/O area in the PLC

**Control example for Simatic S5**

While the process input data (actual values) for a Simatic S5 may be read in via load commands, the process output data (setpoints) can be sent with transfer commands. Based on Figure 34, the example shows the syntax for processing of the process input and output data of the MOVIDRIVE® drive inverter. The factory setting for the process data channel is displayed in the comment.

**STEP5 sample program**

In the example, the MOVIDRIVE® unit is configured using the "3 PD" process data configuration to the input addresses PW156 ... 161 and output addresses PW156 ... 161. The consistent access may take place in the sequence "Last byte first".

The CPU type will mainly determine data consistency in Simatic S5. You will find further information on correct programming with data consistency in the manuals on CPU or DP master components in Simatic S5.

```

//Consistent input of actual values
L PW 160      //Load PI3 (no function)
L PW 158      //Load PI2 (actual speed value)
L PW 156      //Load PI1 (status word 1)

//Consistent output of setpoints
L KH 0
T PW 160      Write //0_hex to PO3 (without function)

L KF +1500
T PW 158      Write //1500_dec to PO2 (speed setpoint = 300 1/min)

L KH 0006
T PW 156      Write //6_hex to PO1 (control word = enable)
    
```



## Startup

### Starting the inverter with PROFIBUS-DP (MC\_41A)

#### Control example for Simatic S7

The drive inverter is controlled using Simatic S7 in accordance with the selected process data configuration either directly using load and transfer commands or by means of special system functions SFC 14 DPRD\_DAT and SFC15 DPWR\_DAT.

In principle, S7 data lengths of 3 bytes or more than 4 bytes must be transmitted using system functions SFC14 and SFC15. Consequently, the data in the following table applies:

Process data configuration	Program access
1 PD	Load / transfer commands
2 PD	Load / transfer commands
3 PD	System functions SFC14/15 (length 6 bytes)
6 PD	System functions SFC14/15 (length 12 bytes)
10 PD	System functions SFC14/15 (length 20 bytes)
Param + 1 PD	Parameter channel: System functions SFC14/15 (length 8 bytes) Process data: Load / transfer commands
Param + 2 PD	Parameter channel: System functions SFC14/15 (length 8 bytes) Process data: Load / transfer commands
Param + 3 PD	Parameter channel: System functions SFC14/15 (length 8 bytes) Process data: System functions SFC14/15 (length 6 bytes)
Param + 6 PD	Parameter channel: System functions SFC14/15 (length 8 bytes) Process data: System functions SFC14/15 (length 12 bytes)
Param + 10 PD	Parameter channel: System functions SFC14/15 (length 8 bytes) Process data: System functions SFC14/15 (length 20 bytes)


#### STEP7 example program

In this example, the project planning for MOVIDRIVE<sup>®</sup> compact has the process data configuration "3 PD" at input addresses PIW576... and output addresses POW576.... A data block DB3 is created with about 50 data words.

When SFC14 is called, the process input data is copied to data block DB3, data words 0, 2 and 4. When SFC15 is called after the control program has been processed, the process output data are copied from data words 20, 22 and 24 to the output address POW 576 ...

Note the length information in bytes for the RECORD parameter. The length information must correspond to the configured length.

Refer to the online help for STEP7 for further information about the system functions.

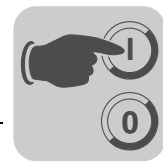

```

//Start of cyclical program processing in OB1
BEGIN
NETWORK
TITLE =Copy PI data from servo drive to DB3, word 0/2/4
CALL SFC 14 (DPRD_DAT)           //Read DP slave record
  LADDR := W#16#240             //Input address 576
  RET_VAL:= MW 30               //Result in flag word 30
  RECORD := P#DB3.DBX 0.0 BYTE 6 //Hand

NETWORK
TITLE =PLC program with drive application
// PLC program uses the process data in DB3 for
// drive control
L DB3.DBW 0           //Load PI1 (status word 1)
L DB3.DBW 2           //Load PI2 (actual speed value)
L DB3.DBW 4           //Load PI3 (no function)

L W#16#0006
T DB3.DBW 20           //Write 6hex to PO1 (control word = enable)
L 1500
T DB3.DBW 22           //Write 1500dec to PO2 (speed setpoint = 300 1/min)
L W#16#0000
T DB3.DBW 24           //Write 0hex to PO3 (has no function)

//End of cyclical program processing in OB1
NETWORK
TITLE =Copy PO data from DB3, word 20/22/24 to the inverter
CALL SFC 15 (DPWR_DAT)           //Write DP slave record
  LADDR := W#16#240             //Output address 576 = 240hex
  RECORD := P#DB3.DBX 20.0 BYTE 6 //Pointer on DB/DW
  RET_VAL:= MW 32               //Result in flag word 32
    
```

### NOTE



For further information and sample applications regarding control via the process data channel, especially coding of the control and status word, see the manual on the fieldbus unit profile, which you can order from SEW.



## Startup


### Starting the inverter with PROFIBUS-DP (MC\_41A)

#### Parameter setting using PROFIBUS-DP

With PROFIBUS-DP, the drive parameters are accessed via the MOVILINK<sup>®</sup> parameter channel. This channel offers extra parameter services in addition to the conventional READ and WRITE services.

#### Structure of the parameter channel

To set the parameters of peripheral units via fieldbus systems that do not provide an application layer, it is necessary to emulate the most important functions and services such as READ and WRITE for reading and writing parameters. You will have to define a parameter process data object (PPO) for PROFIBUS-DP. This PPO is transmitted cyclically. In addition to the process data channel, it contains a parameter channel by means of which acyclical parameter values can be exchanged (→ Figure 35).

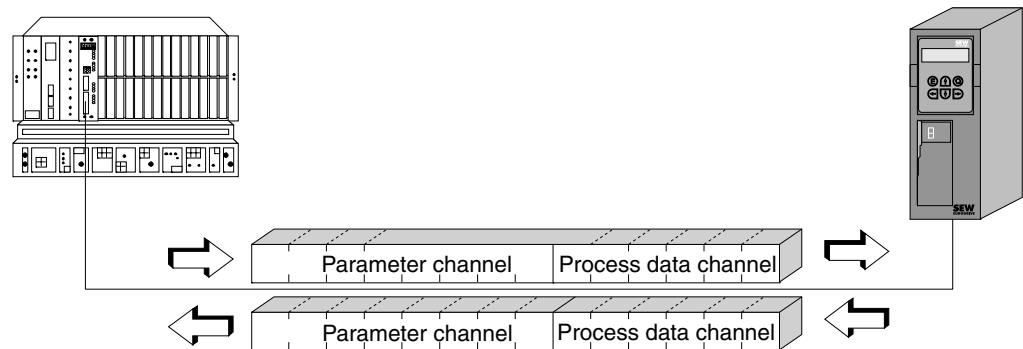


01065BEN

Figure 35: Parameter process data object for PROFIBUS-DP

The following structure shows the parameter channel. In principle, the parameter channel is made up of a management byte, an index word, a reserved byte and four data bytes.


Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Management	Reserved	Index high	Index low	MSB data	Data	Data	LSB data
Parameter index				4-byte data			



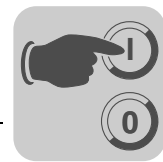

*Management of the parameter channel*

The entire procedure for setting parameters is coordinated with "Byte 0: Management". This byte provides important service parameters such as service identifier, data length, version and status of the service performed. Bits 0, 1, 2 and 3 contain the service identifier. These bits determine which service is to be executed. Bit 4 and bit 5 specify the data length in bytes for the write service; it should be set to 4 bytes for all SEW drive inverters.

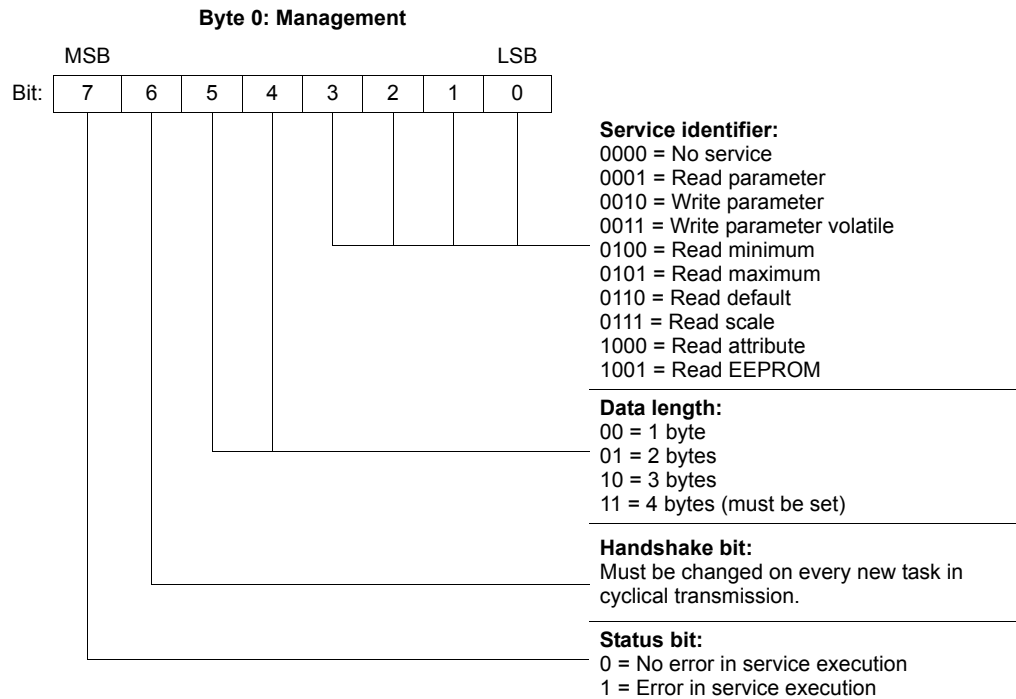

Bit 6 is used as an acknowledgment between the controller and the drive inverter. It triggers the execution of the transmitted service in the drive inverter. In PROFIBUS-DP the parameter channel is transmitted cyclically with the process data. For this reason, the implementation of the service in the drive inverter must be triggered by edge control using the handshake bit 6. For this purpose, the value of this bit is altered (toggled) for each new service that is to be executed. The drive inverter uses the handshake bit to signal whether the service has been executed or not. The service was executed if the handshake bit received in the controller is identical with the transmitted handshake bit. Status bit 7 indicates whether it was possible to execute the service properly or if errors occurred.

*Index addressing*

"Byte 2: Index high" and "Byte 3: Index low" determine the parameter read or written via the fieldbus system. The parameters of a drive inverter are addressed with a uniform index regardless of the connected fieldbus system. Byte 1 should be viewed as reserved and must always be set to 0x00.



## Startup

### Starting the inverter with PROFIBUS-DP (MC\_41A)

#### Data range

The data is located in byte 4 to byte 7 of the parameter channel. This means up to 4 bytes of data can be transmitted per service. The data is always entered with right-justification; that is, byte 7 contains the least significant data byte (Data LSB) whereas byte 4 is the most significant data byte (Data MSB).

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Management	Reserved	Index high	Index low	MSB data	Data	Data	LSB data
				High byte 1	Low byte 1	High byte 2	Low byte 2
				High word		Low word	
				Double word			

#### Incorrect execution of a service

The status bit in the management byte is set to signal that a service has been executed incorrectly. If the received handshake bit is identical to the transmitted handshake bit, the drive inverter has executed the service. If the status bit now signals an error, the error code is entered in the data range of the parameter telegram. Bytes 4 through 7 provide the return code in a structured format (→ section "Return codes of parameter setting" on page 83).

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Management	Reserved	Index high	Index low	<b>Error class</b>	<b>Error code</b>	<b>Add. code high</b>	<b>Add. code low</b>



**Status bit = 1: Incorrect performance of service**



**Return codes for parameter setting**

In the event of an incorrect parameter setting, the drive inverter sends back various return codes to the master that set the parameters. These codes provide detailed information about what caused the error. All of these return codes are structured in accordance with IEC 61158. The MQI distinguishes between the following elements:

- Error class
- Error code
- Additional code

These return codes apply to all communication interfaces of MOVIDRIVE®.

*Error class*

The error class element provides a more exact classification of the error type. MOVIDRIVE® compact supports the following error classes defined to IEC 61158:

Class (hex)	Designation	Meaning
1	vfd state	Status error of the virtual field device
2	application reference	Error in application program
3	definition	Definition error
4	resource	Resource error
5	service	Error during execution of service
6	access	Access error
7	ov	Error in the object list
8	other	Other error (see additional code)

The error class is generated by the communication software of the fieldbus gateway if there is an error in communication, with the exception of error class 8 = "Other error". Return codes sent from the drive inverter system are all included in "Error class 8 = Other error". The error can be identified more precisely using the additional code element.

*Error code*

The error code element provides a means for more precisely identifying the cause of the error within the error class. It is generated by the communication software of the fieldbus interface in the event of an error in communication. Only error code 0 (Other error code) is defined for error class 8, "Other error". In this case, detailed identification is available in the additional code.



## Startup

### Starting the inverter with PROFIBUS-DP (MC\_41A)

#### Additional code

The additional code contains SEW-specific return codes for incorrect parameter setting of the drive inverter. They are returned to the master under Error Class 8 = "Other Error". The following table shows all possible codings for the additional code.

Error class: 8 = "Other error"

Add. code high (hex)	Add. code low (hex)	Meaning
00	00	No error
00	10	Illegal parameter index
00	11	Function / parameter not implemented
00	12	Read access only
00	13	Parameter lock is active
00	14	Factory setting is active
00	15	Value for parameter too large
00	16	Value for parameter too small
00	17	Required option card missing for this function/parameter
00	18	Error in system software
00	19	Parameter access via RS-485 process interface on X13 only
00	1A	Parameter access via RS-485 diagnostic interface only
00	1B	Parameter is access-protected
00	1C	Controller inhibit required
00	1D	Invalid value for parameter
00	1E	Factory setting was activated
00	1F	Parameter was not saved in EEPROM
00	20	Parameter cannot be changed with enabled output stage

#### Special return codes (special cases)

Errors in parameter settings, which cannot be identified either automatically by the application layer of the fieldbus system or by the system software of the drive inverter, are treated as special cases. The possible causes for such errors are as follows:

- Incorrect coding of a service via parameter channel
- Incorrect length specification of a service via parameter channel
- Internal communication error

#### Incorrect service code in the parameter channel

Incorrect code was specified in the management byte or reserved byte during parameter setting via the parameter channel. The following table shows the return code for this special case.

	Code (dec)	Meaning
Error class:	5	Service
Error code:	5	Illegal parameter
Add. code high:	0	-
Add. code low:	0	-

#### Correcting the error:

Check bits 0 and 1 in the parameter channel.



*Incorrect length specification in parameter channel*

A data length other than 4 data bytes was specified in a write service during configuration via the parameter channel. The following table displays the return codes.

	Code (dec)	Meaning
Error class:	6	Access
Error code:	8	Type conflict
Add. code high:	0	-
Add. code low:	0	-

**Correcting the error:**

Check bit 4 and bit 5 for the data length in the management byte of the parameter channel.

*Internal communication error*

The return code listed in the following table is sent back if a communication error has occurred within the system. The requested parameter service may not have been performed and should be repeated. If this error occurs again, switch off the drive inverter completely and then back on again so it is re-initialized.

	Code (dec)	Meaning
Error class:	6	Access
Error code:	2	Hardware fault
Add. code high:	0	-
Add. code low:	0	-

**Correcting the error:**

Repeat the parameter service. If the error occurs again, switch the drive inverter off and back on again (mains voltage + ext. DC 24 V). Contact SEW Service for advice if this error occurs continuously.



## Startup

### Starting the inverter with PROFIBUS-DP (MC\_41A)


#### Reading a parameter via PROFIBUS-DP (Read)

To execute a READ service via the parameter channel, due to the cyclical transfer of the parameter channel, the handshake bit may be changed only after the complete parameter channel has been set up for the specific service. As a result, adhere to the following sequence when reading a parameter:

1. Enter the index of the parameter to be read in byte 2 (Index high) and byte 3 (Index low).
2. Enter the service identifier for the Read service in the management byte (byte 0).
3. Transfer the read service to the inverter by changing the handshake bit.

Since this is a read service, the sent data bytes (bytes 4 ... 7) and the data length (in the management byte) are ignored and do not need to be set.

The inverter now processes the read service and sends back the service confirmation by changing the handshake bit.

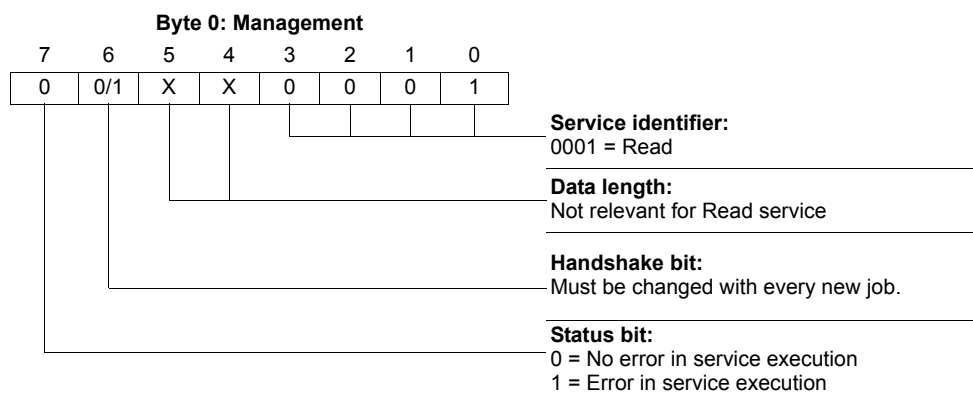

X = not relevant  
0/1 = Bit value is changed

The data length is not relevant, you only need to enter the service identifier for the READ service. This service is now activated in the drive inverter when the handshake bit changes. It would be possible to activate the read service with the management byte coding 01<sub>hex</sub> or 41<sub>hex</sub>.




**Writing a parameter via PROFIBUS-DP (Write)**

To execute a WRITE service via parameter channel, the handshake bit may be changed only after the complete parameter channel has been prepared according to the service because of the cyclical transfer of the parameter channel. Observe the following sequence when writing a parameter:

1. Enter the index of the parameter to be written in byte 2 (Index high) and byte 3 (Index low).
2. Enter the data to be written in bytes 4... 7.
3. Enter the service identifier and the data length for the Write service in the management byte (byte 0).
4. Transfer the Write service to the inverter by changing the handshake bit.

The inverter now processes the Write service and sends back the service confirmation by changing the handshake bit.

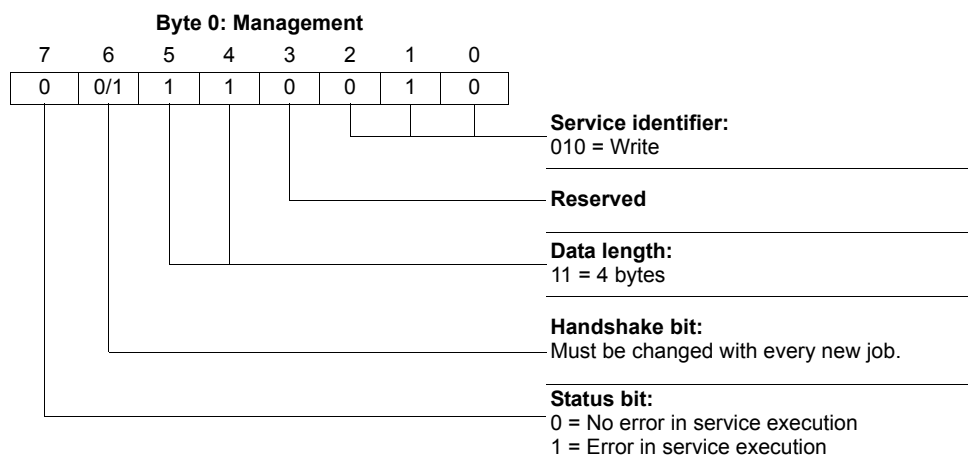

0/1 = Bit value is changed

The data length is 4 bytes for all parameters of SEW drive inverters. This service is now transferred to the drive inverter when the handshake bit changes. This means a Write service to SEW drive inverters generally has the management byte coding 32<sub>hex</sub> or 72<sub>hex</sub>.



### Programming with PROFIBUS-DP

Taking the example of the WRITE service, the following figure represents a process of setting parameters between the controller and the drive inverter via PROFIBUS-DP (→ Figure 36). To simplify the process, only the management byte of the parameter channel is displayed in Figure 36.

The parameter channel is only received and returned by the drive inverter while the controller is preparing the parameter channel for the Write service. The service is not activated until the moment when the handshake bit is changed (in this example, when it changes from 0 to 1). The drive inverter now interprets the parameter channel and processes the write service, but continues to answer all messages with handshake bit = 0. The executed service is acknowledged with a change of the handshake bit in the response message of the drive inverter. The controller now detects that the received handshake bit is once again the same as the one which was sent. It can now prepare another parameter setting procedure.

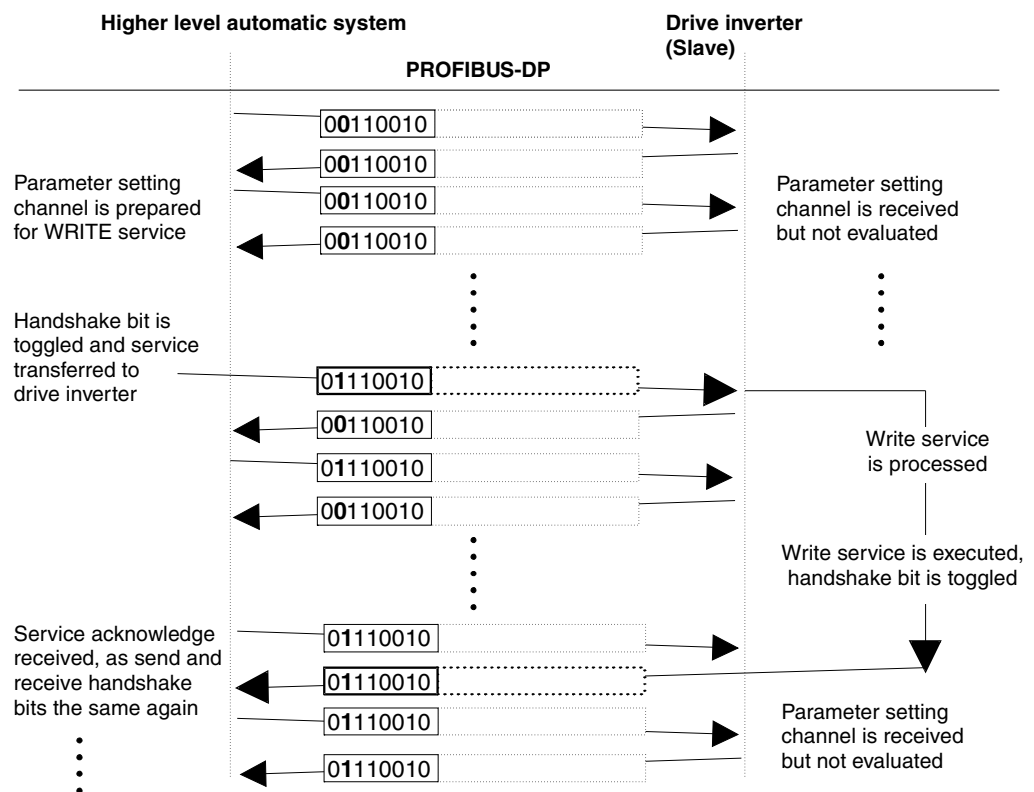


Figure 36: Parameter setting procedure

00152BEN

### Parameter data format

When parameters are set via the fieldbus interface, the same parameter coding is used as with the serial RS485 interfaces or the system bus.

The data formats and value ranges for the individual parameters are listed in the "MOVIDRIVE® Serial Communication" manual available from SEW.





## 6 Operation

### 6.1 Operating displays for MC\_40A (without fieldbus)

The operating status of MOVIDRIVE<sup>®</sup> compact MC\_40A is displayed on LED V1.

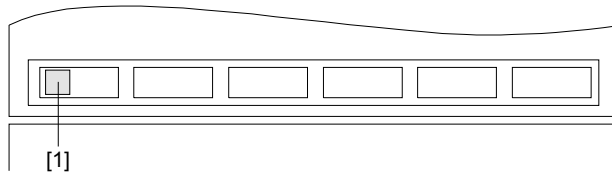


Figure 37: MOVIDRIVE<sup>®</sup> compact MC\_40A operating display

05428BXX

[1] Operation LED V1 (three colors: green/red/yellow)

#### Operation LED V1

The operating status of MOVIDRIVE<sup>®</sup> compact MC\_40A are displayed by the three-color LED V1 (green/red/yellow).

Color	Operating state	Description
-	OFF	Without voltage
Yellow	Steady light	Controller inhibit or No enable
Green	Steady light	Enable
Red	Steady light	Locking system error
Yellow	Flashing	Unit not ready
Green	Flashing	Flying start in process
Green/red	Flashing 0.5 s green / 0.5 s red	Limit switch contacted
Yellow/red	Flashing 0.5 s yellow / 0.5 s red	Limit switch contacted
Green/red	Flashing green green red red	Display or wait system error
Yellow/red	Flashing yellow yellow red red	Display or wait system error
Green/yellow	0.75 s green / 0.75 s yellow	Timeout active



## 6.2 Operating displays for MC\_41A (PROFIBUS-DP)

The operating status of MOVIDRIVE<sup>®</sup> compact MC\_41A is displayed on the following LEDs.

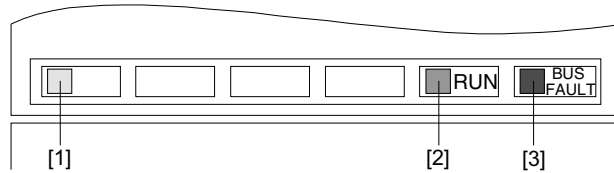


Figure 38: MOVIDRIVE<sup>®</sup> compact MC\_41A operating displays

02902BXX

- [1] Operation LED V1 (three colors: green/red/yellow)
- [2] PROFIBUS-DP LED "RUN" (green)
- [3] PROFIBUS-DP LED "BUS-FAULT" (red)

### Operation LED V1

The operating status of MOVIDRIVE<sup>®</sup> compact MC\_41A are displayed by the three-color LED V1 (green/red/yellow).

Color		Operating state	Description
-	OFF	Without voltage	No supply voltage and no DC 24 V backup voltage.
Yellow	Steady light	Controller inhibit or No enable	Unit ready but controller inhibit active (DIØØ = "0") or no enable.
Green	Steady light	Enable	Motor is energized.
Red	Steady light	Locking system error	Error causes unit to disconnect.
Yellow	Flashing	Unit not ready	Factory setting in progress or DC 24 V backup mode without supply voltage.
Green	Flashing	Flying start in process	Operating mode VFC & FLYING START is set and inverter connected to a rotating motor.
Green/red	Flashing 0.5 s green / 0.5 s red	Limit switch contacted	Limit switch reached in "enable" operating status.
Yellow/red	Flashing 0.5 s yellow / 0.5 s red	Limit switch contacted	Limit switch reached in "Controller inhibit" operating status.
Green/red	Flashing green green red red	Displaying or waiting system error	Fault in "enable" operating status. Fault is only displayed and does not lead to a switch-off.
Yellow/red	Flashing yellow yellow red red	Displaying or waiting system error	Fault in "controller inhibit" operating status. Fault is only displayed and does not lead to a switch-off.
Green/yellow	0.75 s green / 0.75 s yellow	Timeout active	Enable ineffective, inverter is waiting for a valid telegram.

### PROFIBUS-DP LEDs

The "RUN" LED (green) indicates that the bus electronics are operating correctly. The "BUS FAULT" LED (red) displays PROFIBUS-DP errors.

RUN	BUS FAULT	Meaning
ON	ON	Connection to the DP master has failed; check bus connection. Unit cannot detect a baud rate, check setting in DP master. Bus interruption or DP master out of order.
ON	OFF	Unit is currently exchanging data with the DP master (data exchange).
ON	FLASHES	Unit has detected the baud rate, but is not addressed by DP master. Set the unit address (P092) and the address in the project planning software of the DP master to the same value. Unit was not configured in DP master or configured incorrectly. Check project planning, use GSD file SEW_6002.GSD.
OFF	-	Hardware fault in bus electronics. Switch unit off/on; contact SEW service if the error occurs again.
FLASHES	-	PROFIBUS address set to a value greater than 125. Set address ≤ 125.



### 6.3 DBG11B keypad

#### Basic displays

<pre>CONTROLLER INHIBIT CURRENT:      0 A</pre>	Display when X11:1 (DI00 "/CONTROLLER INHIBIT") = "0".
<pre>NO ENABLE CURRENT:      0 A</pre>	Display for X11:1 (DI00 "/CONTROLLER INHIBIT") = "1" and disabled inverter ("ENABLE/STOP" = "0").
<pre>SPEED 942 1/min CURRENT:    2.51 A</pre>	Display for enabled inverter.
<pre>NOTE XX XXXXXXXXXXXXXXXXXXXX</pre>	Information message
<pre>FAULT XX XXXXXXXXXXXXXXXXXXXX</pre>	Error display

#### DBG11B copy function

You can use the DBG11B keypad to copy parameter sets from one MOVIDRIVE® unit to other MOVIDRIVE® units. To do so, copy the parameter set to the keypad with P 807 (MD\_ → DBG). Plug the keypad into another MOVIDRIVE® unit and copy the parameter set with P 806 (DBG → MD\_) onto the unit. You can plug in or remove the keypad during operation.

#### No connection between inverter and DBG11B


If a connection cannot be established with the keypad once the mains power has been switched on or the DC 24 V supply connected, one of the following fault messages can appear:

<pre>COMMUNIC. ERROR NO SERIAL LINK</pre>	There may also be a fault in the MOVIDRIVE® unit
<pre>ERROR WHILE COPY FLASH ERR. XX</pre>	Error in the DBG11B keypad
<pre>FATAL ERROR! CODE CRC WRONG</pre>	

Try to establish the connection by removing the keypad and plugging it in again. If you cannot establish a connection, send the unit (DBG11B keypad, maybe also MOVIDRIVE®) to SEW-EURODRIVE for repair or replacement.




Selected via menu

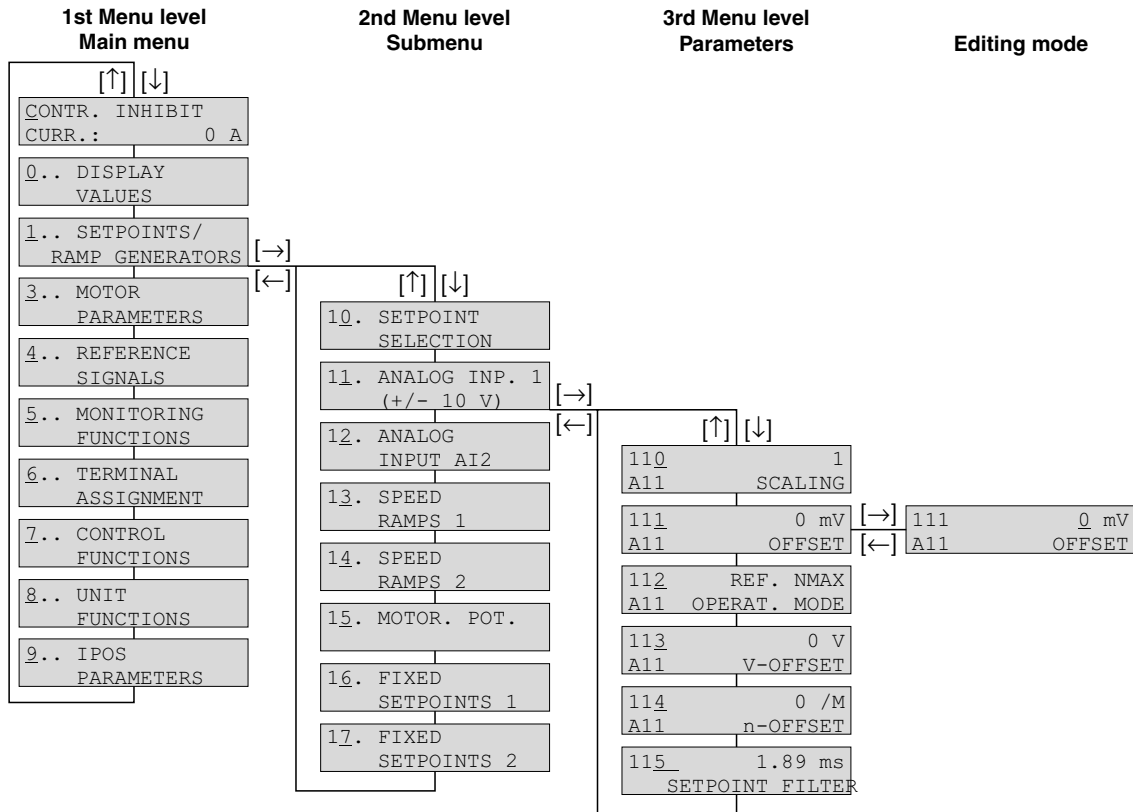

02407AEN

Figure 39: Menu structure

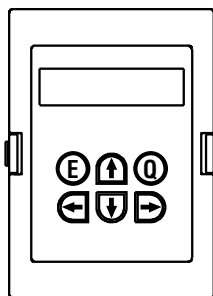

01406AXX

- ← or → key: Change the menu level, in the 3rd menu level (parameter), enter (→) or leave (←) the edit mode. The parameter can only be changed in edit mode. Pressing the ← and → keys at the same time, triggers startup (→ Sec. "Startup").
- ↑ or ↓ key: Select the menu item; in edit mode, select higher or lower value. The new value takes effect when you release the ↑ or ↓ key in edit mode.
- Q key: Back to the basic display; in startup mode, startup is terminated.
- E key: Startup: Termination of startup
- Normal operation: Signature is displayed; the signature can only be entered or changed using MOVITools/SHELL. It is used to identify the parameter set or the unit.
- Manual operation: Leave manual mode
- In case of malfunction: Reset parameter P840 is called up



**DBG11B quick menu**

The DBG11B keypad has a detailed parameter menu with all parameters and a quick menu with the most frequently used parameters. You can switch between the two menus in any operating state using P800 ("Short menu"). The quick menu is displayed as the default setting. The quick menu is shown in the display with a "/" after the parameter number. In the parameter list, the parameters of the quick menu are indicated by a "/".

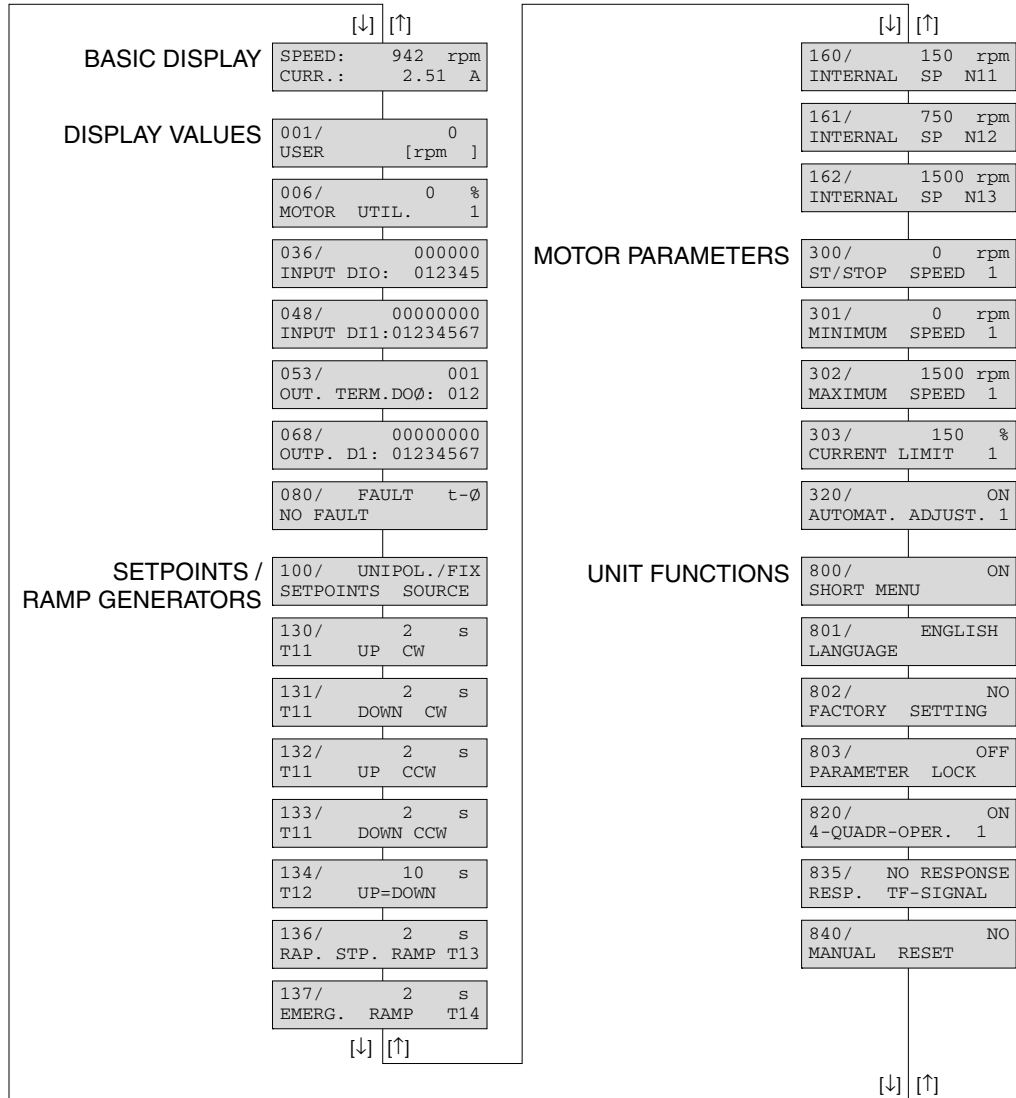


Figure 40: DBG11B quick menu

02408AEN

**IPOS<sup>plus</sup>**

MOVITOOLS<sup>®</sup> is required to program IPOS<sup>plus</sup><sup>®</sup>. The DBG11B keypad only allows you to edit and change IPOS<sup>plus</sup><sup>®</sup> parameters (P9\_\_).

The IPOS<sup>plus</sup><sup>®</sup> program is also stored in the DBG11B keypad when it is saved and is consequently also transferred to another MOVIDRIVE<sup>®</sup> unit when the parameter set is copied.

Parameter P931 can be used to start and stop the IPOS<sup>plus</sup><sup>®</sup> program from the DBG11B keypad.



#### Information messages

Information messages on the DBG11B (ca. 2 s long) or in MOVITOOLS/SHELL (message that can be acknowledged):

No.	Text in DBG11B/SHELL	Description
1	ILLEGAL INDEX	Index addressed via interface not available.
2	NOT IMPLEMENT.	<ul style="list-style-type: none"> <li>• Attempt to execute a function that is not implemented.</li> <li>• An incorrect communication service has been selected.</li> <li>• Manual operation selected via invalid interface (e.g. fieldbus).</li> </ul>
3	READ ONLY VALUE	You tried to change a read only value.
4	PARAM. INHIBITED	Parameter lock P803 = "ON", Parameter cannot be altered.
5	SETUP ACTIVE	You tried to change parameters when factory setting is active.
6	VALUE TOO HIGH	You tried to enter a value that is too high.
7	VALUE TOO LOW	You tried to enter a value that is too low.
8	REQ. CARD MISSING	The option card required for the selected function is missing.
--		
--		
11	ONLY TERMINAL	Manual mode must be exited via TERMINAL (DBG11B or USS21A).
12	NO ACCESS	Access to selected parameter denied.
13	CTRL. INHIBIT MISSING	Set terminal DIØØ "/Controller inhibit" = "0" for the selected function.
14	INVALID VALUE	You tried to enter an invalid value.
--		
16	PARAM. NOT LOCKED	Overflow of EEPROM buffer, e.g. through cyclic write access. Parameter not stored in non-volatile EEPROM.
17	INVERTER ENABLED	<ul style="list-style-type: none"> <li>• Parameter to be changed can only be set in the state "CONTROLLER INHIBIT."</li> <li>• You tried to change to manual mode during live operation.</li> </ul>



## 7 Service

### 7.1 Fault information

**Fault memory** The error memory (P080) stores the last five error messages (errors t-0 to t-4). The error message of longest standing is deleted whenever more than five error messages have occurred. When the fault occurs, the following information is saved: fault that occurred • status of binary inputs/outputs • operating status of the inverter • inverter status • heat sink temperature • speed • output current • active current • unit utilization • DC link voltage • ON hours • enable hours • parameter set • motor utilization.

**Switch-off responses** There are three switch-off responses depending on the fault; the inverter remains inhibited in fault status:

**Immediate stop** The unit can no longer brake the drive; the output stage goes to high resistance in the event of a fault and the brake is applied immediately (DBØØ "/Brake" = "0").

**Rapid stop** The drive is braked with the stop ramp t13/t23. Once the stop speed is reached (→ P300/P310), the brake is applied (DBØØ "/Brake" = "0"). The output stage goes to high resistance after the brake reaction time has elapsed (P732 / P735).

**Emergency stop** The drive is braked with the emergency ramp t14/t24. Once the stop speed is reached (→ P300/P310), the brake is applied (DBØØ "/Brake" = "0"). The output stage goes to high resistance after the brake reaction time has elapsed (P732 / P735).

**Reset** An error message can be acknowledged by:

- Switching the power supply off and on again.  
Recommendation: Observe a minimum switch-off time of 10 s for the supply system contactor K11.
- Reset via input terminals, i.e. via an appropriately assigned binary input.
- Manual reset in SHELL (P840 = "YES" or [Parameter] / [Manual reset]).
- Manual reset using the DBG11B (pressing the <E> key in the event of a fault gives direct access to parameter P840).

	<p><b>! DANGER!</b></p>
	<p>Risk of crushing if the motor starts up automatically after an auto reset. Severe or fatal injuries.</p> <ul style="list-style-type: none"> <li>• Do not use auto reset with drives where an automatic restart represents a danger to people or units.</li> <li>• Perform a manual reset.</li> </ul>

**Inverter is waiting for data** If the inverter is controlled via a communication interface (fieldbus, RS485 or SBus) and the power was switched off and back on again or a fault reset was performed, then the enable remains ineffective until the inverter once again receives valid data via the interface, which is monitored with a timeout.



## 7.2 Fault list

A dot in the "P" column indicates that the response is programmable (P83\_ Fault response). The factory set error response appears in the "Response" column.

Fault code	Designation	Response	P	Possible cause	Measure
00	No error	-			
01	Overcurrent	Immediate shut-off		<ul style="list-style-type: none"> <li>Short circuit output</li> <li>Motor too large</li> <li>Faulty output stage</li> </ul>	<ul style="list-style-type: none"> <li>Rectify the short circuit</li> <li>Connect a smaller motor</li> <li>Contact SEW Service for advice if the output stage is defective.</li> </ul>
03	ground fault	Immediate shut-off		ground fault <ul style="list-style-type: none"> <li>in the incoming cable</li> <li>in the inverter</li> <li>in the motor</li> </ul>	<ul style="list-style-type: none"> <li>Eliminate ground fault</li> <li>Consult SEW Service</li> </ul>
04	Brake chopper	Immediate switch-off		<ul style="list-style-type: none"> <li>Too much regenerative power</li> <li>Braking resistor circuit interrupted</li> <li>Short circuit in the braking resistor circuit</li> <li>Brake resistor has too high resistance</li> <li>Brake chopper is defective</li> <li>possibly also ground fault</li> </ul>	<ul style="list-style-type: none"> <li>Extend deceleration ramps</li> <li>Check supply cable to braking resistor</li> <li>Check technical data of braking resistor</li> <li>Replace MOVIDRIVE® if the brake chopper is defective</li> <li>Check for ground fault.</li> </ul>
07	DC link overvoltage	Immediate switch-off		<ul style="list-style-type: none"> <li>DC link voltage too high</li> <li>possibly also ground fault</li> </ul>	<ul style="list-style-type: none"> <li>Extend deceleration ramps</li> <li>Check supply cable to the braking resistor</li> <li>Check technical data of braking resistor</li> <li>Check for ground fault.</li> </ul>
08	n-monitoring	Immediate switch-off		<ul style="list-style-type: none"> <li>Speed controller or current controller (in VFC operating mode without encoder) operating at setting limit due to mechanical overload or phase failure in the power supply or motor.</li> <li>Encoder not connected correctly or incorrect direction of rotation.</li> <li><math>n_{max}</math> is exceeded during torque control.</li> </ul>	<ul style="list-style-type: none"> <li>Reduce load</li> <li>Increase deceleration time setting (P501 or P503).</li> <li>Check encoder connection, possibly swap over A/A and B/B in pairs</li> <li>Check encoder voltage supply</li> <li>Check current limitation</li> <li>Extend ramps if necessary</li> <li>Check motor cable and motor</li> <li>Check mains phases</li> </ul>
09	Startup	Immediate switch-off		Inverter has not been taken into operation for the selected operating mode.	Perform startup for the required operating mode.
10	IPOS-ILLOP	Emergency stop		<ul style="list-style-type: none"> <li>Incorrect command detected during execution of the IPOS<sup>plus</sup>® program.</li> <li>Incorrect conditions during command execution.</li> <li>Function does not exist in inverter.</li> </ul>	<ul style="list-style-type: none"> <li>Check the content of the program memory and, if necessary, correct</li> <li>Load the correct program into the program memory</li> <li>Check program sequence (→ IPOS manual).</li> <li>Use another function</li> </ul>
11	Excessive temperature	Emergency stop		Thermal overload of inverter	Reduce load and/or ensure adequate cooling.
12	Resolver 14 bit	Emergency stop		14-bit resolver evaluation is active and the actual speed is > 3600 1/min	Set <i>P302 Maximum speed 1</i> to max. 3600 1/min
13	Control signal source	Immediate switch-off		Control signal source not defined or defined incorrectly.	Set correct control signal source (P101).
14	Encoder	Immediate switch-off		<ul style="list-style-type: none"> <li>Encoder cable or shield not connected correctly</li> <li>Short circuit/broken encoder wire</li> <li>Encoder defective</li> </ul>	Check encoder cable and shield for correct connection, short circuit and broken wire.
15	24 V internal	Immediate switch-off		No internal DC 24 V supply voltage.	Check power supply connection. Consult SEW service if the error occurs again.
17-24	System error	Immediate switch-off		Malfunction of inverter electronics, possibly due to EMC influence.	Check ground connections and shielding and correct, if necessary. Contact SEW service if this error occurs again.
25	EEPROM	Rapid stop		Error while accessing EEPROM	Activate factory settings, perform reset and reset parameters. Contact SEW service if the error occurs again.
26	External terminal	Emergency stop		Read in external error signal via programmable input.	Eliminate specific cause of error; reprogram terminal if necessary.
27	No limit switches	Emergency stop		<ul style="list-style-type: none"> <li>Open circuit/both limit switches missing.</li> <li>Limit switches are swapped over in relation to direction of rotation of motor</li> </ul>	<ul style="list-style-type: none"> <li>Check wiring of limit switches</li> <li>Swap limit switch connections</li> <li>Reprogram terminals</li> </ul>





Fault code	Designation	Response	P	Possible cause	Measure
28	Fieldbus Timeout	Rapid stop		<ul style="list-style-type: none"> <li>No communication between master and slave within the projected response monitoring.</li> </ul>	<ul style="list-style-type: none"> <li>Check communications routine of the master</li> <li>Extend fieldbus timeout time (P819)/deactivate monitoring</li> </ul>
29	Limit switch contacted	Emergency stop		Limit switch was reached in IPOS operating mode.	<ul style="list-style-type: none"> <li>Check travel range</li> <li>Correct operator program</li> </ul>
30	Emergency stop Timeout	Immediate switch-off		<ul style="list-style-type: none"> <li>Drive overloaded</li> <li>Emergency stop ramp too short.</li> </ul>	<ul style="list-style-type: none"> <li>Check project planning</li> <li>Extend emergency stop ramp</li> </ul>
31	TF trip	No Response		<ul style="list-style-type: none"> <li>Motor too hot, TF sensor has tripped</li> <li>TF sensor of motor not connected or connected incorrectly</li> <li>Connection of MOVIDRIVE® and TF on motor interrupted</li> </ul>	<ul style="list-style-type: none"> <li>Let motor cool off and reset error</li> <li>Check connections/link between MOVIDRIVE® and TF</li> <li>Set P835 to "No response"</li> </ul>
32	IPOS Index overflow	Emergency stop		Programming principles violated leading to internal system stack overflow	Check IPOS user program and correct if necessary (→ IPOS manual)
33	Setpoint source	Immediate switch-off		Setpoint source not defined or defined incorrectly	Set correct setpoint source (P100)
35	Operating mode	Immediate switch-off		Operating mode not defined or defined incorrectly	Use P700 or P701 to set correct operating mode
37	System watchdog	Immediate switch-off		Error during execution of system software	Contact SEW Service.
38	System software	Immediate switch-off		System error	Contact SEW Service.
39	Reference travel	Immediate switch-off		<ul style="list-style-type: none"> <li>The reference cam is missing or does not switch</li> <li>Limit switches are connected incorrectly</li> <li>Reference travel type was changed during reference travel</li> </ul>	<ul style="list-style-type: none"> <li>Check reference cam</li> <li>Check limit switch connection</li> <li>Check reference travel type setting and required parameters.</li> </ul>
41	IPOS watchdog option	Immediate switch-off		<ul style="list-style-type: none"> <li>Error in communication between system software and option software</li> <li>Watchdog in the IPOS program.</li> <li>An application module has been loaded in a MOVIDRIVE® unit without the application version.</li> <li>The wrong technology function has been set if an application module is used.</li> </ul>	<ul style="list-style-type: none"> <li>Consult SEW Service</li> <li>Check IPOS<sup>plus</sup>® program</li> <li>Check whether the unit has been activated for the application version (P079)</li> <li>Check the selected technology function (P078)</li> </ul>
42	Lag error	Immediate switch-off		<ul style="list-style-type: none"> <li>Encoder connected incorrectly</li> <li>Acceleration ramps too short</li> <li>P component of positioning controller too small</li> <li>Incorrectly set speed controller parameters</li> <li>Value of lag fault tolerance too small</li> </ul>	<ul style="list-style-type: none"> <li>Check encoder connection</li> <li>Extend ramps</li> <li>Set P component to higher value</li> <li>Reset speed controller parameters</li> <li>Increase lag fault tolerance</li> <li>Check wiring of encoder, motor and mains phase.</li> <li>Check whether mechanical system components can move freely or if they are blocked</li> </ul>
43	RS485 timeout	Rapid stop		<ul style="list-style-type: none"> <li>Connection between inverter and PC interrupted.</li> </ul>	Check connection between inverter and PC. Contact SEW Service if necessary.
44	Unit utilization	Immediate switch-off		Unit utilization (IxT value) exceeds 125 %	<ul style="list-style-type: none"> <li>Decrease power output</li> <li>Extend ramps</li> <li>If suggested actions not possible, use larger inverter</li> </ul>
45	Initialization	Immediate switch-off		<ul style="list-style-type: none"> <li>No parameters set for EEPROM in power section, or parameters set incorrectly.</li> </ul>	Restore factory settings Consult SEW Service if the fault still cannot be reset
47	System bus timeout	Rapid stop		<ul style="list-style-type: none"> <li>Error during communication via system bus.</li> </ul>	Check system bus connection.
77	IPOS control word	No Response		<p><b>In IPOS operating mode only:</b></p> <ul style="list-style-type: none"> <li>An attempt was made to set an invalid automatic mode (via external controller).</li> <li>P916 set incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>Check serial connection to external controller</li> <li>Check write values of external controller</li> <li>Set correct value for P916</li> </ul>
78	IPOS SW limit switch	No Response		<p><b>In IPOS operating mode only:</b></p> <p>Programmed target position is outside travel range delimited by software limit switches.</p>	<ul style="list-style-type: none"> <li>Check the user program</li> <li>Check position of software limit switches</li> </ul>



Fault code	Designation	Response	P	Possible cause	Measure
81	Start condition	Immediate switch-off		<b>Only in "VFC hoist" operating mode:</b> The motor could not be supplied with the correct amount of current during the pre-magnetizing time: <ul style="list-style-type: none"> <li>Rated motor power too small in relation to rated inverter power.</li> <li>Motor cable cross section too small.</li> </ul>	<ul style="list-style-type: none"> <li>Check startup data and perform new startup, if necessary.</li> <li>Check connection between inverter and motor</li> <li>Check cross section of motor cable and increase if necessary</li> </ul>
82	Open output	Immediate switch-off		<b>Only in "VFC hoist" operating mode:</b> <ul style="list-style-type: none"> <li>Two or all output phases interrupted.</li> <li>Rated motor power too small in relation to rated inverter power.</li> </ul>	<ul style="list-style-type: none"> <li>Check connection between inverter and motor</li> <li>Check startup data and perform new startup, if necessary.</li> </ul>
84	Motor protection	Emergency stop		<ul style="list-style-type: none"> <li>Motor utilization too high.</li> </ul>	<ul style="list-style-type: none"> <li>Reduce load</li> <li>Extend ramps</li> <li>Observe longer pause times</li> </ul>
85	Copy	Immediate switch-off		Error while copying parameters.	Check connection between inverter and PC
87	Technology function	Immediate switch-off		Attempt made to load the parameter set for an application version unit with the technology function activated into a standard version unit.	Activate the factory settings (P802 = YES) and reset the unit
88	Flying start	Immediate switch-off		<b>Only in VFC n-CTRL operating mode:</b> Actual speed > 5000 1/min when inverter enabled.	Inverter not enabled before actual speed is ≤ 5000 1/min.
94	EEPROM checksum	Immediate switch-off		Inverter electronics disrupted, possibly due to effect of EMC or a defect.	Send unit in for repair
99	IPOS ramp calculation error	Immediate switch-off		<b>In IPOS operating mode only:</b> Positioning ramp is sinusoidal or square and an attempt is made to change ramp times and traveling velocities with enabled inverter.	Rewrite the IPOS <sup>plus</sup> ® program so that ramp times and traveling velocities can only be altered when the inverter is inhibited.



### 7.3 SEW Electronics Service

**Send in for repair** Please contact the **SEW-EURODRIVE electronics service** if a fault cannot be rectified (→ "Customer and spare parts service").


When contacting SEW electronics service, always quote the digits on the status label so that our service personnel can assist you more effectively.

**Please provide the following information when sending the unit in for repair:**

- Serial number (→ nameplate)
- Unit designation
- Standard version or application version
- Digits on the status label
- Short description of application (drive application, control via terminals or serial)
- Connected motor (motor type, motor voltage,  $\Delta$  or  $\Delta$  connection)
- Nature of the error
- Accompanying circumstances
- Your own presumptions as to what has happened
- Any unusual events preceding the problem, etc.

#### Status label

The MOVIDRIVE® units have a status label for the power section and one for the control unit. They are attached to the side of the unit next to the nameplate.

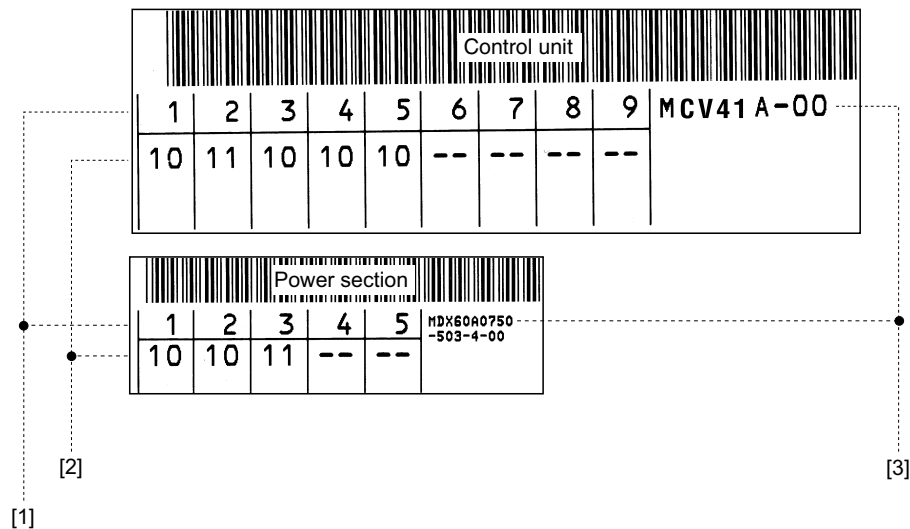

60494AEN

[1] Component / part

[2] Status

[3] Unit designation



### 7.4 **Extended storage**

If the unit is being stored for a long time, connect it to the mains voltage for at least 5 minutes every 2 years. Otherwise, the unit's service life may be reduced.

**Procedure when maintenance has been neglected:**

Electrolytic capacitors are used in the inverters. They are subject to aging effects when deenergized. This effect can damage the capacitors if the unit is connected using the rated voltage after a longer period of storage.

If you have not performed maintenance regularly, SEW-EURODRIVE recommends that you increase the supply voltage slowly up to the maximum voltage. This can be done, for example, by using a variable transformer for which the output voltage has been set according to the following overview. We recommend that you increase the voltage from 0 V to the first stage after a few seconds.

The following stages are recommended:

AC 400/500 V units:

- Stage 1: AC 350 V for 15 minutes
- Stage 2: AC 420 V for 15 minutes
- Stage 3: AC 500 V for 1 hour

AC 230 V units:


- Stage 1: AC 170 V for 15 minutes
- Stage 2: AC 200 V for 15 minutes
- Stage 3: AC 240 V for 1 hour

After you have completed the regeneration process, the unit can be used immediately or stored again for an extended period with maintenance.

### 7.5 **Waste disposal**

Please follow the current instructions. Dispose of the following materials in accordance with the regulations in force:

- Electronics scrap (circuit boards)
- Plastic (housing)
- Sheet metal
- Copper

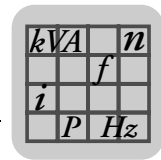

## 8 Technical Data

### 8.1 CE marking, UL approval and C-Tick

#### CE marking


- Low voltage directive  
MOVIDRIVE<sup>®</sup> *compact* drive inverters comply with the regulations of the Low Voltage Directive 73/23/EEC.
- Electromagnetic compatibility (EMC)  
MOVIDRIVE<sup>®</sup> *compact* drive inverters are designed for use as components for installation in machines and systems. They comply with the EMC product standard EN 61800-3 "Variable-speed electrical drives." Provided the installation instructions are complied with, they satisfy the appropriate requirements for CE marking of the entire machine/system in which they are installed, on the basis of the EMC Directive 89/336/EEC.  
MOVIDRIVE<sup>®</sup> *compact* drive inverters size 1 and 2 are equipped with a line filter as standard. These units comply with limit class A to EN 55011 and EN 55014 on the line side without further measures.



The CE mark on the nameplate indicates conformity with the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC. We can provide a copy of the declaration of conformity on request.

#### UL / cUL / GOST-R


UL, cUL approval (USA) and the GOST-R certificate (Russia) have been approved for the MOVIDRIVE<sup>®</sup> *compact* unit series. cUL is equivalent to CSA approval.

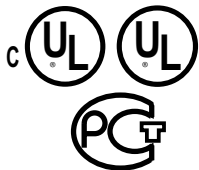

#### C-Tick



C-Tick approval has been granted for the entire MOVIDRIVE<sup>®</sup> *compact* unit series. C-Tick certifies conformity with ACA (Australian Communications Authority) standards.

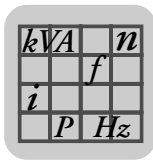


## 8.2 General technical data

The following table lists the technical data applicable to all MOVIDRIVE<sup>®</sup> compact drive inverters, regardless of their type, version, size and power rating.

MOVIDRIVE <sup>®</sup> compact	All sizes
<b>Interference immunity</b>	Fulfills EN 61800-3
<b>Interference emission with EMC-compliant installation</b>	Sizes 1 to 5: <ul style="list-style-type: none"> <li>Comply with EN 61800-3</li> <li>According to class B limit to EN 55011 and EN 55014</li> </ul> Sizes 1 and 2: <ul style="list-style-type: none"> <li>Comply with class A limit to EN 55011 and EN 55014 on the line side without further measures</li> </ul>
<b>Ambient temperature</b> $\vartheta_U$  <b>Derating ambient temperature</b>  <b>Climate class</b>	0 °C...+50 °C when $I_D = 100\% I_N$ and $f_{PWM} = 4$ kHz 0 °C...+40 °C when $I_D = 125\% I_N$ and $f_{PWM} = 4$ kHz 0 °C...+40 °C when $I_D = 100\% I_N$ and $f_{PWM} = 8$ kHz Derating: <ul style="list-style-type: none"> <li>2.5 % <math>I_N</math> per K between 40 °C - 50 °C</li> <li>3.5 % <math>I_N</math> per K between 50 °C - 60 °C</li> </ul> EN 60721-3-3, class 3K3
<b>Storage temperature<sup>1)</sup></b> $\vartheta_L$	-25 °C...+70 °C (EN 60721-3-3, class 3K3) DBG keypad: -20 °C...+60 °C
<b>Cooling type (DIN 51751)</b>	Forced cooling Temperature-controlled fan, response threshold at $\vartheta = 45$ °C
<b>Enclosure</b> <b>Sizes 1 to 3</b> <b>EN 60529</b> <b>Sizes 4 and 5</b> <b>(NEMA 1)</b>	IP20 IP00 (power connections); IP10 with mounted Plexiglas cover supplied as standard
<b>Operating mode</b>	Continuous operation with 50 % overload capacity
<b>Overvoltage category</b>	III according to IEC 60664-1 (VDE 0110-1)
<b>Pollution class</b>	2 according to IEC 60664-1 (VDE 0110-1)
<b>Installation altitude</b>	Up to $h \leq 1000$ m without restrictions. At $h \geq 1,000$ m and above the following restrictions apply: <ul style="list-style-type: none"> <li>From 1000 m to max. 4,000 m: <ul style="list-style-type: none"> <li><math>I_N</math> reduction by 1% per 100 m (330 ft)</li> </ul> </li> <li>From 2,000 m to max. 4,000 m: <ul style="list-style-type: none"> <li>AC 230 V units: <math>V_N</math> reduction by AC 3 V per 100 m</li> <li>AC 500 V units: <math>V_N</math> reduction by AC 6 V per 100 m</li> </ul> </li> </ul> Over 2,000 m only overvoltage class 2; external measures required for overvoltage class 3. Overvoltage classes according to DIN VDE 0110-1.

1) In case of long-term storage, the unit must be connected to the mains voltage for at least 5 minutes every two years, otherwise the unit's service life may be reduced.

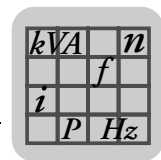

### 8.3 MOVIDRIVE® compact MCF/MCV/MCS4\_A...-5\_3 (AC 400/500 V units)

#### Size 1




02570AXX

MOVIDRIVE® compact		0015-5A3-4-0_	0022-5A3-4-0_	0030-5A3-4-0_	0040-5A3-4-0_
<b>INPUT</b>					
Supply voltage	$V_{\text{mains}}$	3 × AC 380 V -10 % ... 3 × AC 500 V +10%			
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %			
Rated mains current <sup>1)</sup> $I_{\text{mains}}$ (when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )	100 %	AC 3.6 A	AC 5.0 A	AC 6.3 A	AC 8.6 A
	125 %	AC 4.5 A	AC 6.2 A	AC 7.9 A	AC 10.7 A
<b>OUTPUT</b>					
Apparent output power <sup>2)</sup> (when $V_{\text{mains}} = 3 \times \text{AC } 400...500 \text{ V}$ )	$S_N$	2.8 kVA	3.8 kVA	4.9 kVA	6.6 kVA
Rated output current <sup>1)</sup> (when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )	$I_N$	AC 4 A	AC 5.5 A	AC 7 A	AC 9.5 A
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization			
Internal current limitation		$I_{\text{max}} = 0...150 \%$ can be set in menu (P303 / P313)			
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	68 Ω			
Output voltage	$U_A$	Max. $V_{\text{mains}}$			
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz			
Speed range / resolution	$n_A / \Delta n_A$	-5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range			
<b>GENERAL INFORMATION</b>					
Power loss at $P_N$	$P_{\text{Vmax}}$	85 W	105 W	130 W	180 W
Cooling air consumption		40 m <sup>3</sup> /h			
Weight		2.8 kg			
Dimensions	$W \times H \times D$	105 × 315 × 155 mm			



1) When  $V_{\text{mains}} = 3 \times \text{AC } 500 \text{ V}$ , the mains currents and output currents must be reduced by 20 % compared to the rated data.

2) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

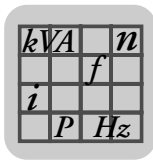

## Technical Data


MOVIDRIVE® compact MCF/MCV/MCS4\_A...-5\_3 (AC 400/500 V units)

MCF4_A standard version (VFC)	0015-5A3-4-00	0022-5A3-4-00	0030-5A3-4-00	0040-5A3-4-00
Part number MCF40A (without fieldbus)	826 738 3	826 739 1	826 740 5	826 741 3
Part number MCF41A (with PROFIBUS-DP)	826 835 5	826 836 3	826 837 1	826 838 X
MCF4_A application version (VFC)	0015-5A3-4-0T	0022-5A3-4-0T	0030-5A3-4-0T	0040-5A3-4-0T
Part number MCF40A (without fieldbus)	827 426 6	827 427 4	827 428 2	827 429 0
Part number MCF41A (with PROFIBUS-DP)	827 449 5	827 450 9	827 451 7	827 452 5
 Constant load Recommended motor power $P_{Mot}$	1.5 kW	2.2 kW	3.0 kW	4.0 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	2.2 kW	3.0 kW	4.0 kW	5.5 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC 400 V$ and $f_{PWM} = 4 kHz$ )	AC 5 A	AC 6.9 A	AC 8.8 A	AC 11.9 A

MCV4_A standard version (VFC/CFC)	0015-5A3-4-00	0022-5A3-4-00	0030-5A3-4-00	0040-5A3-4-00
Part number MCV40A (without fieldbus)	826 908 4	826 909 2	826 910 6	826 911 4
Part number MCV41A (with PROFIBUS-DP)	826 928 9	826 929 7	826 930 0	826 931 9
MCV4_A application version (VFC/CFC)	0015-5A3-4-0T	0022-5A3-4-0T	0030-5A3-4-0T	0040-5A3-4-0T
Part number MCV40A (without fieldbus)	827 472 X	827 473 8	827 474 6	827 475 4
Part number MCV41A (with PROFIBUS-DP)	827 495 9	827 496 7	827 497 5	827 498 3
VFC operating mode	Recommended motor power → MCF4_A			
CFC operating mode ( $f_{PWM} = 8 kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 4 A	AC 5.5 A	AC 7 A	AC 9.5 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"			

MCS4_A standard version (SERVO)	0015-5A3-4-00	0022-5A3-4-00	0030-5A3-4-00	0040-5A3-4-00
Part number MCS40A (without fieldbus)	827 060 0	827 061 9	827 062 7	827 063 5
Part number MCS41A (with PROFIBUS-DP)	827 077 5	827 078 3	827 079 1	827 080 5
MCS4_A application version (SERVO)	0015-5A3-4-0T	0022-5A3-4-0T	0030-5A3-4-0T	0040-5A3-4-0T
Part number MCS40A (without fieldbus)	827 518 1	827 519 X	827 520 3	827 521 1
Part number MCS41A (with PROFIBUS-DP)	827 541 6	827 542 4	827 543 2	827 544 0
SERVO operating mode ( $f_{PWM} = 8 kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 4 A	AC 5.5 A	AC 7 A	AC 9.5 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"			



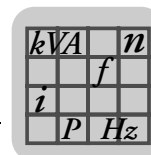

Size 2




02571AXX

MOVIDRIVE® compact		0055-5A3-4-0_	0075-5A3-4-0_	0110-5A3-4-0_
<b>INPUT</b>				
Supply voltage	$V_{\text{mains}}$	3 × AC 380 V -10 % ... 3 × AC 500 V +10 %		
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %		
Rated mains current <sup>1)</sup>	$I_{\text{mains}}$	AC 11.3 A	AC 14.4 A	AC 21.6 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )	100 % 125 %	AC 14.1 A	AC 18.0 A	AC 27.0 A
<b>OUTPUT</b>				
Apparent output power <sup>2)</sup>	$S_N$	8.7 kVA	11.2 kVA	16.8 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \dots 500 \text{ V}$ )				
Rated output current <sup>1)</sup>	$I_N$	AC 12.5 A	AC 16 A	AC 24 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )				
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization		
Internal current limitation		$I_{\text{max}} = 0 \dots 150 \%$ can be set in menu (P303 / P313)		
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	47 Ω		22 Ω
Output voltage	$U_A$	Max. $V_{\text{mains}}$		
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz		
Speed range / resolution	$n_A / \Delta n_A$	-5500 ... 0 ... +5500 $\text{min}^{-1}$ / 0.2 $\text{min}^{-1}$ across the entire range		
<b>GENERAL INFORMATION</b>				
Power loss at $P_N$	$P_{V\text{max}}$	220 W	290 W	400 W
Cooling air consumption		80 $\text{m}^3/\text{h}$		
Weight		5.9 kg		
Dimensions	$W \times H \times D$	130 × 335 × 207 mm		



1) When  $V_{\text{mains}} = 3 \times \text{AC } 500 \text{ V}$ , the mains currents and output currents must be reduced by 20 % compared to the rated data.

2) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

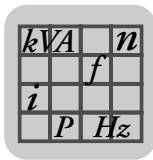


## Technical Data

MOVIDRIVE® compact MCF/MCV/MCS4\_A...-5\_3 (AC 400/500 V units)

MCF4_A standard version (VFC)	0055-5A3-4-00	0075-5A3-4-00	0110-5A3-4-00
Part number MCF40A (without fieldbus)	826 742 1	826 743 X	826 744 8
Part number MCF41A (with PROFIBUS-DP)	826 839 8	826 840 1	826 841 X
MCF4_A application version (VFC)	0055-5A3-4-0T	0075-5A3-4-0T	0110-5A3-4-0T
Part number MCF40A (without fieldbus)	827 430 4	827 431 2	827 432 0
Part number MCF41A (with PROFIBUS-DP)	827 453 3	827 454 1	827 455 X
 Constant load Recommended motor power $P_{Mot}$	5.5 kW	7.5 kW	11 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	7.5 kW	11 kW	15 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 400\ V$ and $f_{PWM} = 4\ kHz$ )	AC 15.6 A	AC 20.0 A	AC 30.0 A

MCV4_A standard version (VFC/CFC)	0055-5A3-4-00	0075-5A3-4-00	0110-5A3-4-00
Part number MCV40A (without fieldbus)	826 912 2	826 913 0	826 914 9
Part number MCV41A (with PROFIBUS-DP)	826 932 7	826 933 5	826 934 3
MCV4_A application version (VFC/CFC)	0055-5A3-4-0T	0075-5A3-4-0T	0110-5A3-4-0T
Part number MCV40A (without fieldbus)	827 476 2	827 477 0	827 478 9
Part number MCV41A (with PROFIBUS-DP)	827 499 1	827 500 9	827 501 7
VFC operating mode	Recommended motor power → MCF4_A		
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 12.5 A	AC 16 A	AC 24 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"		

MCS4_A standard version (SERVO)	0055-5A3-4-00	0075-5A3-4-00	0110-5A3-4-00
Part number MCS40A (without fieldbus)	827 064 3	827 065 1	827 066 X
Part number MCS41A (with PROFIBUS-DP)	827 081 3	827 082 1	827 083 X
MCS4_A application version (SERVO)	0055-5A3-4-0T	0075-5A3-4-0T	0110-5A3-4-0T
Part number MCS40A (without fieldbus)	827 522 X	827 523 8	827 524 6
Part number MCS41A (with PROFIBUS-DP)	827 545 9	827 546 7	827 547 5
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 12.5 A	AC 16 A	AC 24 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"		

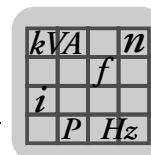

Size 3




02572AXX

MOVIDRIVE® compact	0150-503-4-0_	0220-503-4-0_	0300-503-4-0_
<b>INPUT</b>			
Supply voltage	$V_{\text{mains}}$	3 × AC 380 V -10 % ... 3 × AC 500 V +10 %	
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %	
Rated mains current <sup>1)</sup>	$I_{\text{mains}}$	100 %	125 %
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )		AC 28.8 A AC 36 A	AC 41.4 A AC 51.7 A
AC 54 A AC 67.5 A			
<b>OUTPUT</b>			
Apparent output power <sup>2)</sup>	$S_N$	22.2 kVA	31.9 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \dots 500 \text{ V}$ )			41.6 kVA
Rated output current <sup>1)</sup>	$I_N$	AC 32 A	AC 46 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )			AC 60 A
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization	
Internal current limitation		$I_{\text{max}} = 0 \dots 150 \%$ can be set in menu (P303 / P313)	
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	15 Ω	12 Ω
Output voltage	$U_A$	Max. $V_{\text{mains}}$	
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz	
Speed range / resolution	$n_A / \Delta n_A$	-5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range	
<b>GENERAL INFORMATION</b>			
Power loss at $P_N$	$P_{V\text{max}}$	550 W	750 W
Cooling air consumption		180 m <sup>3</sup> /h	
Weight		14.3 kg	
Dimensions	$W \times H \times D$	200 × 465 × 227 mm	



1) When  $V_{\text{mains}} = 3 \times \text{AC } 500 \text{ V}$ , the mains currents and output currents must be reduced by 20 % compared to the rated data.

2) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

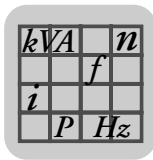


## Technical Data

MOVIDRIVE® compact MCF/MCV/MCS4\_A...-5\_3 (AC 400/500 V units)

MCF4_A standard version (VFC)	0150-503-4-00	0220-503-4-00	0300-503-4-00
Part number MCF40A (without fieldbus)	826 745 6	826 746 4	826 747 2
Part number MCF41A (with PROFIBUS-DP)	826 842 8	826 843 6	826 844 4
MCF4_A application version (VFC)	0150-503-4-0T	0220-503-4-0T	0300-503-4-0T
Part number MCF40A (without fieldbus)	827 433 9	827 434 7	827 435 5
Part number MCF41A (with PROFIBUS-DP)	827 456 8	827 457 6	827 458 4
 Constant load Recommended motor power $P_{Mot}$	15 kW	22 kW	30 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	22 kW	30 kW	37 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 400\ V$ and $f_{PWM} = 4\ kHz$ )	AC 40.0 A	AC 57.5 A	AC 75.0 A

MCV4_A standard version (VFC/CFC)	0150-503-4-00	0220-503-4-00	0300-503-4-00
Part number MCV40A (without fieldbus)	826 915 7	826 916 5	826 917 3
Part number MCV41A (with PROFIBUS-DP)	826 935 1	826 936 X	826 937 8
MCV4_A application version (VFC/CFC)	0150-503-4-0T	0220-503-4-0T	0300-503-4-0T
Part number MCV40A (without fieldbus)	827 479 7	827 480 0	827 481 9
Part number MCV41A (with PROFIBUS-DP)	827 502 5	827 503 3	827 504 1
VFC operating mode	Recommended motor power → MCF4_A		
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 32 A	AC 46 A	AC 60 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"		

MCS4_A standard version (SERVO)	0150-503-4-00	0220-503-4-00	0300-503-4-00
Part number MCS40A (without fieldbus)	827 067 8	827 068 6	827 069 4
Part number MCS41A (with PROFIBUS-DP)	827 084 8	827 085 6	827 086 4
MCS4_A application version (SERVO)	0150-503-4-0T	0220-503-4-0T	0300-503-4-0T
Part number MCS40A (without fieldbus)	827 525 4	827 526 2	827 527 0
Part number MCS41A (with PROFIBUS-DP)	827 548 3	827 549 1	827 550 5
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 32 A	AC 46 A	AC 60 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"		

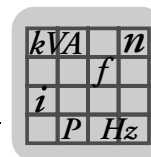

Size 4




02573AXX

MOVIDRIVE® compact		0370-503-4-0_	0450-503-4-0_
<b>INPUT</b>			
Supply voltage	$V_{\text{mains}}$	3 × AC 380 V -10 % ... 3 × AC 500 V +10 %	
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %	
Rated mains current <sup>1)</sup>	$I_{\text{mains}}$	AC 65.7 A	AC 80.1 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )	100 % 125 %	AC 81.9 A	AC 100.1 A
<b>OUTPUT</b>			
Apparent output power <sup>2)</sup>	$S_N$	51.1 kVA	62.3 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \dots 500 \text{ V}$ )			
Rated output current <sup>1)</sup>	$I_N$	AC 73 A	AC 89 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )			
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization	
Internal current limitation		$I_{\text{max}} = 0 \dots 150 \%$ can be set in menu (P303 / P313)	
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	6 Ω	
Output voltage	$U_A$	Max. $V_{\text{mains}}$	
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz	
Speed range / resolution	$n_A / \Delta n_A$	-5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range	
<b>GENERAL INFORMATION</b>			
Power loss at $P_N$	$P_{V\text{max}}$	1200 W	1450 W
Cooling air consumption		180 m <sup>3</sup> /h	
Weight		26.3 kg	
Dimensions	$W \times H \times D$	280 × 522 × 227 mm	



1) When  $V_{\text{mains}} = 3 \times \text{AC } 500 \text{ V}$ , the mains currents and output currents must be reduced by 20 % compared to the rated data.

2) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

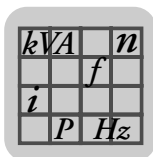


## Technical Data

MOVIDRIVE® compact MCF/MCV/MCS4\_A...-5\_3 (AC 400/500 V units)

<b>MCF4_A standard version (VFC)</b>	<b>0370-503-4-00</b>	<b>0450-503-4-00</b>
Part number MCF40A (without fieldbus)	826 748 0	826 749 9
Part number MCF41A (with PROFIBUS-DP)	826 845 2	826 846 0
<b>MCF4_A application version (VFC)</b>	<b>0370-503-4-0T</b>	<b>0450-503-4-0T</b>
Part number MCF40A (without fieldbus)	827 436 3	827 437 1
Part number MCF41A (with PROFIBUS-DP)	827 459 2	827 460 6
 Constant load Recommended motor power $P_{Mot}$	37 kW	45 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	45 kW	55 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 400\ V$ and $f_{PWM} = 4\ kHz$ )	AC 91 A	AC 111 A

<b>MCV4_A standard version (VFC/CFC)</b>	<b>0370-503-4-00</b>	<b>0450-503-4-00</b>
Part number MCV40A (without fieldbus)	826 918 1	826 919 X
Part number MCV41A (with PROFIBUS-DP)	826 938 6	826 939 4
<b>MCV4_A application version (VFC/CFC)</b>	<b>0370-503-4-0T</b>	<b>0450-503-4-0T</b>
Part number MCV40A (without fieldbus)	827 482 7	827 483 5
Part number MCV41A (with PROFIBUS-DP)	827 505 X	827 506 8
VFC operating mode	Recommended motor power → MCF4_A	
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 73 A	AC 89 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

<b>MCS4_A standard version (SERVO)</b>	<b>0370-503-4-00</b>	<b>0450-503-4-00</b>
Part number MCS40A (without fieldbus)	827 070 8	
Part number MCS41A (with PROFIBUS-DP)	827 087 2	
<b>MCS4_A application version (SERVO)</b>	<b>0370-503-4-0T</b>	<b>0450-503-4-0T</b>
Part number MCS40A (without fieldbus)	827 528 9	827 529 7
Part number MCS41A (with PROFIBUS-DP)	827 551 3	827 552 1
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 73 A	AC 89 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

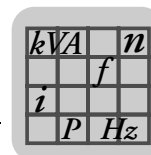

Size 5




02574AXX

MOVIDRIVE® compact		0550-503-4-0_	0750-503-4-0_
<b>INPUT</b>			
Supply voltage	$V_{\text{mains}}$	3 × AC 380 V –10 % ... 3 × AC 500 V +10 %	
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %	
Rated mains current <sup>1)</sup>	$I_{\text{mains}}$	100 % AC 94.5 A	AC 117.0 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )	125 %	AC 118.1 A	AC 146.3 A
<b>OUTPUT</b>			
Apparent output power <sup>2)</sup>	$S_N$	73.5 kVA	91.0 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 400...500 \text{ V}$ )			
Rated output current <sup>1)</sup>	$I_N$	AC 105 A	AC 130 A
(when $V_{\text{mains}} = 3 \times \text{AC } 400 \text{ V}$ )			
Current limitation	$I_{\text{max}}$	Motor and regenerative 150% $I_N$ , duration depending on capacity utilization	
Internal current limitation		$I_{\text{max}} = 0...150 \%$ can be set in menu (P303 / P313)	
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	6 Ω	4 Ω
Output voltage	$U_A$	Max. $V_{\text{mains}}$	
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz	
Speed range / resolution	$n_A / \Delta n_A$	–5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range	
<b>GENERAL INFORMATION</b>			
Power loss at $P_N$	$P_{\text{Vmax}}$	1700 W	2000 W
Cooling air consumption		360 m <sup>3</sup> /h	
Weight		34.3 kg	
Dimensions	$W \times H \times D$	280 × 610 × 330 mm	



1) When  $V_{\text{mains}} = 3 \times \text{AC } 500 \text{ V}$ , the mains currents and output currents must be reduced by 20 % compared to the rated data.

2) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

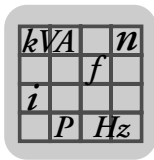

## Technical Data


MOVIDRIVE® compact MCF/MCV/MCS4\_A...-5\_3 (AC 400/500 V units)

<b>MCF4_A standard version (VFC)</b>	<b>0550-503-4-00</b>	<b>0750-503-4-00</b>
Part number MCF40A (without fieldbus)	826 750 2	826 751 0
Part number MCF41A (with PROFIBUS-DP)	826 847 9	826 848 7
<b>MCF4_A application version (VFC)</b>	<b>0550-503-4-0T</b>	<b>0750-503-4-0T</b>
Part number MCF40A (without fieldbus)	827 438 X	827 439 8
Part number MCF41A (with PROFIBUS-DP)	827 461 4	827 462 2
 Constant load Recommended motor power $P_{Mot}$	55 kW	75 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	75 kW	90 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 400\ V$ and $f_{PWM} = 4\ kHz$ )	AC 131 A	AC 162 A

<b>MCV4_A standard version (VFC/CFC)</b>	<b>0550-503-4-00</b>	<b>0750-503-4-00</b>
Part number MCV40A (without fieldbus)	826 920 3	826 921 1
Part number MCV41A (with PROFIBUS-DP)	826 940 8	826 941 6
<b>MCV4_A application version (VFC/CFC)</b>	<b>0550-503-4-0T</b>	<b>0750-503-4-0T</b>
Part number MCV40A (without fieldbus)	827 484 3	827 485 1
Part number MCV41A (with PROFIBUS-DP)	827 507 6	827 508 4
VFC operating mode	Recommended motor power → MCF4_A	
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 105 A	AC 130 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

<b>MCS4_A standard version (SERVO)</b>	<b>0550-503-4-00</b>	<b>0750-503-4-00</b>
Part number MCS40A (without fieldbus)		
Part number MCS41A (with PROFIBUS-DP)		
<b>MCS4_A application version (SERVO)</b>	<b>0550-503-4-0T</b>	<b>0750-503-4-0T</b>
Part number MCS40A (without fieldbus)	827 530 0	827 531 9
Part number MCS41A (with PROFIBUS-DP)	827 553 X	827 554 8
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 105 A	AC 130 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	



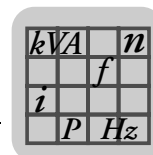

### 8.4 MOVIDRIVE® compact MCF/MCV/MCS4\_A...-2\_3 (AC 230 V units)


#### Size 1



02570AXX

MOVIDRIVE® compact	0015-2A3-4-0_	0022-2A3-4-0_	0037-2A3-4-0_
<b>INPUT</b>			
Supply voltage	$V_{\text{mains}}$	3 × AC 200 V -10 % ... 3 × AC 240 V +10 %	
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %	
Rated mains current $I_{\text{mains}}$	100 % (when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ ) 125 %	AC 6.7 A AC 8.4 A	AC 7.8 A AC 9.8 A
<b>OUTPUT</b>			
Apparent output power <sup>1)</sup>	$S_N$	2.7 kVA	3.4 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 230...240 \text{ V}$ )			5.8 kVA
Rated output current		AC 7.3 A	AC 8.6 A
$I_N$	(when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )		AC 14.5 A
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization	
Internal current limitation		$I_{\text{max}} = 0...150 \%$ can be set in menu (P303 / P313)	
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	27 Ω	
Output voltage	$U_A$	Max. $V_{\text{mains}}$	
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz	
Speed range / resolution	$n_A / \Delta n_A$	-5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range	
<b>GENERAL INFORMATION</b>			
Power loss at $P_N$	$P_{\text{Vmax}}$	110 W	126 W
Cooling air consumption		40 m <sup>3</sup> /h	
Weight		2.8 kg	
Dimensions	$W \times H \times D$	105 × 315 × 155 mm	

1) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

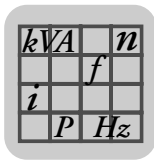


## Technical Data

### MOVIDRIVE® compact MCF/MCV/MCS4\_A...-2\_3 (AC 230 V units)

MCF4_A standard version (VFC)	0015-2A3-4-00	0022-2A3-4-00	0037-2A3-4-00
Part number MCF40A (without fieldbus)	826 752 9	826 753 7	826 754 5
Part number MCF41A (with PROFIBUS-DP)	826 853 3	826 854 1	826 855 X
MCF4_A application version (VFC)	0015-2A3-4-0T	0022-2A3-4-0T	0037-2A3-4-0T
Part number MCF40A (without fieldbus)	827 440 1	827 441 X	827 442 8
Part number MCF41A (with PROFIBUS-DP)	827 463 0	827 464 9	827 465 7
Constant load Recommended motor power $P_{Mot}$	1.5 kW	2.2 kW	3.7 kW
Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	2.2 kW	3.7 kW	5.0 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 230\ V$ and $f_{PWM} = 4\ kHz$ )	AC 9.1 A	AC 10.8 A	AC 18.1 A

MCV4_A standard version (VFC/CFC)	0015-2A3-4-00	0022-2A3-4-00	0037-2A3-4-00
Part number MCV40A (without fieldbus)	826 922 X	826 923 8	826 924 6
Part number MCV41A (with PROFIBUS-DP)	826 942 4	826 943 2	826 944 0
MCV4_A application version (VFC/CFC)	0015-2A3-4-0T	0022-2A3-4-0T	0037-2A3-4-0T
Part number MCV40A (without fieldbus)	827 486 X	827 487 8	827 488 6
Part number MCV41A (with PROFIBUS-DP)	827 509 2	827 510 6	827 511 4
VFC operating mode	Recommended motor power → MCF4_A		
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 7.3 A	AC 8.6 A	AC 14.5 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"		

MCS4_A standard version (SERVO)	0015-2A3-4-00	0022-2A3-4-00	0037-2A3-4-00
Part number MCS40A (without fieldbus)	827 071 6	827 0724	827 073 2
Part number MCS41A (with PROFIBUS-DP)	827 088 0	827 089 9	827 090 2
MCS4_A application version (SERVO)	0015-2A3-4-0T	0022-2A3-4-0T	0037-2A3-4-0T
Part number MCS40A (without fieldbus)	827 532 7	827 533 5	827 534 3
Part number MCS41A (with PROFIBUS-DP)	827 555 6	827 556 4	827 557 2
SERVO operating mode	Recommended motor power → MCS4_A		
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 7.3 A	AC 8.6 A	AC 14.5 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"		

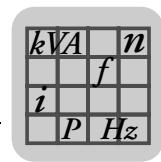


Size 2



02571AXX



MOVIDRIVE® compact	0055-2A3-4-0_	0075-2A3-4-0_
<b>INPUT</b>		
Supply voltage $V_{\text{mains}}$	3 × AC 200 V -10 % ... 3 × AC 240 V +10 %	
Supply frequency $f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %	
Rated mains current $I_{\text{mains}}$ (when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )	100 % 125 %	AC 19.5 A AC 24.4 A
<b>OUTPUT</b>		
Apparent output power <sup>1)</sup> $S_N$ (when $V_{\text{mains}} = 3 \times \text{AC } 230...240 \text{ V}$ )	8.8 kVA	11.6 kVA
Rated output current $I_N$ (when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )	AC 22 A	AC 29 A
Current limitation $I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization	
Internal current limitation	$I_{\text{max}} = 0...150 \%$ can be set in menu (P303 / P313)	
Minimum permitted braking resistor value (4Q operation) $R_{\text{BRmin}}$	12 Ω	
Output voltage $U_A$	Max. $V_{\text{mains}}$	
PWM frequency $f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz	
Speed range / resolution $n_A / \Delta n_A$	-5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range	
<b>GENERAL INFORMATION</b>		
Power loss at $P_N$ $P_{V\text{max}}$	300 W	380 W
Cooling air consumption	80 m <sup>3</sup> /h	
Weight	5.9 kg	
Dimensions $W \times H \times D$	130 × 335 × 207 mm	

1) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

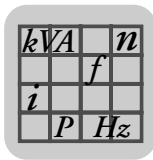


## Technical Data

### MOVIDRIVE® compact MCF/MCV/MCS4\_A...-2\_3 (AC 230 V units)

<b>MCF4_A standard version (VFC)</b>	<b>0055-2A3-4-00</b>	<b>0075-2A3-4-00</b>
Part number MCF40A (without fieldbus)	826 755 3	826 756 1
Part number MCF41A (with PROFIBUS-DP)	826 856 8	826 857 6
<b>MCF4_A application version (VFC)</b>	<b>0055-2A3-4-0T</b>	<b>0075-2A3-4-0T</b>
Part number MCF40A (without fieldbus)	827 443 6	827 444 4
Part number MCF41A (with PROFIBUS-DP)	827 466 5	827 467 3
 Constant load Recommended motor power $P_{Mot}$	5.5 kW	7.5 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	7.5 kW	11 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 230\ V$ and $f_{PWM} = 4\ kHz$ )	AC 27.5 A	AC 36.3 A

<b>MCV4_A standard version (VFC/CFC)</b>	<b>0055-2A3-4-00</b>	<b>0075-2A3-4-00</b>
Part number MCV40A (without fieldbus)	826 925 4	826 926 2
Part number MCV41A (with PROFIBUS-DP)	826 945 9	826 946 7
<b>MCV4_A application version (VFC/CFC)</b>	<b>0055-2A3-4-0T</b>	<b>0075-2A3-4-0T</b>
Part number MCV40A (without fieldbus)	827 489 4	827 490 8
Part number MCV41A (with PROFIBUS-DP)	827 512 2	827 513 0
VFC operating mode	Recommended motor power → MCF4_A	
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 22 A	AC 29 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

<b>MCS4_A standard version (SERVO)</b>	<b>0055-2A3-4-00</b>	<b>0075-2A3-4-00</b>
Part number MCS40A (without fieldbus)	827 074 0	827 075 9
Part number MCS41A (with PROFIBUS-DP)	827 091 0	827 092 9
<b>MCS4_A application version (SERVO)</b>	<b>0055-2A3-4-0T</b>	<b>0075-2A3-4-0T</b>
Part number MCS40A (without fieldbus)	827 535 1	827 536 X
Part number MCS41A (with PROFIBUS-DP)	827 558 0	827 559 9
SERVO operating mode	Recommended motor power → MCS4_A	
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 22 A	AC 29 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

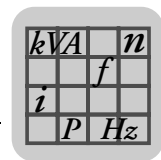


Size 3



02572AXX



MOVIDRIVE® compact	0110-203-4-0_	0150-203-4-0_
<b>INPUT</b>		
Supply voltage	$V_{\text{mains}}$	3 × AC 200 V –10 % ... 3 × AC 240 V +10 %
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %
Rated mains current	$I_{\text{mains}}$	AC 40 A AC 50 A
(when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )	100 % 125 %	AC 49 A AC 61 A
<b>OUTPUT</b>		
Apparent output power <sup>1)</sup>	$S_N$	17.1 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 230...240 \text{ V}$ )		21.5 kVA
Rated output current	$I_N$	AC 42 A
(when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )		AC 54 A
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization
Internal current limitation		$I_{\text{max}} = 0...150 \%$ can be set in menu (P303 / P313)
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	7.5 Ω
		5.6 Ω
Output voltage	$U_A$	Max. $V_{\text{mains}}$
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz
Speed range / resolution	$n_A / \Delta n_A$	–5500 ... 0 ... +5500 min <sup>-1</sup> / 0.2 min <sup>-1</sup> across the entire range
<b>GENERAL INFORMATION</b>		
Power loss at $P_N$	$P_{\text{Vmax}}$	580 W
		720 W
Cooling air consumption		180 m <sup>3</sup> /h
Weight		14.3 kg
Dimensions	$W \times H \times D$	200 × 465 × 227 mm

1) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

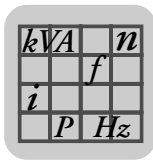


## Technical Data

### MOVIDRIVE® compact MCF/MCV/MCS4\_A...-2\_3 (AC 230 V units)

<b>MCF4_A standard version (VFC)</b>	<b>0110-203-4-00</b>	<b>0150-203-4-00</b>
Part number MCF40A (without fieldbus)	826 757 X	827 263 8
Part number MCF41A (with PROFIBUS-DP)	826 858 4	827 266 2
<b>MCF4_A application version (VFC)</b>	<b>0110-203-4-0T</b>	<b>0150-203-4-0T</b>
Part number MCF40A (without fieldbus)	827 445 2	827 446 0
Part number MCF41A (with PROFIBUS-DP)	827 468 1	827 469 X
 Constant load Recommended motor power $P_{Mot}$	11 kW	15 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	15 kW	22 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 230\ V$ and $f_{PWM} = 4\ kHz$ )	AC 52.5 A	AC 67.5 A

<b>MCV4_A standard version (VFC/CFC)</b>	<b>0110-203-4-00</b>	<b>0150-203-4-00</b>
Part number MCV40A (without fieldbus)	826 927 0	827 269 7
Part number MCV41A (with PROFIBUS-DP)	826 947 5	827 272 7
<b>MCV4_A application version (VFC/CFC)</b>	<b>0110-203-4-0T</b>	<b>0150-203-4-0T</b>
Part number MCV40A (without fieldbus)	827 491 6	827 492 4
Part number MCV41A (with PROFIBUS-DP)	827 514 9	827 515 7
VFC operating mode	Recommended motor power → MCF4_A	
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 42 A	AC 54 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

<b>MCS4_A standard version (SERVO)</b>	<b>0110-203-4-00</b>	<b>0150-203-4-00</b>
Part number MCS40A (without fieldbus)	827 076 7	827 305 7
Part number MCS41A (with PROFIBUS-DP)	827 093 7	827 308 1
<b>MCS4_A application version (SERVO)</b>	<b>0110-203-4-0T</b>	<b>0150-203-4-0T</b>
Part number MCS40A (without fieldbus)	827 537 8	827 538 6
Part number MCS41A (with PROFIBUS-DP)	827 560 2	827 561 0
SERVO operating mode	Recommended motor power → MCS4_A	
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 42 A	AC 54 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	

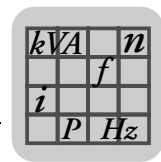


Size 4



02573AXX



MOVIDRIVE® compact		0220-203-4-0_	0300-203-4-0_
<b>INPUT</b>			
Supply voltage	$V_{\text{mains}}$	3 × AC 200 V –10 % ... 3 × AC 240 V +10 %	
Supply frequency	$f_{\text{mains}}$	50 Hz ... 60 Hz ±5 %	
Rated mains current	$I_{\text{mains}}$	AC 72 A	AC 86 A
(when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )	100 % 125 %	AC 90 A	AC 107 A
<b>OUTPUT</b>			
Apparent output power <sup>1)</sup>	$S_N$	31.8 kVA	37.8 kVA
(when $V_{\text{mains}} = 3 \times \text{AC } 230 \dots 240 \text{ V}$ )			
Rated output current	$I_N$	AC 80 A	AC 95 A
(when $V_{\text{mains}} = 3 \times \text{AC } 230 \text{ V}$ )			
Current limitation	$I_{\text{max}}$	Motor and regenerative 150 % $I_N$ , duration depending on the capacity utilization	
Internal current limitation		$I_{\text{max}} = 0 \dots 150 \%$ can be set in menu (P303 / P313)	
Minimum permitted braking resistor value (4Q operation)	$R_{\text{BRmin}}$	3 Ω	
Output voltage	$U_A$	Max. $V_{\text{mains}}$	
PWM frequency	$f_{\text{PWM}}$	Can be set: 4/8/12/16 kHz	
Speed range / resolution	$n_A / \Delta n_A$	–5500 ... 0 ... +5500 min <sup>–1</sup> / 0.2 min <sup>–1</sup> across the entire range	
<b>GENERAL INFORMATION</b>			
Power loss at $P_N$	$P_{\text{Vmax}}$	1100 W	1300 W
Cooling air consumption		180 m <sup>3</sup> /h	
Weight		26.3 kg	
Dimensions	$W \times H \times D$	280 × 522 × 227 mm	

1) The performance data apply to  $f_{\text{PWM}} = 4 \text{ kHz}$  (factory setting for VFC operating modes).

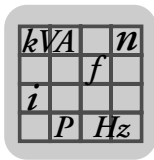

## Technical Data


### MOVIDRIVE® compact MCF/MCV/MCS4\_A...-2\_3 (AC 230 V units)

<b>MCF4_A standard version (VFC)</b>	<b>0220-203-4-00</b>	<b>0300-203-4-00</b>
Part number MCF40A (without fieldbus)	827 264 6	827 265 4
Part number MCF41A (with PROFIBUS-DP)	827 267 0	827 268 9
<b>MCF4_A application version (VFC)</b>	<b>0220-203-4-0T</b>	<b>0300-203-4-0T</b>
Part number MCF40A (without fieldbus)	827 447 9	827 448 7
Part number MCF41A (with PROFIBUS-DP)	827 470 3	827 471 1
 Constant load Recommended motor power $P_{Mot}$	22 kW	30 kW
 Variable torque load or constant load without overload Recommended motor power $P_{Mot}$	30 kW	37 kW
Continuous output current = 125% $I_N$ $I_D$ (when $U_{mains} = 3 \times AC\ 230\ V$ and $f_{PWM} = 4\ kHz$ )	AC 100 A	AC 118 A

<b>MCV4_A standard version (VFC/CFC)</b>	<b>0220-203-4-00</b>	<b>0300-203-4-00</b>
Part number MCV40A (without fieldbus)	827 270 0	827 271 9
Part number MCV41A (with PROFIBUS-DP)	827 273 5	827 274 3
<b>MCV4_A application version (VFC/CFC)</b>	<b>0220-203-4-0T</b>	<b>0300-203-4-0T</b>
Part number MCV40A (without fieldbus)	827 493 2	827 494 0
Part number MCV41A (with PROFIBUS-DP)	827 516 5	827 517 3
VFC operating mode	Recommended motor power → MCF4_A	
CFC operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 80 A	AC 95 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	


<b>MCS4_A standard version (SERVO)</b>	<b>0220-203-4-00</b>	<b>0300-203-4-00</b>
Part number MCS40A (without fieldbus)	827 306 5	827 307 3
Part number MCS41A (with PROFIBUS-DP)	827 309 X	827 310 3
<b>MCS4_A application version (SERVO)</b>	<b>0220-203-4-0T</b>	<b>0300-203-4-0T</b>
Part number MCS40A (without fieldbus)	827 539 4	827 540 8
Part number MCS41A (with PROFIBUS-DP)	827 562 9	827 563 7
SERVO operating mode	Recommended motor power → MCS4_A	
SERVO operating mode ( $f_{PWM} = 8\ kHz$ ) Continuous output current = 100% $I_N$ $I_D$	AC 80 A	AC 95 A
Recommended motor power	→ MOVIDRIVE® compact system manual, section "Project Planning"	



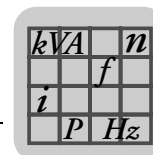

### 8.5 MOVIDRIVE® compact MCF/MCV/MCS electronics data


MOVIDRIVE® compact	Setpoint processing and speed ramps	
<b>MCF/MCV/MCS40A and MCV/MCS41A</b>	<b>Version with analog setpoint input</b>	
Voltage supply for setpoint input X10:1 X10:3	REF1: DC+10 V +5 % / -0 %, $I_{max} = DC\ 3\ mA$ REF2: DC-10 V +0 % / -5 %, $I_{max} = DC\ 3\ mA$	Reference voltages for setpoint potentiometer
Setpoint input n1 (Differential input) Operating mode AI11/AI12 Resolution Internal resistance	X10:2/X10:4 AI11/AI12: Voltage or current input, can be set with S11 and P11_, sampling interval 1 ms Voltage input: n1 = DC (0...+10 V) or DC (-10 V...0...+10 V) 12 bit $R_i = 40\ k\Omega$ (external voltage supply) $R_i = 20\ k\Omega$ (supply from REF1/REF2)	Current input: n1 = DC (0...20 mA) or DC (4...20 mA) 11 bit $R_i = 250\ \Omega$
<b>MCF/MCV/MCS41A (X10:2 and X10:4 inactive for MCF41A)</b>	<b>Version with PROFIBUS-DP interface. No analog setpoint input n1 (AI11/AI12) available for MCF41A; setpoint selection only via PROFIBUS-DP interface.</b>	
Protocol option Baud rate Connection technology Bus terminator Station address Name of the GSD file DP ident. number	PROFIBUS DP to IEC 61158 Automatic baud rate detection from 9.6 kbaud to 12 Mbaud 9-pole sub D connector, pin assignment to IEC 61158 Can be activated for cable type A to IEC 61158 0 ... 125, adjustable via DIP switches SEW_6002.GSD 6002 <sub>hex</sub> (24578 <sub>dec</sub> )	
<b>Valid for all versions</b>		
Setpoint input n2 TF/TH input Resolution	X10:6 Analog input DC (0 ... 10 V) or optionally (→ P120) TF/TH input with response threshold at $R_{TF} \geq 2.9\ k\Omega \pm 10\ %$ 10 Bit	
Internal setpoints	Parameter set 1: n11/n12/n13 = -5000...0...+5000 min <sup>-1</sup> Parameter set 2: n21/n22/n23 = -5000...0...+5000 min <sup>-1</sup>	
Time ranges of the speed ramps at $\Delta n = 3000\ min^{-1}$	1st Ramp t11/t21 Up: 0.0...2000 s Down: 0.0...2000 s 2nd Ramp t12/t22 Up = down: 0.0...2000 s Stop ramp t13/t23 Down: 0...20 s Emergency ramp t14/t24 Down: 0...20 s Motor potentiometer t3 Up: 0.2...50 s Down: 0.2...50 s	

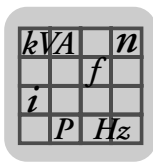

MOVIDRIVE® compact	Additional electronics data
Auxiliary voltage output <sup>1)</sup> X10:16	VO24: $V_{OUT} = DC\ 24\ V$ , maximum current carrying capacity $I_{max} = DC\ 200\ mA$
Ext. voltage supply <sup>1)</sup> X10:24	VI24: $V_{IN} = DC\ 24\ V -15\ \% / +20\ \%$ according to EN 61131-2
Binary inputs X10:9...X10:14 Internal resistance	DIØØ...DIØ5: Isolated (optocoupler), PLC compatible (EN 61131), sampling interval 5 ms $R_i \approx 3\ k\Omega$ , $I_E \approx 10\ mA$
Signal level	DC (+13 V...+30 V) = "1" = Contact closed DC (-3 V...+5 V) = "0" = Contact open
Function X10:9 X10:10...X10:14	DIØØ: fixed assignment with "/Controller inhibit" DIØ1...DIØ5: Selection option → Parameter menu P60_
Binary outputs <sup>1)</sup> X10:21/X10:19	DBØØ/DOØ2: PLC-compatible (EN 61131-2), response time 5 ms
Signal level	"0" = 0 V "1" = +24 V <b>Important:</b> Do not apply external voltage!
Function X10:21 X10:19	DBØØ: With fixed assignment "/Brake", $I_{max} = DC\ 150\ mA$ (short-circuit proof, protected against external voltage up to DC 30 V) DOØ2: Selection option → Parameter menu P62_, $I_{max} = 50\ mA$ (short-circuit proof and protected against external voltage up to DC 30 V)
Only for MCF/MCV/MCS40AX10:19 Analog output	AOØ1: → Menu P64_, resolution 8 bit, $I_{max} = DC\ 20\ mA$ (short-circuit proof)
Relay output X10:18/20/22	DOØ1: Load capacity of the relay contacts $U_{max} = DC\ 30\ V$ , $I_{max} = DC\ 800\ mA$
Function X10:18 X10:20 X10:22	DOØ1-C: Shared relay contact DOØ1-NO: Normally open contact DOØ1-NC: Normally closed contact
System bus (SBus) X10:5 X10:7	SC11: SBus high SC12: SBus low
Input motor encoder <sup>1)</sup> X15: Not for MCF4_A	Incremental encoder for MCV4_A Permitted encoder types: • sin/cos encoder AC 1 $V_{SS}$ • DC 5 V TTL sensor • DC 24 V HTL sensor Encoder power supply: DC+24 V, $I_{max} = DC\ 180\ mA$
Output for incremental encoder X14: simulation or external encoder input <sup>1)</sup> Not for MCF4_A	Output for incremental encoder simulation: Signal level to RS422 Number of pulses as for X15: (MCV4_A) or fixed 1024 pulses/revolution (MCS4_A)
Reference terminals X10:8 X10:17/X10:23 X10:15	AGND: Reference potential for analog signals n1 and n2 and terminals X10:1 and X10:3. DGND: Reference potential for binary signals, system bus (SBus), encoder and resolver. DCOM: Reference potential for binary inputs X10:9...X10:14 (DIØØ...DIØ5).
Permitted cable cross section	One core per terminal: 0.20...2.5 mm <sup>2</sup> (AWG 24...12) Two cores per terminal: 0.20...1 mm <sup>2</sup> (AWG 24...17)


- 1) **MCF/MCV/MCS40A (without fieldbus):** The unit provides a current of  $I_{max} = DC\ 400\ mA$  for the DC+24 V outputs (VO24, DBØØ, DOØ2, encoder supply). If this value is insufficient, a DC 24 V voltage supply must be connected to X10:24 (VI24). This external DC 24 V voltage supply must be able to provide 50 W continuous power and 100 W peak power (1 s).

**MCF/MCV/MCS41A (with PROFIBUS-DP):** SEW-EURODRIVE recommends that you always supply these units with DC 24 V at terminal X10:24 (VI24). This external DC 24 V voltage supply must be able to provide 50 W continuous power and 100 W peak power (1 s).  
The DC 24 V outputs X10:16 (VO24), X10:21 (DBØØ) and X10:19 (DOØ2) may be supplied with a total maximum current of  $I_{max} = DC\ 400\ mA$ .

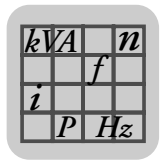

### 8.6 MOVIDRIVE® compact dimension drawings

Size 1 (0015 ... 0040-5A3 and 0015 ... 0037-2A3)

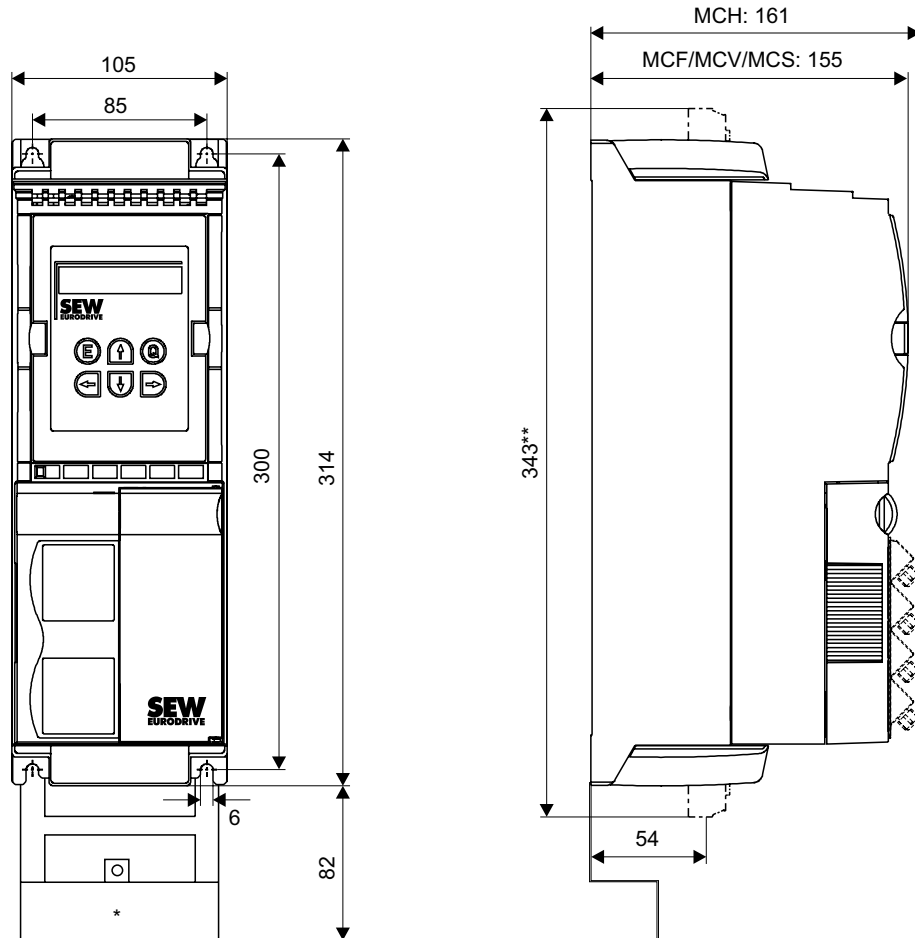

59816AXX

All dimensions in mm


\* Power shield clamp

\*\* Unit dimensions including connected power terminals




#### NOTE

Leave at least 100 mm clearance above and below the unit to ensure optimum cooling. There is no need for clearance at the sides. You can line up the units directly next to one another.

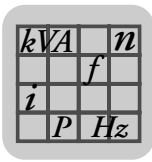

**Size 2 (0055 ... 0110-5A3 and 0055 / 0075-2A3)**

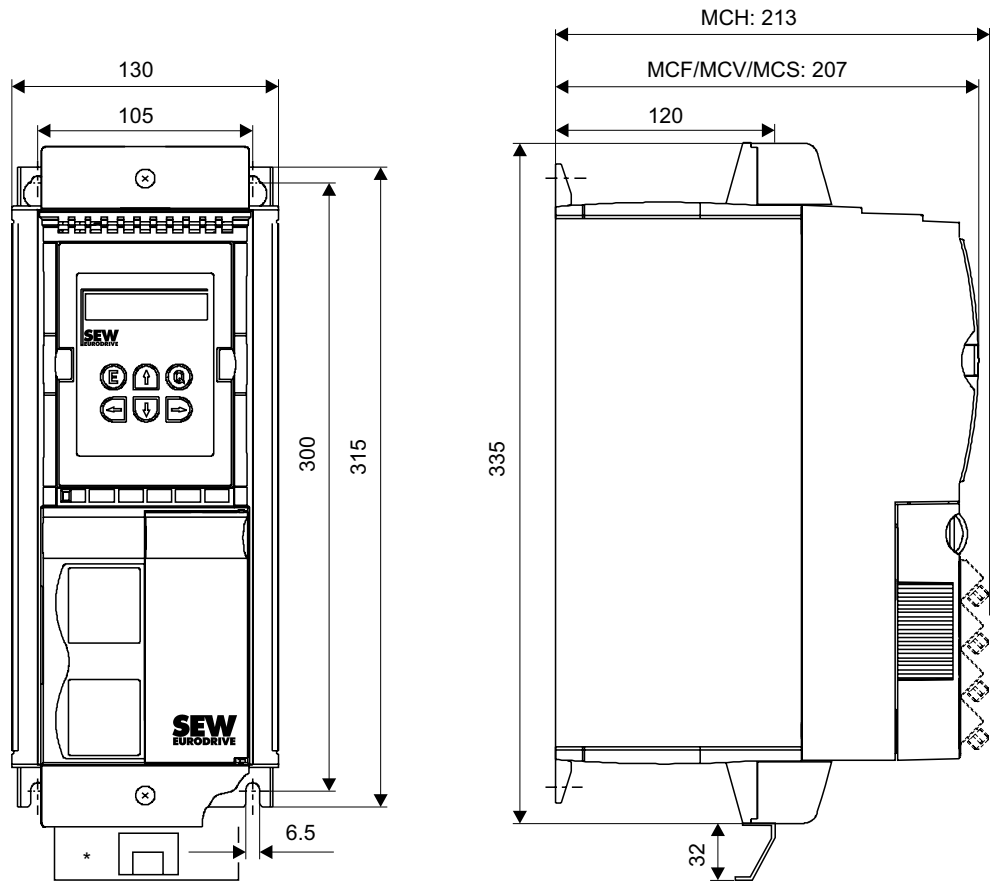


59817AXX

All dimensions in mm  
 \* Power shield clamp

	<p><b>NOTE</b></p>
	<p>Leave at least 100 mm clearance above and below the unit to ensure optimum cooling. There is no need for clearance at the sides. You can line up the units directly next to one another.</p>

$kVA$	$n$
$i$	$f$
$P$	$H_z$

Size 3 (0150 ... 0300-503 and 0110 / 0150-203)

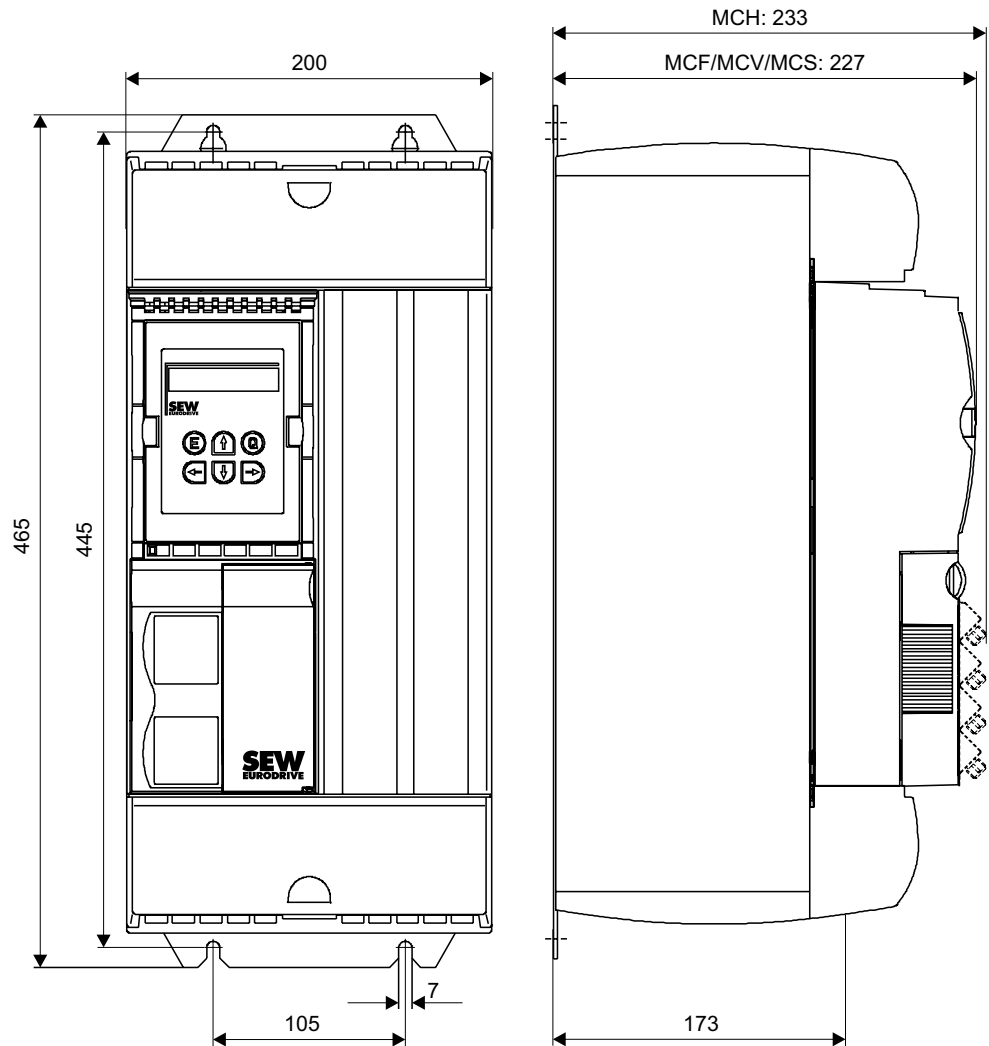


59818AXX

All dimensions in mm

**NOTE**




Leave at least 100 mm clearance above and below the unit to ensure optimum cooling. There is no need for clearance at the sides. You can line up the units directly next to one another.

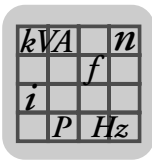

## Technical Data

### MOVIDRIVE® compact dimension drawings

#### Size 4 (0370 / 0450-503 and 0220 / 0300-203)

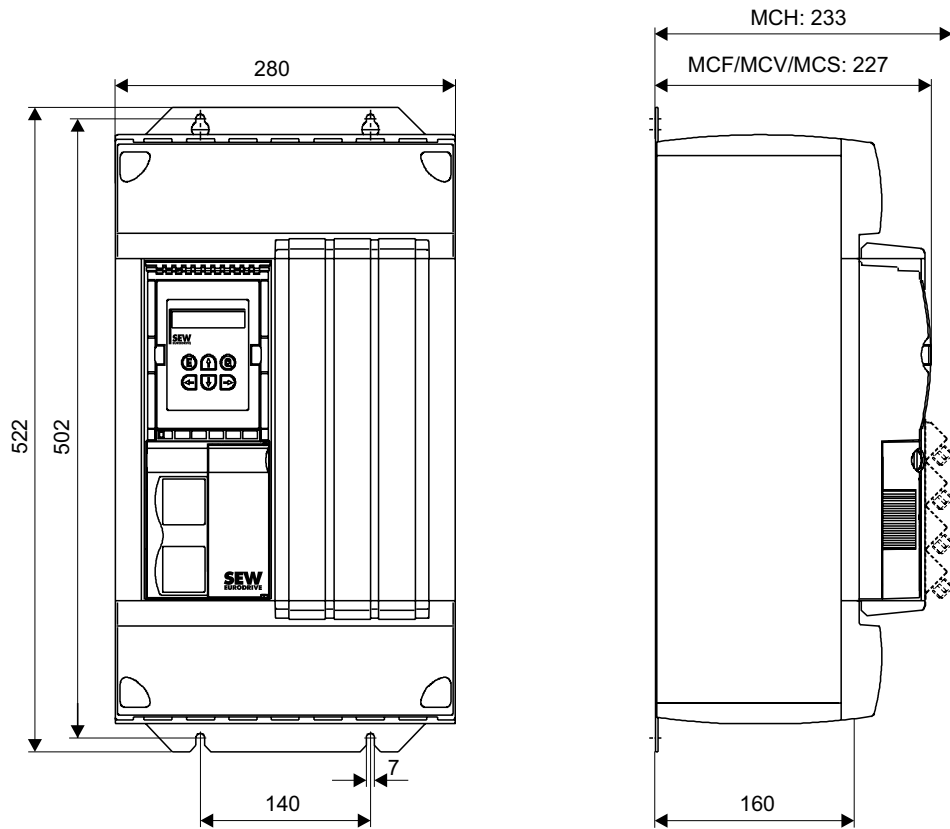

59819AXX

All dimensions in mm




#### NOTE

Leave at least 100 mm clearance above and below the unit to ensure optimum cooling. There is no need for clearance at the sides. You can line up the units directly next to one another.

$kVA$	$n$
$f$	
$i$	
$P$	$Hz$

Size 5 (0550 / 0750-503)

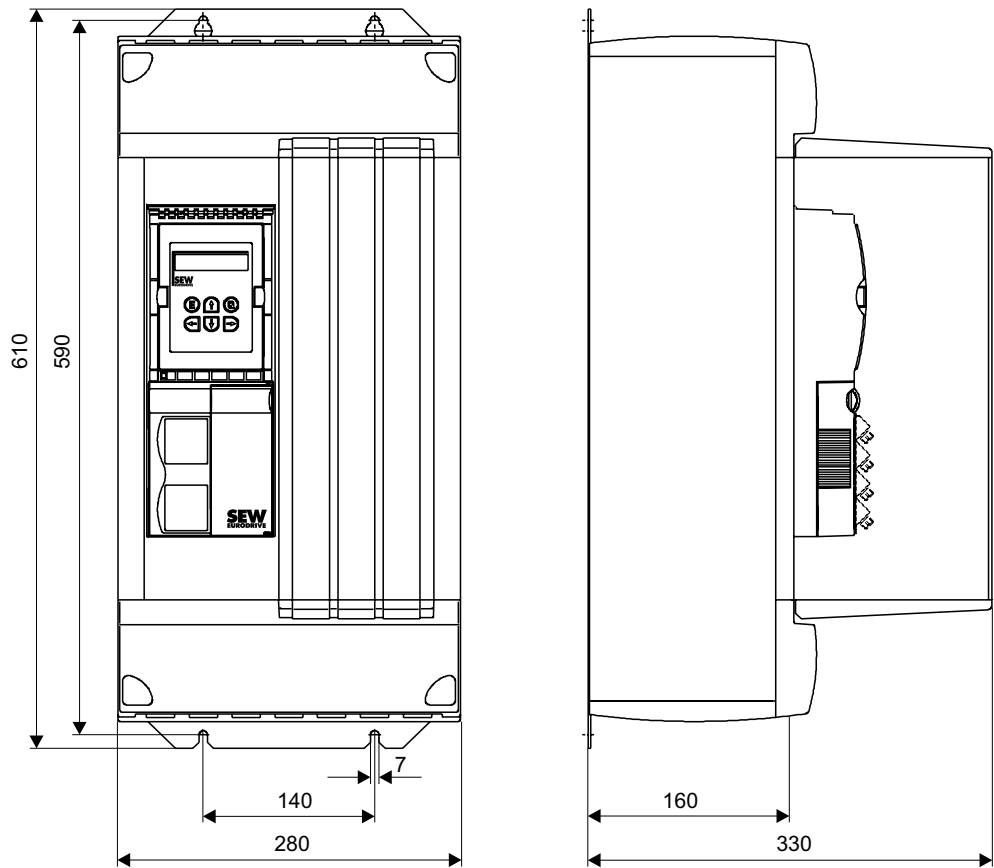

59820AXX

All dimensions in mm



**NOTE**

Provide at least 100 mm clearance above and below the unit. There is no need for clearance at the sides. You can line up the units directly next to one another.

Do not install any components that are sensitive to high temperatures within 300 mm of the top of the unit, for example contactors or fuses.



## 9 Index

<b>A</b>		Fault memory .....	95
Assignment of braking resistors, chokes and filters		Fuses .....	17
230 V units .....	36	<b>G</b>	
400/500 V units .....	34	GOST-R certificate .....	101
<b>B</b>		Grounding .....	19
Basic displays on the DBG11B keypad .....	91	<b>I</b>	
Braking resistors, connection .....	18	Incremental encoder simulation	
BW braking resistor		<i>Connection</i> .....	50
<i>Assignment</i> .....	34	Information messages .....	94
<b>C</b>		Installation	
C-Tick approval .....	101	<i>HD output choke</i> .....	21
CE marking .....	101	Installation instructions .....	16
Connecting a PE conductor .....	17	Installing the system bus .....	37
Connecting the basic unit		<b>K</b>	
<i>Braking resistor BW... / BW...-T</i> .....	29	Keypad DBG11B	
Connection		<i>Copy function</i> .....	91
<i>external encoder</i> .....	48	<b>L</b>	
<i>HTL encoder</i> .....	46	Line filter .....	20
<i>Incremental encoder emulation</i> .....	50	<b>M</b>	
<i>Incremental encoder simulation</i> .....	50	Master/slave connection .....	51
<i>Master/slave connection</i> .....	51	MCV41A label .....	32
<i>Option USB11A</i> .....	40	Minimum clearance .....	16
<i>Resolver</i> .....	47	Motor encoder	
Copy function on the DBG11B keypad .....	91	<i>Connect</i> .....	43
Cross sections .....	18	<i>General installation instructions</i> .....	42
<b>D</b>		Mounting position .....	16
DBG11B		<b>N</b>	
<i>Functions for startup</i> .....	56	Nameplate .....	10
<i>Starting up the speed controller</i> .....	60	<b>O</b>	
<i>Startup procedure</i> .....	58	Operating displays	
<i>Structure of the startup menu</i> .....	57	MC_40A .....	89
<i>Switching the language</i> .....	56	MC_41A .....	90
DBG11B keypad		Operation LED V1 .....	89, 90
<i>Basic displays</i> .....	91	<b>P</b>	
<i>Menu</i> .....	92	Parameter list .....	67
<i>Quick menu</i> .....	93	PROFIBUS-DP LEDs .....	90
DBG11B keypad menu .....	92	<b>Q</b>	
Dimension drawings		Quick menu of the DBG11B keypad .....	93
<i>Basic unit size 1</i> .....	123	<b>R</b>	
<i>Basic unit size 2</i> .....	124	Removing the connection unit .....	33
<i>Basic unit size 3</i> .....	125	Repair .....	99
<i>Basic unit size 4</i> .....	126	Reset .....	95
<i>Basic unit size 5</i> .....	127	Resolver	
<b>E</b>		<i>Connection</i> .....	47
Extended storage .....	100	<b>S</b>	
External encoder		Safety notes .....	6
<i>General installation information</i> .....	42	Scope of delivery .....	10
External encoders		Serial interface, connection .....	39
<i>Connecting</i> .....	48		
<b>F</b>			
Fault list .....	96		





Service label .....	99
Shield clamp .....	26
Shielding .....	19
Starting the motor	
<i>Analog setpoint selection</i> .....	63
<i>Fixed setpoints</i> .....	64
<i>Manual operation</i> .....	65
Startup	
<i>DBG11B keypad</i> .....	55
<i>General instructions</i> .....	52
<i>PC and MOVITOOLS®</i> .....	62
<i>Preliminary work and resources</i> .....	54
Startup with PROFIBUS-DP .....	74
Switch-off responses .....	95
System bus (SBus)	
<i>Technical data</i> .....	122
<b>T</b>	
Technical Data	
<i>Electronics data for the basic unit</i> .....	121
<i>General technical data</i> .....	102
<i>System bus (SBus)</i> .....	122
Technical data	
<i>AC 230 V units</i>	
Size 1 .....	113
Size 2 .....	115
Size 3 .....	117
Size 4 .....	119
<i>AC 400/500 V units</i>	
Size 1 .....	103
Size 2 .....	105
Size 3 .....	107
Size 4 .....	109
Size 5 .....	111
Terminals, functional description MCF/MCV/ MCS4_A .....	31
Tightening torques .....	16
Timeout .....	95
Touch guard .....	27
Type label .....	10
<b>U</b>	
UL/cUL approval .....	101
Unit designation .....	9
USB11A, connection .....	40
<b>W</b>	
Wiring for basic unit	
<i>MCF/MCV/MCS4_A</i> .....	30
<i>Power section and brake</i> .....	28



## Address List

### Address List

Germany			
<b>Headquarters Production Sales</b>	<b>Bruchsal</b>	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal P.O. Box Postfach 3023 • D-76642 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-1970 <a href="http://www.sew-eurodrive.de">http://www.sew-eurodrive.de</a> <a href="mailto:sew@sew-eurodrive.de">sew@sew-eurodrive.de</a>
<b>Service Competence Center</b>	<b>Central</b> Gear units / Motors	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 D-76676 Graben-Neudorf	Tel. +49 7251 75-1710 Fax +49 7251 75-1711 <a href="mailto:sc-mitte-gm@sew-eurodrive.de">sc-mitte-gm@sew-eurodrive.de</a>
	<b>Central</b> Electronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal	Tel. +49 7251 75-1780 Fax +49 7251 75-1769 <a href="mailto:sc-mitte-e@sew-eurodrive.de">sc-mitte-e@sew-eurodrive.de</a>
	<b>North</b>	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 D-30823 Garbsen (near Hannover)	Tel. +49 5137 8798-30 Fax +49 5137 8798-55 <a href="mailto:sc-nord@sew-eurodrive.de">sc-nord@sew-eurodrive.de</a>
	<b>East</b>	SEW-EURODRIVE GmbH & Co KG Dänkritzter Weg 1 D-08393 Meerane (near Zwickau)	Tel. +49 3764 7606-0 Fax +49 3764 7606-30 <a href="mailto:sc-ost@sew-eurodrive.de">sc-ost@sew-eurodrive.de</a>
	<b>South</b>	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 D-85551 Kirchheim (near München)	Tel. +49 89 909552-10 Fax +49 89 909552-50 <a href="mailto:sc-sued@sew-eurodrive.de">sc-sued@sew-eurodrive.de</a>
	<b>West</b>	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 D-40764 Langenfeld (near Düsseldorf)	Tel. +49 2173 8507-30 Fax +49 2173 8507-55 <a href="mailto:sc-west@sew-eurodrive.de">sc-west@sew-eurodrive.de</a>
	<b>Drive Service Hotline / 24 Hour Service</b>		
Additional addresses for service in Germany provided on request!			
France			
<b>Production Sales Service</b>	<b>Hagenau</b>	SEW-USOCOME 48-54, route de Soufflenheim B. P. 20185 F-67506 Hagenau Cedex	Tel. +33 3 88 73 67 00 Fax +33 3 88 73 66 00 <a href="http://www.usocomme.com">http://www.usocomme.com</a> <a href="mailto:sew@usocomme.com">sew@usocomme.com</a>
<b>Production</b>	<b>Forbach</b>	SEW-EUROCOME Zone Industrielle Technopole Forbach Sud – B. P. 30269 F-57604 Forbach Cedex	Tel. +33 3 87 29 38 00
<b>Assembly Sales Service</b>	<b>Bordeaux</b>	SEW-USOCOME Parc d'activités de Magellan 62, avenue de Magellan - B. P. 182 F-33607 Pessac Cedex	Tel. +33 5 57 26 39 00 Fax +33 5 57 26 39 09
	<b>Lyon</b>	SEW-USOCOME Parc d'Affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin	Tel. +33 4 72 15 37 00 Fax +33 4 72 15 37 15
	<b>Paris</b>	SEW-USOCOME Zone industrielle 2, rue Denis Papin F-77390 Verneuil l'Etang	Tel. +33 1 64 42 40 80 Fax +33 1 64 42 40 88
Additional addresses for service in France provided on request!			
Algeria			
<b>Sales</b>	<b>Alger</b>	Réducom 16, rue des Frères Zagnoun Bellevue El-Harrach 16200 Alger	Tel. +213 21 8222-84 Fax +213 21 8222-84
Argentina			
<b>Assembly Sales Service</b>	<b>Buenos Aires</b>	SEW EURODRIVE ARGENTINA S.A. Centro Industrial Garin, Lote 35 Ruta Panamericana Km 37,5 1619 Garin	Tel. +54 3327 4572-84 Fax +54 3327 4572-21 <a href="mailto:sewar@sew-eurodrive.com.ar">sewar@sew-eurodrive.com.ar</a>



Australia			
Assembly Sales Service	<b>Melbourne</b>	SEW-EURODRIVE PTY. LTD. 27 Beverage Drive Tullamarine, Victoria 3043	Tel. +61 3 9933-1000 Fax +61 3 9933-1003 <a href="http://www.sew-eurodrive.com.au">http://www.sew-eurodrive.com.au</a> <a href="mailto:enquires@sew-eurodrive.com.au">enquires@sew-eurodrive.com.au</a>
	<b>Sydney</b>	SEW-EURODRIVE PTY. LTD. 9, Sleigh Place, Wetherill Park New South Wales, 2164	Tel. +61 2 9725-9900 Fax +61 2 9725-9905 <a href="mailto:enquires@sew-eurodrive.com.au">enquires@sew-eurodrive.com.au</a>
	<b>Townsville</b>	SEW-EURODRIVE PTY. LTD. 12 Leyland Street Garbutt, QLD 4814	Tel. +61 7 4779 4333 Fax +61 7 4779 5333 <a href="mailto:enquires@sew-eurodrive.com.au">enquires@sew-eurodrive.com.au</a>
Austria			
Assembly Sales Service	<b>Wien</b>	SEW-EURODRIVE Ges.m.b.H. Richard-Strauss-Strasse 24 A-1230 Wien	Tel. +43 1 617 55 00-0 Fax +43 1 617 55 00-30 <a href="http://sew-eurodrive.at">http://sew-eurodrive.at</a> <a href="mailto:sew@sew-eurodrive.at">sew@sew-eurodrive.at</a>
Belgium			
Assembly Sales Service	<b>Brüssel</b>	SEW Caron-Vector S.A. Avenue Eiffel 5 B-1300 Wavre	Tel. +32 10 231-311 Fax +32 10 231-336 <a href="http://www.sew-eurodrive.be">http://www.sew-eurodrive.be</a> <a href="mailto:info@caron-vector.be">info@caron-vector.be</a>
Brazil			
Production Sales Service	<b>Sao Paulo</b>	SEW-EURODRIVE Brasil Ltda. Avenida Amâncio Gaiolli, 50 Caixa Postal: 201-07111-970 Guarulhos/SP - Cep.: 07251-250	Tel. +55 11 6489-9133 Fax +55 11 6480-3328 <a href="http://www.sew.com.br">http://www.sew.com.br</a> <a href="mailto:sew@sew.com.br">sew@sew.com.br</a>
Additional addresses for service in Brazil provided on request!			
Bulgaria			
Sales	<b>Sofia</b>	BEVER-DRIVE GmbH Bogdanovetz Str. 1 BG-1606 Sofia	Tel. +359 2 9151160 Fax +359 2 9151166 <a href="mailto:bever@fastbg.net">bever@fastbg.net</a>
Cameroon			
Sales	<b>Douala</b>	Electro-Services Rue Drouot Akwa B.P. 2024 Douala	Tel. +237 4322-99 Fax +237 4277-03
Canada			
Assembly Sales Service	<b>Toronto</b>	SEW-EURODRIVE CO. OF CANADA LTD. 210 Walker Drive Bramalea, Ontario L6T3W1	Tel. +1 905 791-1553 Fax +1 905 791-2999 <a href="http://www.sew-eurodrive.ca">http://www.sew-eurodrive.ca</a> <a href="mailto:l.reynolds@sew-eurodrive.ca">l.reynolds@sew-eurodrive.ca</a>
	<b>Vancouver</b>	SEW-EURODRIVE CO. OF CANADA LTD. 7188 Honeyman Street Delta, B.C. V4G 1 E2	Tel. +1 604 946-5535 Fax +1 604 946-2513 <a href="mailto:b.wake@sew-eurodrive.ca">b.wake@sew-eurodrive.ca</a>
	<b>Montreal</b>	SEW-EURODRIVE CO. OF CANADA LTD. 2555 Rue Leger LaSalle, Quebec H8N 2V9	Tel. +1 514 367-1124 Fax +1 514 367-3677 <a href="mailto:a.peluso@sew-eurodrive.ca">a.peluso@sew-eurodrive.ca</a>
Additional addresses for service in Canada provided on request!			
Chile			
Assembly Sales Service	<b>Santiago de Chile</b>	SEW-EURODRIVE CHILE LTDA. Las Encinas 1295 Parque Industrial Valle Grande LAMP RCH-Santiago de Chile P.O. Box Casilla 23 Correo Quilicura - Santiago - Chile	Tel. +56 2 75770-00 Fax +56 2 75770-01 <a href="http://www.sew-eurodrive.cl">http://www.sew-eurodrive.cl</a> <a href="mailto:ventas@sew-eurodrive.cl">ventas@sew-eurodrive.cl</a>



## Address List

China			
<b>Production Assembly Sales Service</b>	<b>Tianjin</b>	SEW-EURODRIVE (Tianjin) Co., Ltd. No. 46, 7th Avenue, TEDA Tianjin 300457	Tel. +86 22 25322612 Fax +86 22 25322611 gm-tianjin@sew-eurodrive.cn http://www.sew-eurodrive.com.cn
<b>Assembly Sales Service</b>	<b>Suzhou</b>	SEW-EURODRIVE (Suzhou) Co., Ltd. 333, Suhong Middle Road Suzhou Industrial Park Jiangsu Province, 215021 P. R. China	Tel. +86 512 62581781 Fax +86 512 62581783 suzhou@sew.com.cn
Additional addresses for service in China provided on request!			
Colombia			
<b>Assembly Sales Service</b>	<b>Bogotá</b>	SEW-EURODRIVE COLOMBIA LTDA. Calle 22 No. 132-60 Bodega 6, Manzana B Santafé de Bogotá	Tel. +57 1 54750-50 Fax +57 1 54750-44 http://www.sew-eurodrive.com.co sewcol@sew-eurodrive.com.co
Croatia			
<b>Sales Service</b>	<b>Zagreb</b>	KOMPEKS d. o. o. PIT Erdödy 4 II HR 10 000 Zagreb	Tel. +385 1 4613-158 Fax +385 1 4613-158 kompeks@net.hr
Czech Republic			
<b>Sales</b>	<b>Praha</b>	SEW-EURODRIVE CZ S.R.O. Business Centrum Praha Lužná 591 CZ-16000 Praha 6 - Vokovice	Tel. +420 220121234 Fax +420 220121237 http://www.sew-eurodrive.cz sew@sew-eurodrive.cz
Denmark			
<b>Assembly Sales Service</b>	<b>Kopenhagen</b>	SEW-EURODRIVEA/S Geminivej 28-30 DK-2670 Greve	Tel. +45 43 9585-00 Fax +45 43 9585-09 http://www.sew-eurodrive.dk sew@sew-eurodrive.dk
Estonia			
<b>Sales</b>	<b>Tallin</b>	ALAS-KUUL AS Reti tee 4 EE-75301 Peetri küla, Rae vald, Harjumaa	Tel. +372 6593230 Fax +372 6593231 veiko.soots@alas-kuul.ee
Finland			
<b>Assembly Sales Service</b>	<b>Lahti</b>	SEW-EURODRIVE OY Vesimäentie 4 FIN-15860 Hollola 2	Tel. +358 201 589-300 Fax +358 3 780-6211 sew@sew.fi http://www.sew-eurodrive.fi
Gabon			
<b>Sales</b>	<b>Libreville</b>	Electro-Services B.P. 1889 Libreville	Tel. +241 7340-11 Fax +241 7340-12
Great Britain			
<b>Assembly Sales Service</b>	<b>Normanton</b>	SEW-EURODRIVE Ltd. Beckbridge Industrial Estate P.O. Box No.1 GB-Normanton, West- Yorkshire WF6 1QR	Tel. +44 1924 893-855 Fax +44 1924 893-702 http://www.sew-eurodrive.co.uk info@sew-eurodrive.co.uk
Greece			
<b>Sales Service</b>	<b>Athen</b>	Christ. Boznos & Son S.A. 12, Mavromichali Street P.O. Box 80136, GR-18545 Piraeus	Tel. +30 2 1042 251-34 Fax +30 2 1042 251-59 http://www.boznos.gr info@boznos.gr



Hong Kong			
<b>Assembly Sales Service</b>	<b>Hong Kong</b>	SEW-EURODRIVE LTD. Unit No. 801-806, 8th Floor Hong Leong Industrial Complex No. 4, Wang Kwong Road Kowloon, Hong Kong	Tel. +852 2 7960477 + 79604654 Fax +852 2 7959129 sew@sewhk.com
Hungary			
<b>Sales Service</b>	<b>Budapest</b>	SEW-EURODRIVE Kft. H-1037 Budapest Kunigunda u. 18	Tel. +36 1 437 06-58 Fax +36 1 437 06-50 office@sew-eurodrive.hu
India			
<b>Assembly Sales Service</b>	<b>Baroda</b>	SEW-EURODRIVE India Pvt. Ltd. Plot No. 4, Gidc Por Ramangamdi • Baroda - 391 243 Gujarat	Tel. +91 265 2831086 Fax +91 265 2831087 <a href="http://www.seweurodriveindia.com">http://www.seweurodriveindia.com</a> mdoffice@seweurodriveindia.com
<b>Technical Offices</b>	<b>Bangalore</b>	SEW-EURODRIVE India Private Limited 308, Prestige Centre Point 7, Edward Road Bangalore	Tel. +91 80 22266565 Fax +91 80 22266569 salesbang@seweurodriveinindia.com
Ireland			
<b>Sales Service</b>	<b>Dublin</b>	Alperon Engineering Ltd. 48 Moyle Road Dublin Industrial Estate Glasnevin, Dublin 11	Tel. +353 1 830-6277 Fax +353 1 830-6458 info@alperon.ie
Israel			
<b>Sales</b>	<b>Tel-Aviv</b>	Liraz Handasa Ltd. Ahofer Str 34B / 228 58858 Holon	Tel. +972 3 5599511 Fax +972 3 5599512 office@liraz-handasa.co.il
Italy			
<b>Assembly Sales Service</b>	<b>Milano</b>	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Via Bernini,14 I-20020 Solaro (Milano)	Tel. +39 02 96 9801 Fax +39 02 96 799781 <a href="http://www.sew-eurodrive.it">http://www.sew-eurodrive.it</a> sewit@sew-eurodrive.it
Ivory Coast			
<b>Sales</b>	<b>Abidjan</b>	SICA Ste industrielle et commerciale pour l'Afrique 165, Bld de Marseille B.P. 2323, Abidjan 08	Tel. +225 2579-44 Fax +225 2584-36
Japan			
<b>Assembly Sales Service</b>	<b>Toyoda-cho</b>	SEW-EURODRIVE JAPAN CO., LTD 250-1, Shimoman-no, Iwata Shizuoka 438-0818	Tel. +81 538 373811 Fax +81 538 373814 <a href="http://www.sew-eurodrive.co.jp">http://www.sew-eurodrive.co.jp</a> sewjapan@sew-eurodrive.co.jp
Korea			
<b>Assembly Sales Service</b>	<b>Ansan-City</b>	SEW-EURODRIVE KOREA CO., LTD. B 601-4, Banweol Industrial Estate Unit 1048-4, Shingil-Dong Ansan 425-120	Tel. +82 31 492-8051 Fax +82 31 492-8056 <a href="http://www.sew-korea.co.kr">http://www.sew-korea.co.kr</a> master@sew-korea.co.kr
Latvia			
<b>Sales</b>	<b>Riga</b>	SIA Alas-Kuul Katlakalna 11C LV-1073 Riga	Tel. +371 7139253 Fax +371 7139386 <a href="http://www.alas-kuul.com">http://www.alas-kuul.com</a> info@alas-kuul.com



## Address List

Lebanon			
<b>Sales</b>	<b>Beirut</b>	Gabriel Acar & Fils sarl B. P. 80484 Bourj Hammoud, Beirut	Tel. +961 1 4947-86 +961 1 4982-72 +961 3 2745-39 Fax +961 1 4949-71 gacar@beirut.com
Lithuania			
<b>Sales</b>	<b>Alytus</b>	UAB Irseva Naujoji 19 LT-62175 Alytus	Tel. +370 315 79204 Fax +370 315 56175 info@irseva.lt http://www.sew-eurodrive.lt
Luxembourg			
<b>Assembly Sales Service</b>	<b>Brüssel</b>	CARON-VECTOR S.A. Avenue Eiffel 5 B-1300 Wavre	Tel. +32 10 231-311 Fax +32 10 231-336 http://www.sew-eurodrive.lu info@caron-vector.be
Malaysia			
<b>Assembly Sales Service</b>	<b>Johore</b>	SEW-EURODRIVE SDN BHD No. 95, Jalan Seroja 39, Taman Johor Jaya 81000 Johor Bahru, Johor West Malaysia	Tel. +60 7 3549409 Fax +60 7 3541404 sales@sew-eurodrive.com.my
Mexico			
<b>Assembly Sales Service</b>	<b>Queretaro</b>	SEW-EURODRIVE MEXIKO SA DE CV SEM-981118-M93 Tequisquiapan No. 102 Parque Industrial Queretaro C.P. 76220 Queretaro, Mexico	Tel. +52 442 1030-300 Fax +52 442 1030-301 http://www.sew-eurodrive.com.mx scmexico@seweurodrive.com.mx
Morocco			
<b>Sales</b>	<b>Casablanca</b>	Afit 5, rue Emir Abdelkader MA 20300 Casablanca	Tel. +212 22618372 Fax +212 22618351 richard.miekisiak@premium.net.ma
Netherlands			
<b>Assembly Sales Service</b>	<b>Rotterdam</b>	VECTOR Aandrijftechniek B.V. Industrieweg 175 NL-3044 AS Rotterdam Postbus 10085 NL-3004 AB Rotterdam	Tel. +31 10 4463-700 Fax +31 10 4155-552 http://www.vector.nu info@vector.nu
New Zealand			
<b>Assembly Sales Service</b>	<b>Auckland</b>	SEW-EURODRIVE NEW ZEALAND LTD. P.O. Box 58-428 82 Greenmount drive East Tamaki Auckland	Tel. +64 9 2745627 Fax +64 9 2740165 http://www.sew-eurodrive.co.nz sales@sew-eurodrive.co.nz
	<b>Christchurch</b>	SEW-EURODRIVE NEW ZEALAND LTD. 10 Settlers Crescent, Ferrymead Christchurch	Tel. +64 3 384-6251 Fax +64 3 384-6455 sales@sew-eurodrive.co.nz
Norway			
<b>Assembly Sales Service</b>	<b>Moss</b>	SEW-EURODRIVE A/S Solgaard skog 71 N-1599 Moss	Tel. +47 69 241-020 Fax +47 69 241-040 http://www.sew-eurodrive.no sew@sew-eurodrive.no
Peru			
<b>Assembly Sales Service</b>	<b>Lima</b>	SEW DEL PERU MOTORES REDUCTORES S.A.C. Los Calderos, 120-124 Urbanizacion Industrial Vulcano, ATE, Lima	Tel. +51 1 3495280 Fax +51 1 3493002 http://www.sew-eurodrive.com.pe sewperu@sew-eurodrive.com.pe



Poland			
<b>Assembly Sales Service</b>	<b>Lodz</b>	SEW-EURODRIVE Polska Sp.z.o.o. ul. Techniczna 5 PL-92-518 Łódź	Tel. +48 42 67710-90 Fax +48 42 67710-99 <a href="http://www.sew-eurodrive.pl">http://www.sew-eurodrive.pl</a> <a href="mailto:sew@sew-eurodrive.pl">sew@sew-eurodrive.pl</a>
Portugal			
<b>Assembly Sales Service</b>	<b>Coimbra</b>	SEW-EURODRIVE, LDA. Apartado 15 P-3050-901 Mealhada	Tel. +351 231 20 9670 Fax +351 231 20 3685 <a href="http://www.sew-eurodrive.pt">http://www.sew-eurodrive.pt</a> <a href="mailto:infosew@sew-eurodrive.pt">infosew@sew-eurodrive.pt</a>
Romania			
<b>Sales Service</b>	<b>Bucuresti</b>	Sialco Trading SRL str. Madrid nr.4 011785 Bucuresti	Tel. +40 21 230-1328 Fax +40 21 230-7170 <a href="mailto:sialco@sialco.ro">sialco@sialco.ro</a>
Russia			
<b>Assembly Sales Service</b>	<b>St. Petersburg</b>	ZAO SEW-EURODRIVE P.O. Box 36 195220 St. Petersburg Russia	Tel. +7 812 3332522 +7 812 5357142 Fax +7 812 3332523 <a href="http://www.sew-eurodrive.ru">http://www.sew-eurodrive.ru</a> <a href="mailto:sew@sew-eurodrive.ru">sew@sew-eurodrive.ru</a>
Senegal			
<b>Sales</b>	<b>Dakar</b>	SENEMECA Mécanique Générale Km 8, Route de Rufisque B.P. 3251, Dakar	Tel. +221 849 47-70 Fax +221 849 47-71 <a href="mailto:senemeca@sentoo.sn">senemeca@sentoo.sn</a>
Serbia and Montenegro			
<b>Sales</b>	<b>Beograd</b>	DIPAR d.o.o. Ustanicka 128a PC Košum, IV floor SCG-11000 Beograd	Tel. +381 11 347 3244 / +381 11 288 0393 Fax +381 11 347 1337 <a href="mailto:dipar@yubc.net">dipar@yubc.net</a>
Singapore			
<b>Assembly Sales Service</b>	<b>Singapore</b>	SEW-EURODRIVE PTE. LTD. No 9, Tuas Drive 2 Jurong Industrial Estate Singapore 638644	Tel. +65 68621701 Fax +65 68612827 <a href="http://www.sew-eurodrive.com.sg">http://www.sew-eurodrive.com.sg</a> <a href="mailto:sewsingapore@sew-eurodrive.com">sewsingapore@sew-eurodrive.com</a>
Slovakia			
<b>Sales</b>	<b>Bratislava</b>	SEW-Eurodrive SK s.r.o. Rybnicna 40 SK-83107 Bratislava	Tel. +421 2 49595201 Fax +421 2 49595200 <a href="http://www.sew.sk">http://www.sew.sk</a> <a href="mailto:sew@sew-eurodrive.sk">sew@sew-eurodrive.sk</a>
	<b>Zilina</b>	SEW-Eurodrive SK s.r.o. ul. Vojtecha Spanyola 33 SK-010 01 Zilina	Tel. +421 41 700 2513 Fax +421 41 700 2514 <a href="mailto:sew@sew-eurodrive.sk">sew@sew-eurodrive.sk</a>
	<b>Banská Bystrica</b>	SEW-Eurodrive SK s.r.o. Rudlovska cesta 85 SK-97411 Banská Bystrica	Tel. +421 48 414 6564 Fax +421 48 414 6566 <a href="mailto:sew@sew-eurodrive.sk">sew@sew-eurodrive.sk</a>
Slovenia			
<b>Sales Service</b>	<b>Celje</b>	Pakman - Pogonska Tehnika d.o.o. Ul. XIV. divizije 14 SLO - 3000 Celje	Tel. +386 3 490 83-20 Fax +386 3 490 83-21 <a href="mailto:pakman@siol.net">pakman@siol.net</a>
South Africa			
<b>Assembly Sales Service</b>	<b>Johannesburg</b>	SEW-EURODRIVE (PROPRIETARY) LIMITED Eurodrive House Cnr. Adcock Ingram and Aerodrome Roads Aeroton Ext. 2 Johannesburg 2013 P.O.Box 90004 Bertsham 2013	Tel. +27 11 248-7000 Fax +27 11 494-3104 <a href="http://www.sew.co.za">http://www.sew.co.za</a> <a href="mailto:dross@sew.co.za">dross@sew.co.za</a>



## Address List


South Africa			
	<b>Capetown</b>	SEW-EURODRIVE (PROPRIETARY) LIMITED Rainbow Park Cnr. Racecourse & Omuramba Road Montague Gardens Cape Town P.O.Box 36556 Chempet 7442 Cape Town	Tel. +27 21 552-9820 Fax +27 21 552-9830 Telex 576 062 dswanepoel@sew.co.za
	<b>Durban</b>	SEW-EURODRIVE (PROPRIETARY) LIMITED 2 Monaceo Place Pinetown Durban P.O. Box 10433, Ashwood 3605	Tel. +27 31 700-3451 Fax +27 31 700-3847 dtait@sew.co.za
Spain			
<b>Assembly Sales Service</b>	<b>Bilbao</b>	SEW-EURODRIVE ESPAÑA, S.L. Parque Tecnológico, Edificio, 302 E-48170 Zamudio (Vizcaya)	Tel. +34 94 43184-70 Fax +34 94 43184-71 <a href="http://www.sew-eurodrive.es">http://www.sew-eurodrive.es</a> sew.spain@sew-eurodrive.es
Sweden			
<b>Assembly Sales Service</b>	<b>Jönköping</b>	SEW-EURODRIVE AB Gnejsvägen 6-8 S-55303 Jönköping Box 3100 S-55003 Jönköping	Tel. +46 36 3442-00 Fax +46 36 3442-80 <a href="http://www.sew-eurodrive.se">http://www.sew-eurodrive.se</a> info@sew-eurodrive.se
Switzerland			
<b>Assembly Sales Service</b>	<b>Basel</b>	Alfred Imhof A.G. Jurastrasse 10 CH-4142 Münchenstein bei Basel	Tel. +41 61 417 1717 Fax +41 61 417 1700 <a href="http://www.imhof-sew.ch">http://www.imhof-sew.ch</a> info@imhof-sew.ch
Thailand			
<b>Assembly Sales Service</b>	<b>Chonburi</b>	SEW-EURODRIVE (Thailand) Ltd. 700/456, Moo.7, Donhuaroh Muang Chonburi 20000	Tel. +66 38 454281 Fax +66 38 454288 sewthailand@sew-eurodrive.com
Tunisia			
<b>Sales</b>	<b>Tunis</b>	T. M.S. Technic Marketing Service 5, Rue El Houdaibiah 1000 Tunis	Tel. +216 71 4340-64 + 71 4320-29 Fax +216 71 4329-76 tms@tms.com.tn
Turkey			
<b>Assembly Sales Service</b>	<b>Istanbul</b>	SEW-EURODRIVE Hareket Sistemleri San. ve Tic. Ltd. Sti. Bagdat Cad. Koruma Cikmazi No. 3 TR-34846 Maltepe ISTANBUL	Tel. +90 216 4419163 / 164 3838014/15 Fax +90 216 3055867 <a href="http://www.sew-eurodrive.com.tr">http://www.sew-eurodrive.com.tr</a> sew@sew-eurodrive.com.tr
Ukraine			
<b>Sales Service</b>	<b>Dnepropetrovsk</b>	SEW-EURODRIVE Str. Rabochaja 23-B, Office 409 49008 Dnepropetrovsk	Tel. +380 56 370 3211 Fax +380 56 372 2078 <a href="http://www.sew-eurodrive.ua">http://www.sew-eurodrive.ua</a> sew@sew-eurodrive.ua
<b>Sales</b>	<b>Kiev</b>	SEW-EURODRIVE GmbH S. Oleynika str. 21 02068 Kiev	Tel. +380 44 503 95 77 Fax +380 44 503 95 78 kso@sew-eurodrive.ua
USA			
<b>Production Assembly Sales Service</b>	<b>Greenville</b>	SEW-EURODRIVE INC. 1295 Old Spartanburg Highway P.O. Box 518 Lyman, S.C. 29365	Tel. +1 864 439-7537 Fax Sales +1 864 439-7830 Fax Manuf. +1 864 439-9948 Fax Ass. +1 864 439-0566 Telex 805 550 <a href="http://www.seweurodrive.com">http://www.seweurodrive.com</a> cslyman@seweurodrive.com





<b>USA</b>			
<b>Assembly Sales Service</b>	<b>San Francisco</b>	SEW-EURODRIVE INC. 30599 San Antonio St. Hayward, California 94544-7101	Tel. +1 510 487-3560 Fax +1 510 487-6381 cshayward@seweurodrive.com
	<b>Philadelphia/PA</b>	SEW-EURODRIVE INC. Pureland Ind. Complex 2107 High Hill Road, P.O. Box 481 Bridgeport, New Jersey 08014	Tel. +1 856 467-2277 Fax +1 856 845-3179 csbridgeport@seweurodrive.com
	<b>Dayton</b>	SEW-EURODRIVE INC. 2001 West Main Street Troy, Ohio 45373	Tel. +1 937 335-0036 Fax +1 937 440-3799 cstroy@seweurodrive.com
	<b>Dallas</b>	SEW-EURODRIVE INC. 3950 Platinum Way Dallas, Texas 75237	Tel. +1 214 330-4824 Fax +1 214 330-4724 csdallas@seweurodrive.com
Additional addresses for service in the USA provided on request!			
<b>Venezuela</b>			
<b>Assembly Sales Service</b>	<b>Valencia</b>	SEW-EURODRIVE Venezuela S.A. Av. Norte Sur No. 3, Galpon 84-319 Zona Industrial Municipal Norte Valencia, Estado Carabobo	Tel. +58 241 832-9804 Fax +58 241 838-6275 <a href="http://www.sew-eurodrive.com.ve">http://www.sew-eurodrive.com.ve</a> sewventas@cantv.net sewfinanzas@cantv.net



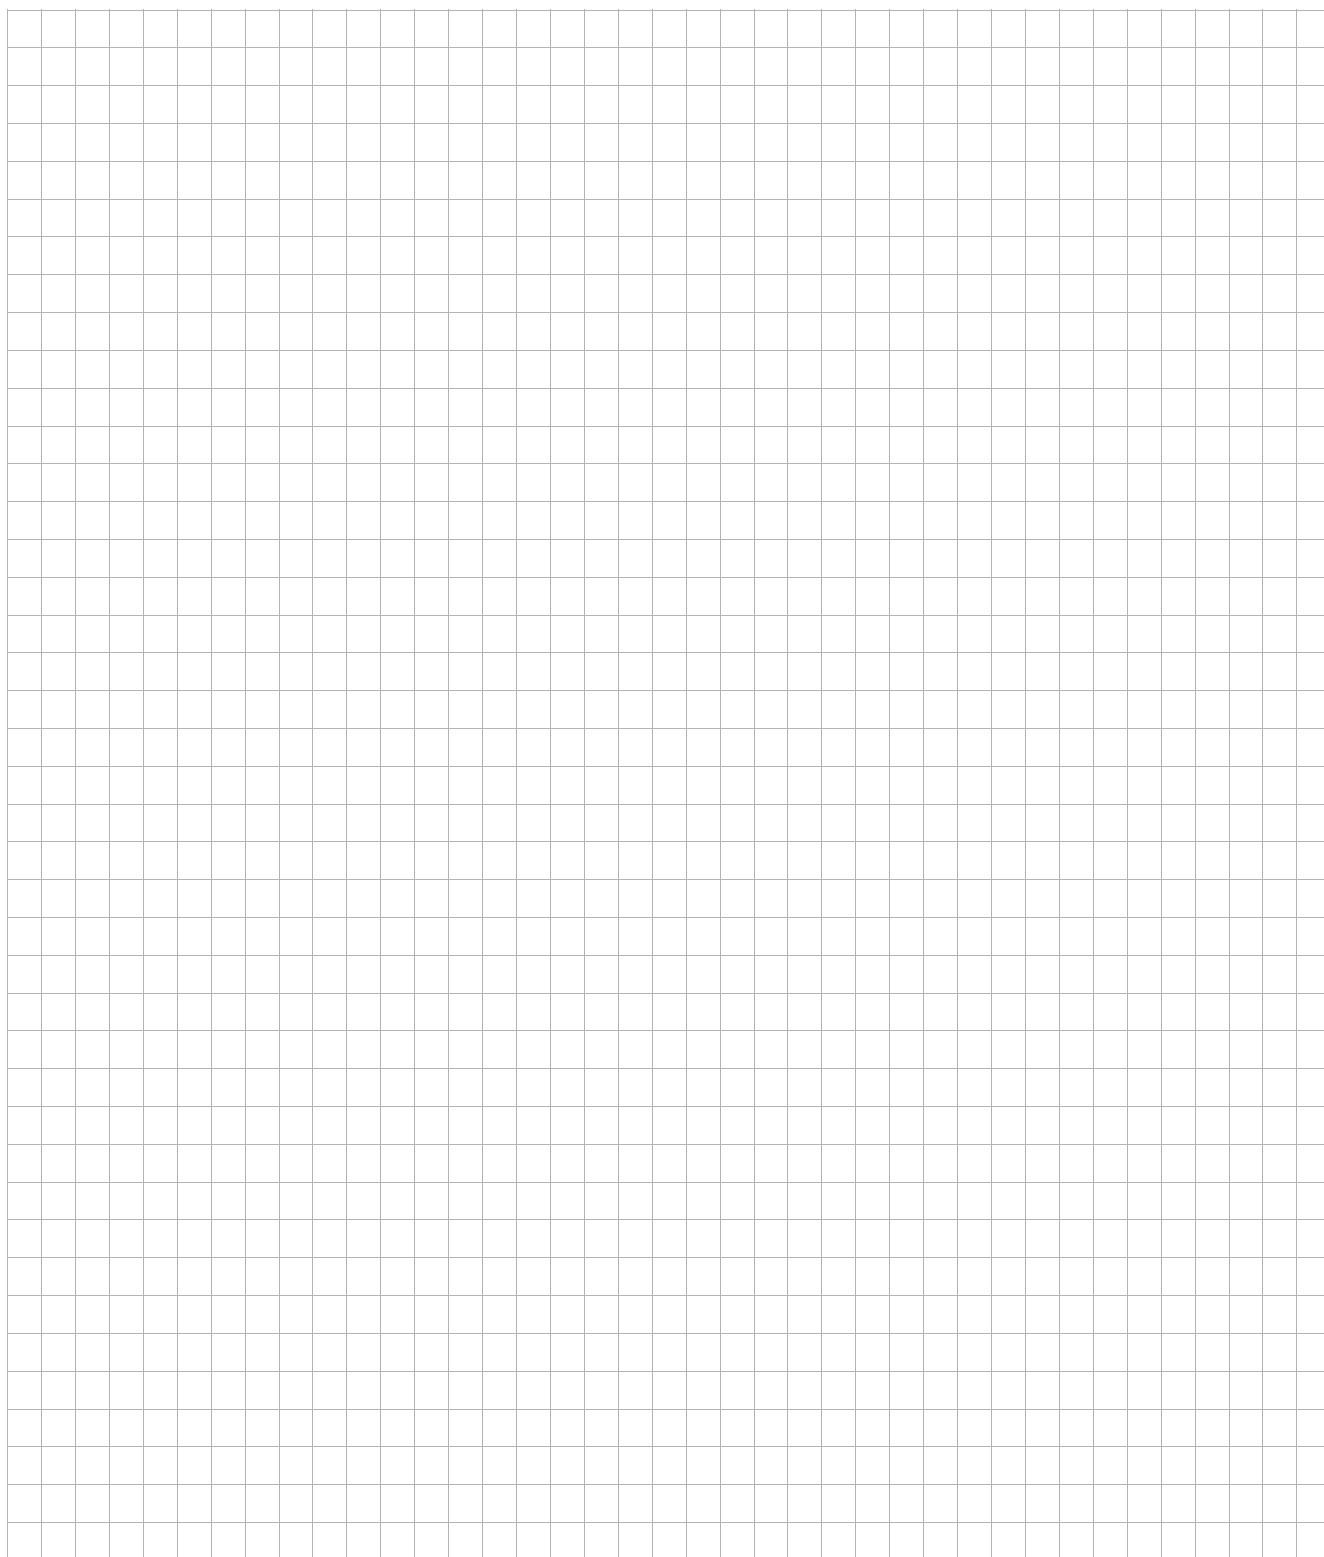

## How we're driving the world

With people who think fast and develop the future with you.




With a worldwide service network that is always close at hand.


With drives and controls that automatically improve your productivity.



With comprehensive knowledge in virtually every branch of industry today.

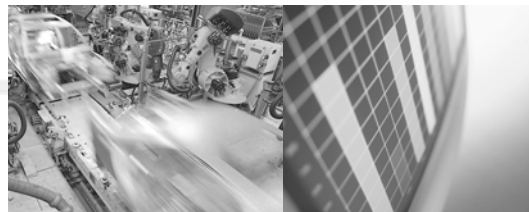

With uncompromising quality that reduces the cost and complexity of daily operations.

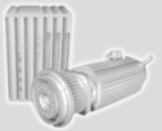


**SEW-EURODRIVE**  
Driving the world

With a global presence that offers responsive and reliable solutions. Anywhere.

With innovative technology that solves tomorrow's problems today.

With online information and software updates, via the Internet, available around the clock.

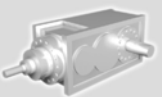

**SEW**  
**EURODRIVE**

SEW-EURODRIVE GmbH & Co KG  
Ernst-Blickle-Str. 42 · 76646 Bruchsal / Germany  
Tel. +49 7251 75-0 · Fax +49 7251 75-1970  
sew@sew-eurodrive.com

→ [www.sew-eurodrive.com](http://www.sew-eurodrive.com)